


Setup Guide

EPSON AcuLaser™ C1100 Series 4049771-02
XXX


Notes contain important information and useful tips on the operation of your printer.

1 Finding a Place


The illustration shows the recommended amount of space. For information and cautions, see the Safety Instructions sheet.

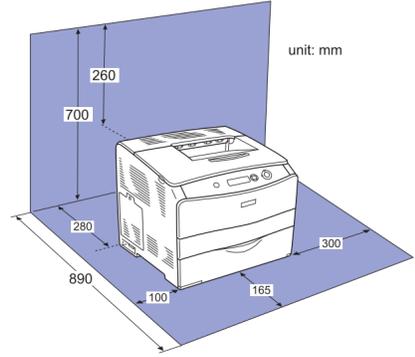

2 Removing the Protective Materials

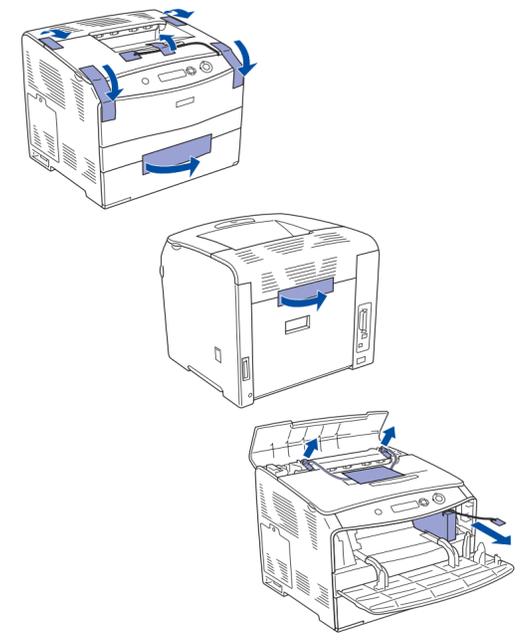

3 Plugging in the Printer

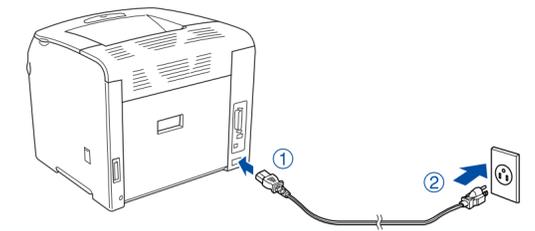


4 Installing Consumables

For specifications and handling precautions, see the *Reference Guide*.


Toner Cartridges and Photoconductor Unit

1. Make sure the printer is turned on, then open cover A.

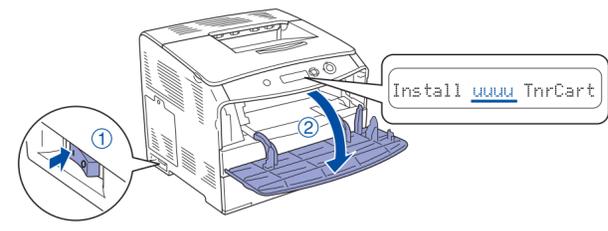


Note:
The letters C, M, Y, or K appear in place of uuuu and indicate the colors Cyan, Magenta, Yellow, and Black respectively.


2. Remove the cover from inside of the printer.

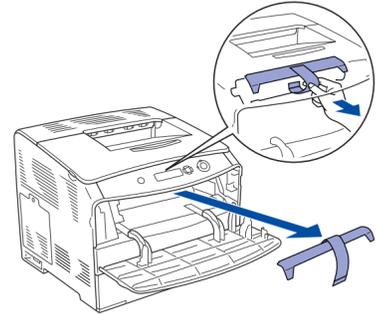


3. Shake the toner cartridge enough.

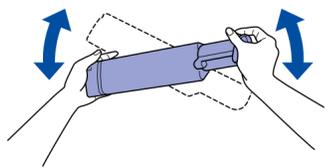


4. Hold the tag and gently pull the toner seal upward.

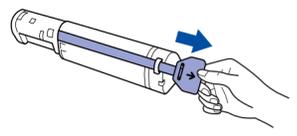


5. Insert the toner cartridge firmly with aligning the arrow mark.

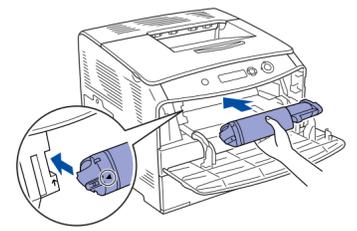

6. Lock the toner cartridge.

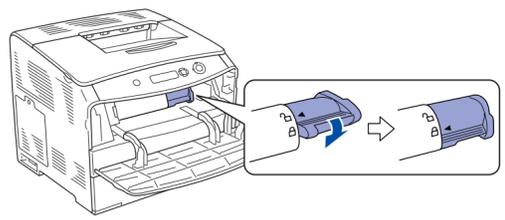


7. Close the cover A.

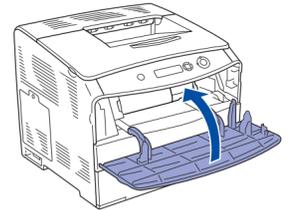


8. Repeat 1 to 7 steps to install other toner cartridges.

9. Make sure the printer is turned on, then open the cover B.

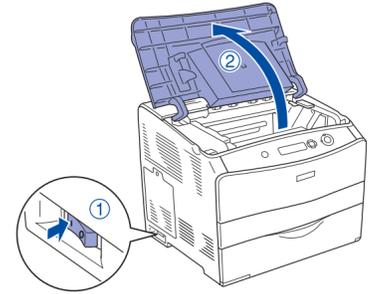


10. Raise the yellow lever up.

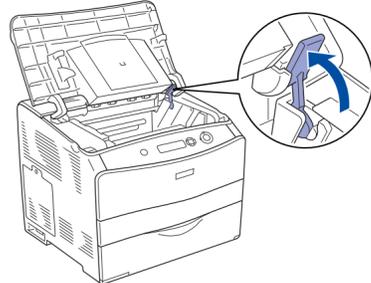


11. Take the photoconductor unit out of its package, then remove the protective sheet.



12. Insert the photoconductor unit firmly with aligning the arrow marks on the printer.

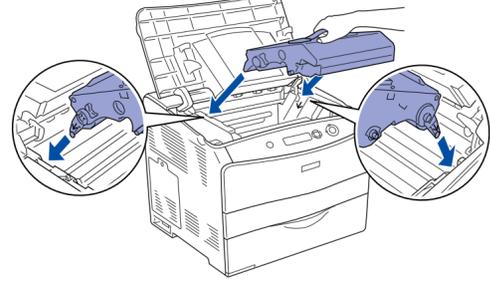


13. Push the yellow lever down, then close the cover B.

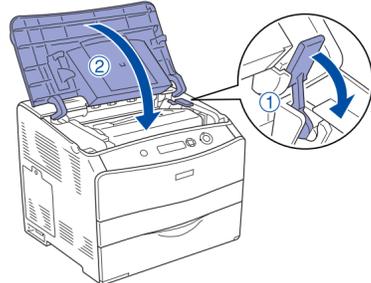


5 Loading Paper

1. Open the MP tray cover, then slide the right paper guide outward.

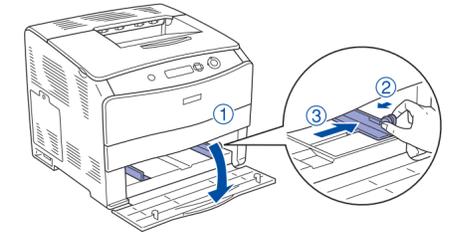


2. Set A4 or Letter size paper into the tray with the printable side facing up, then close the MP tray cover.

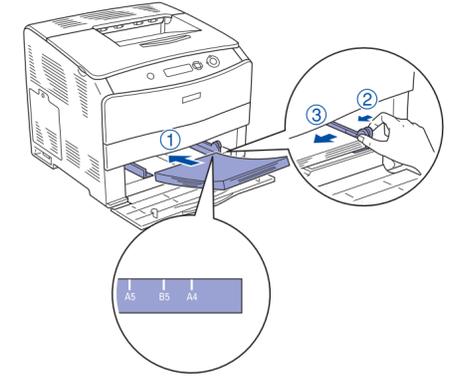


6 Testing the Printer

1. Make sure the printer is turned on.

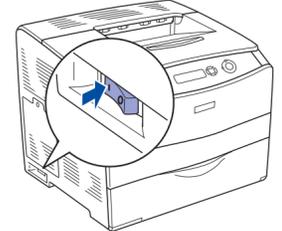

2. Make sure the LCD panel shows Ready. Press the  Enter button three times. The printer starts printing a status sheet.

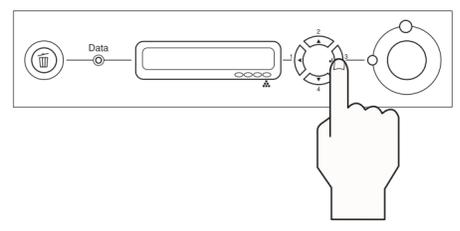


Note:
If you are unable to get the printer to print a normal status sheet or you have a problem with print quality, see "Problem Solver" in the *Reference Guide*.

Turn over ----->



7 Connecting the Printer to a Computer

Make sure that both the printer and the computer are turned off.

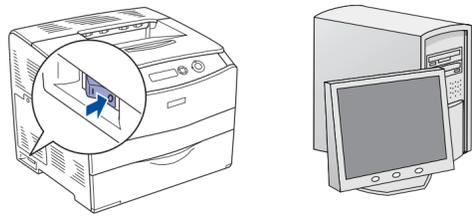

USB or Parallel Interface


Attach the USB or parallel interface cable to the printer. Plug the other end of the cable into the computer's parallel or USB interface connector.

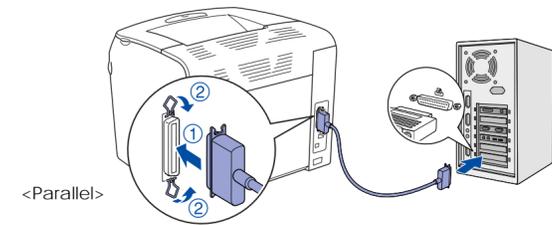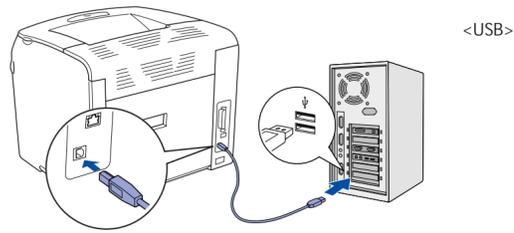

Network Interface

Attach the network interface cable to the printer. Plug the other end of the cable into the network hub.


Note:
This interface is available for the network model.

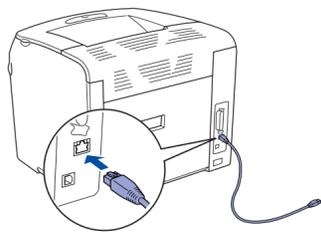


8 Installing the Printer Software

For Windows users

1. Make sure the printer is turned off.

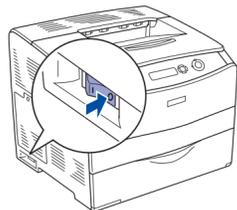


2. Insert the printer software CD-ROM in the CD-ROM drive.

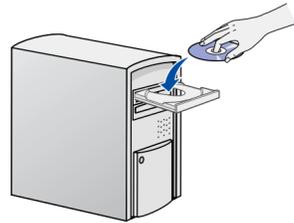

3. Click **Continue**.




4. When the software license agreement screen appears, read the statement and then click **Agree**.
5. In the dialog box that appears, click **Local** or **Network**.

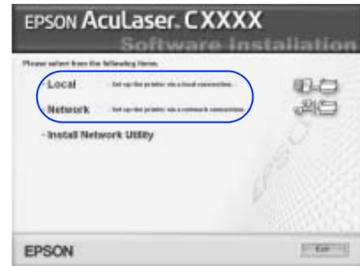


6. Follow the on-screen instructions.

For Macintosh users

1. Make sure the printer is turned off.

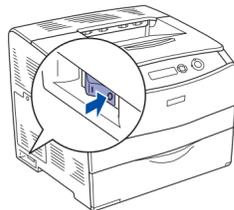

2. Insert the printer software CD-ROM in the CD-ROM drive.

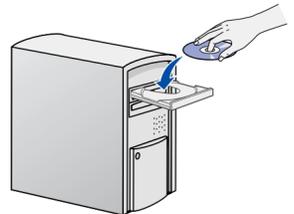

3. For Mac OS 9 users, double-click the **Mac OS 9** icon. For Mac OS X users, double-click the **EPSON** icon, then double-click the **Mac OS X** icon.



4. Click **Continue**.



5. When the software license agreement screen appears, read the statement and then click **Agree**.


6. In the dialog box that appears, click **Install Software**.



7. Click **Install** and follow the on-screen instructions.


For Mac OS 10.1.2 or later

1. After installing the software and restarting the computer, turn the printer on.
2. Open the **Applications** folder and double-click the **Print Center** (Mac OS 10.2.x) or **Printer Setup Utility** (Mac OS 10.3) icon. Click **Add Printer** in the Printer List dialog box.
3. Select **EPSON USB** from the pop-up menu. Select **AL-C1100** in the Product list, then click **Add**.

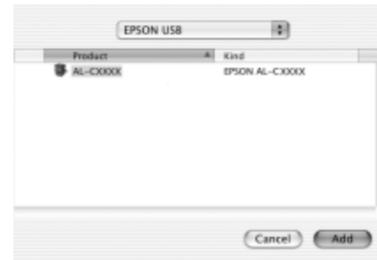

For Mac OS 9.1 or later

1. After installing the software and restarting the computer, turn the printer on.
2. Open **Chooser** from the Apple menu. Select **AL-C1100** and your USB port, then close **Chooser**.

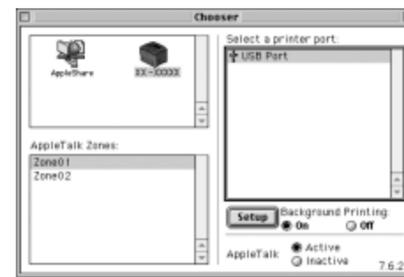

Options

The printer provides you with a variety of options. For specifications, handling precautions, or installing, see the *Reference Guide* or the instructions that come with the packages.

Getting More Information

Online guides

The CD-ROM shipped with your printer includes the following online guides as well as the printer driver.

Safety Instructions Sheet

Provides you with important safety information about this printer. Read this sheet before assembling the printer.

Reference Guide

Provides you with detailed information on the printer's functions, optional products, maintenance, troubleshooting, and technical specifications. A *Reference Guide* icon is created on the desktop when the printer software is installed.

Paper Jam Guide (PDF guide)

Provides you with solutions for paper jam problems that you may need to refer to on a regular basis. We recommend printing this guide and keeping it near the printer.

Online Help for printer software

Click Help for detailed information and instructions on the printer software that controls your printer. Online help is automatically installed when you install the printer software.

Network Guide

Provides network administrators with information on both the printer driver and network settings.

Note:
Refer to this guide if your printer is a network model.

Installing the Network Guide

1. Insert the printer software CD-ROM in the CD-ROM drive.
For Mac OS 9 users, double-click the **Mac OS 9** icon.
For Mac OS X users, double-click the **EPSON** icon, then double-click the **Mac OS X** icon.
2. Click **Continue**.
3. When the software license agreement screen appears, read the statement and then click **Agree**.
4. In the dialog box that appears, click **Install Network Utility**.
5. Select **Network Guide**. Then follow the on-screen instructions.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

EPSON is registered a trademark and EPSON AcuLaser is a trademark of Seiko Epson Corporation.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Apple and Macintosh are registered trademarks of Apple Computer, Inc.

Adobe and PostScript are trademarks of Adobe Systems Incorporated, which may be registered in certain jurisdictions.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.