
Start Here


EPSON PERFECTION 4490 PHOTO

Unpack



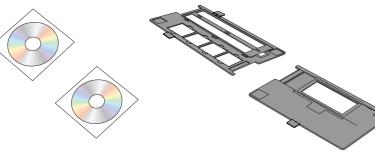



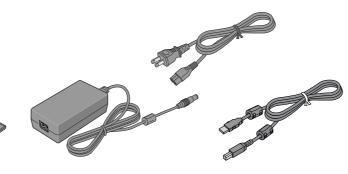

Unlock




Unlock the scanner.



Unlock the transparency unit transportation lock.


Assemble



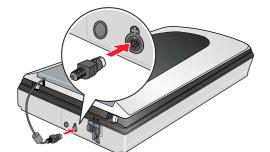

Connect the cover cable.

Note: Do not connect the USB cable yet.

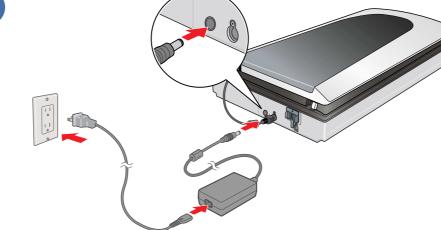

Connect the AC adapter and power cable.


Printed in XXXXXX XX.XX-XX XXX





Insert the scanner software CD.


Macintosh OS X: Double-click the CD-ROM icon on the desktop.

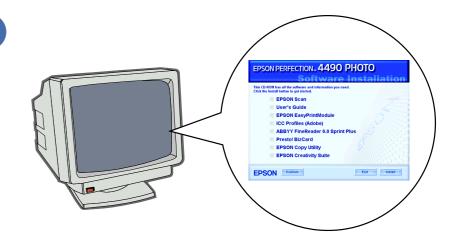

Click **Install** and follow the on-screen instructions. At the end, remove the CD.

Insert the Adobe® Photoshop® Elements 3.0 CD and follow the on-screen instructions. (Supported by Windows® XP and 2000, or Macintosh® OS X 10.2.8 or

Connect and turn on

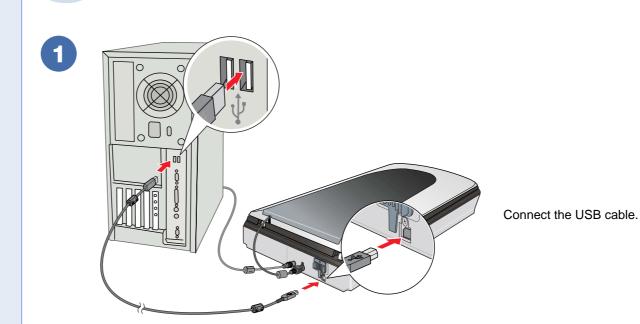



Turn on the scanner using the power switch.

What's next?



See the back of this sheet for instructions on scanning a photo.

View the *User's Guide* for complete instructions on using your scanner. Double-click the PERF4490P User's Guide icon on your desktop.

Scan a Photo








Press the **Start** button.




Click Scan.



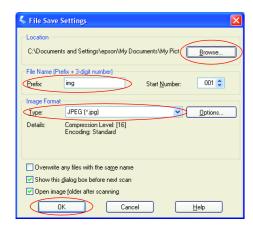

Select your file settings, then click **OK**.



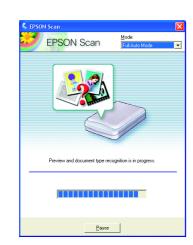

EPSON Scan opens and scans your photo in Full Auto Mode. Wait for your scan to finish or click **Pause** to change settings.






EPSON File Manager opens and displays your scanned photo.

View the on-screen *User's Guide* for instructions on using EPSON File Manager.

Do more

View the on-screen *User's Guide* for instructions on using these features:

Scan film or slides

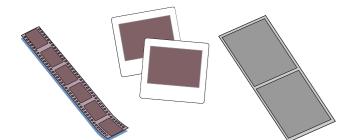











EPSON® is a registered trademark of Seiko Epson Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. Copyright © 2005 Seiko Epson Corporation. All rights reserved.


Restore color




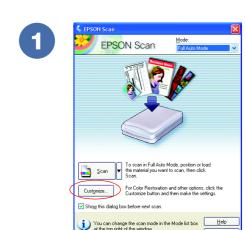


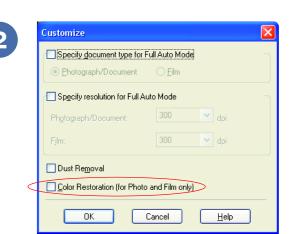


Remove dust from film/slides

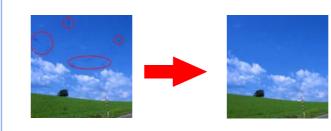

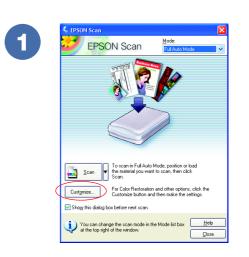

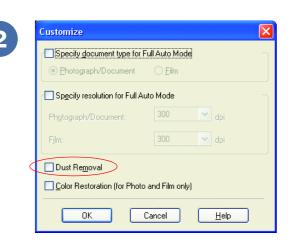

Remove dust or scratch marks using Digital ICE™ or Digital ICE Lite™

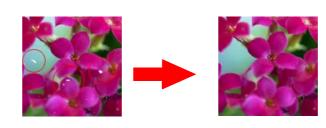

Note: Digital ICE is for color film/slides only. View the on-screen *User's Guide* for instructions.

Help



EPSON File Manager



Click the **Help** button.



Open the **Help** menu and select **EPSON File Manager User's Guide**.