



Start Here

EPSON PERFECTION™ V700 PHOTO


1 Unpack

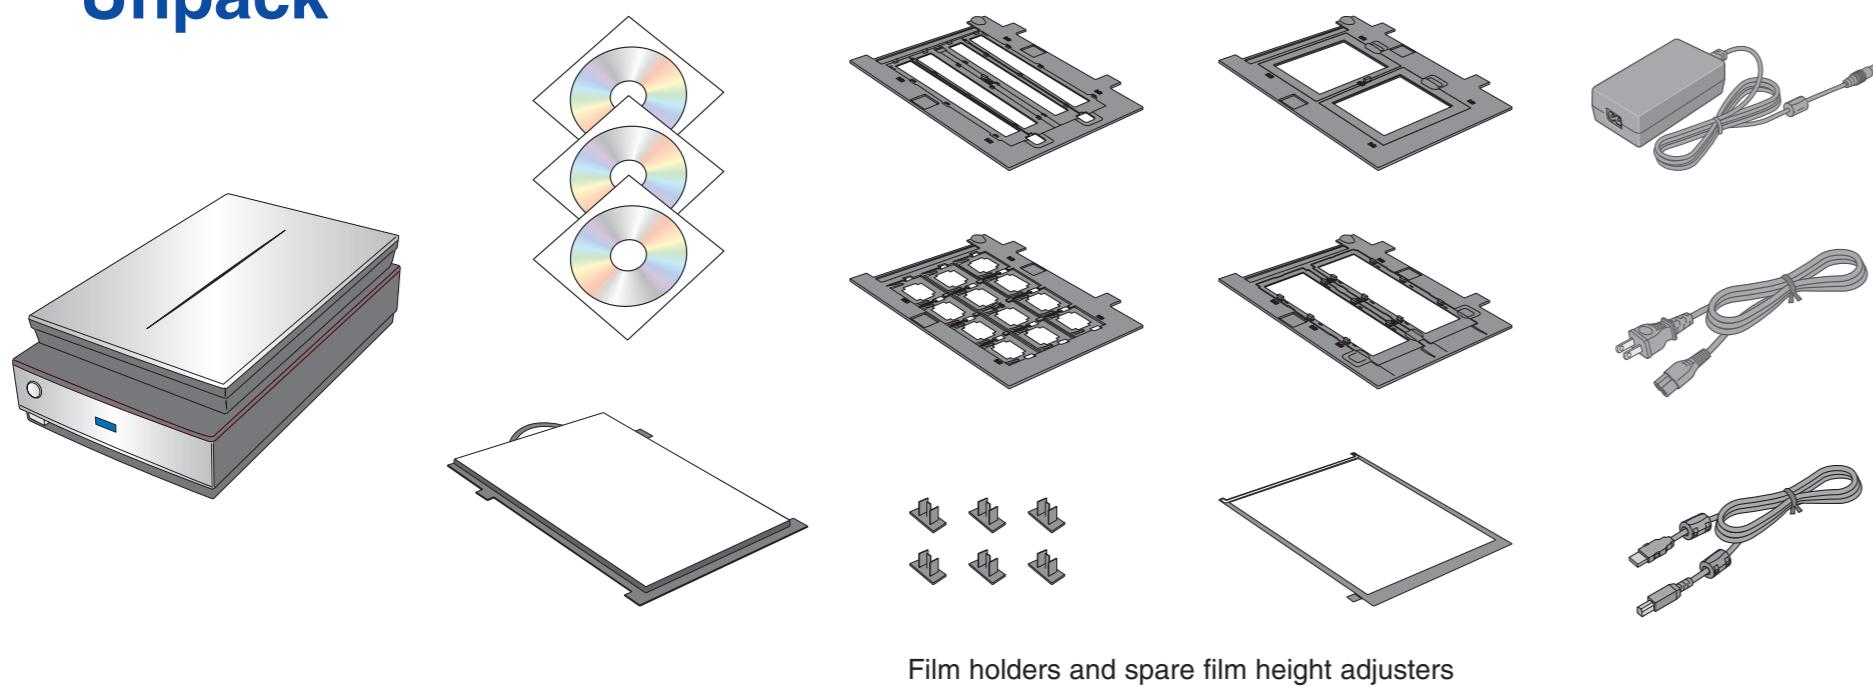

2 Unlock

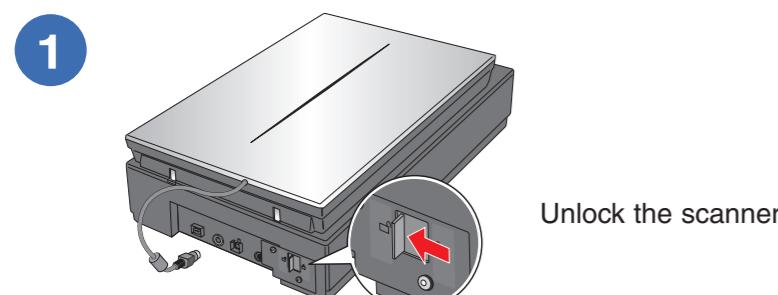


Unlock the scanner.

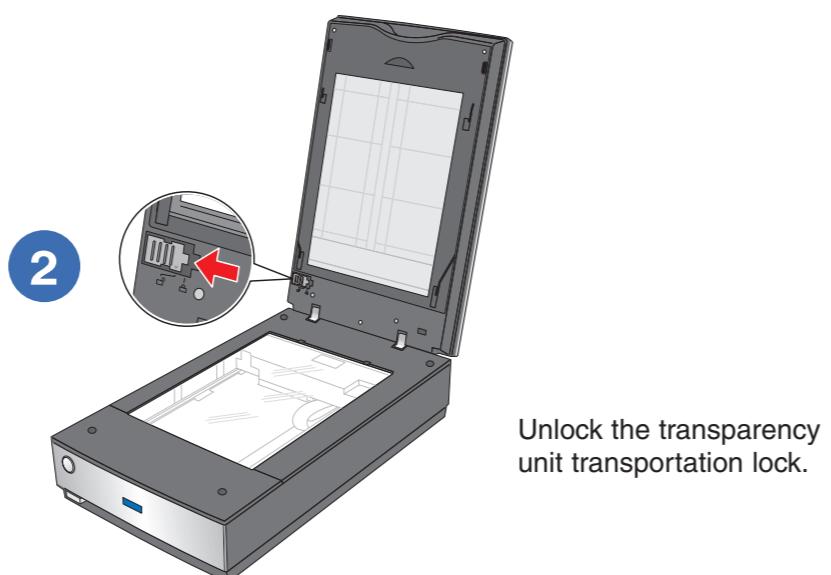


Unlock the transparency unit transportation lock.


3 Assemble

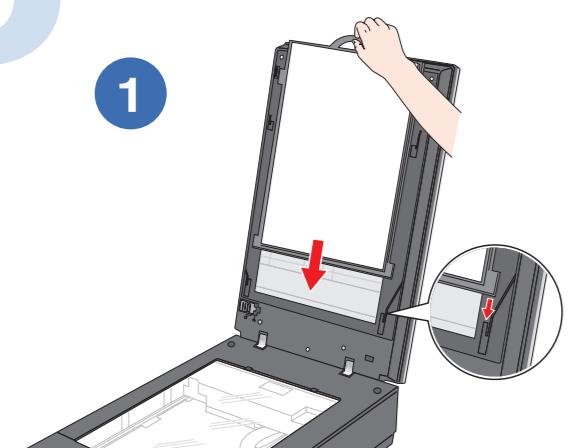

Attach the document mat to the scanner cover.

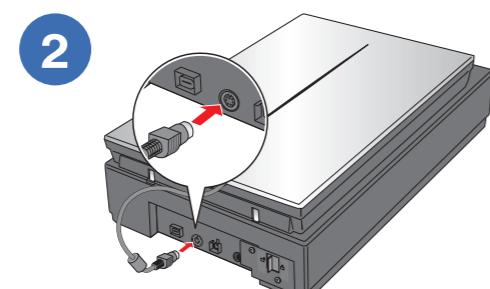

Connect the cover cable.

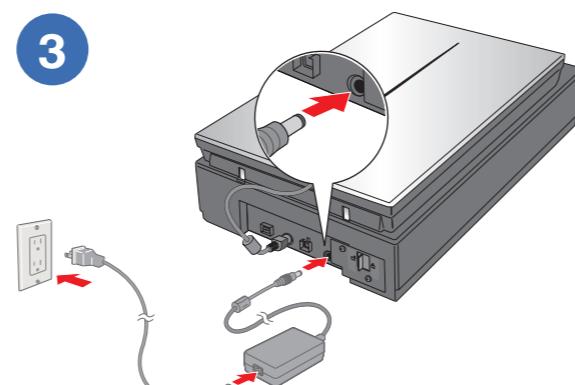

Note: Do not connect the USB cable yet.

4 Install software



Insert the scanner software CD.

Macintosh OS X: Double-click the CD-ROM icon on the desktop.




Click **Easy Install** and follow the on-screen instructions. At the end, remove the CD.


Insert each of the additional software CDs and follow the on-screen instructions.

- Adobe® Photoshop® Elements 3.0 (supported by Windows® XP and 2000, or Macintosh® OS X 10.2.8 or 10.3 only)
- LaserSoft Imaging™ SilverFast®: Professional-grade scanning software for Windows and Macintosh.

5 Connect and turn on

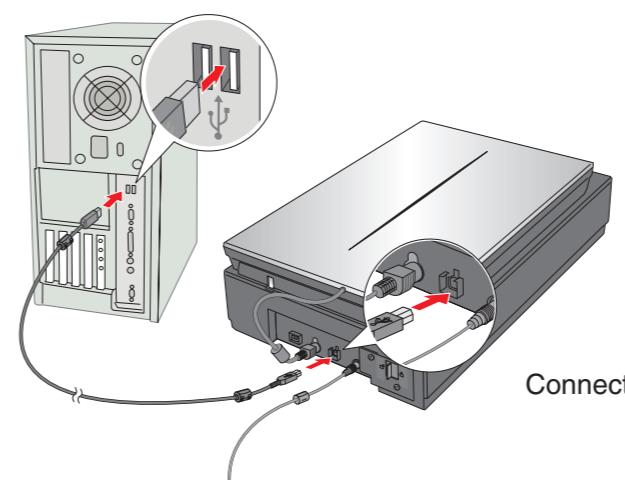


Connect the USB cable.

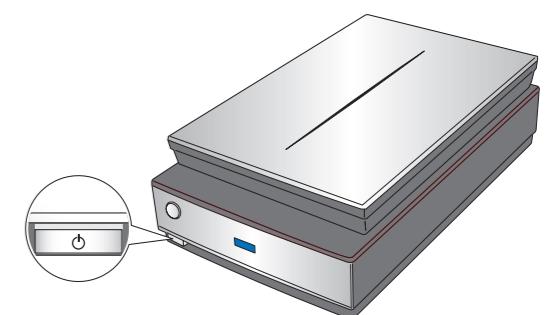

Turn on the scanner using the power button.

What's next?

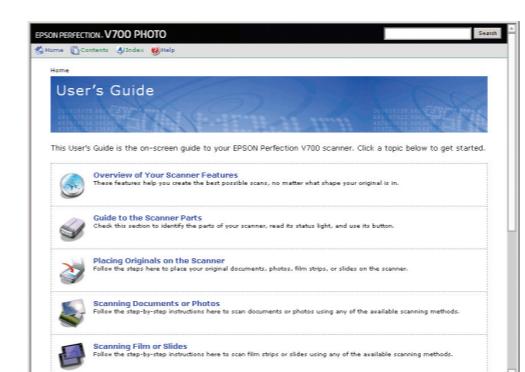

See the back of this sheet for instructions on scanning a photo.

View the *User's Guide* for complete instructions on using your scanner. Double-click the **PerfV700 User's Guide** icon on your desktop.




Printed in XXXXXX XX.XX-XX XXX

410354100


6

Scan a photo

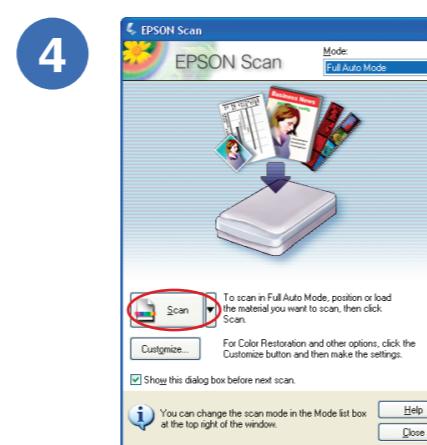


Press the Start button.


Click Scan.

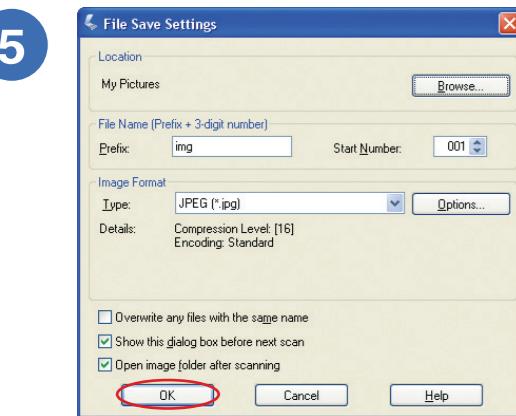

Select your file settings, then click OK.

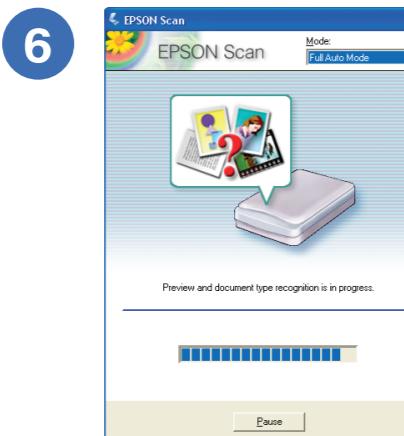

EPSON Scan opens and scans your photo in Full Auto Mode. Wait for your scan to finish or click Pause to change settings.

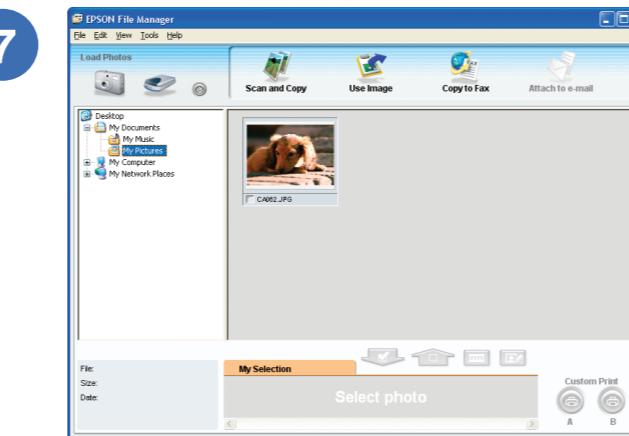


EPSON File Manager opens and displays your scanned photo.
View the on-screen User's Guide for instructions on using EPSON File Manager.

Do more

View the on-screen User's Guide for instructions on using these features:



Scan film or slides

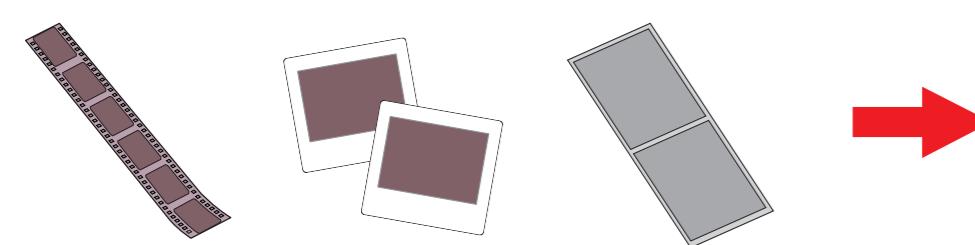




EPSON® is a registered trademark, and EPSON Perfection™ and Exceed Your Vision are trademarks of Seiko Epson Corporation. General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks. © 2005 Seiko Epson Corporation. All rights reserved.

DIGITAL ICE is a trademark of Kodak.


Restore color

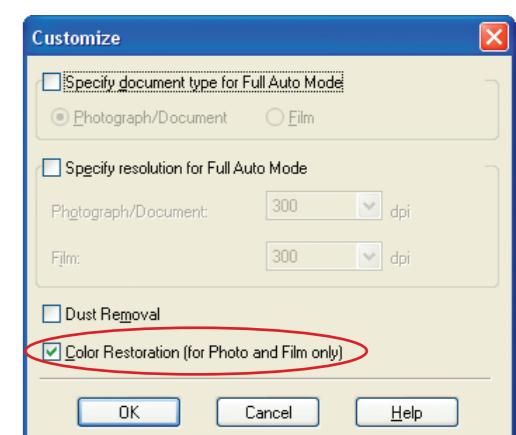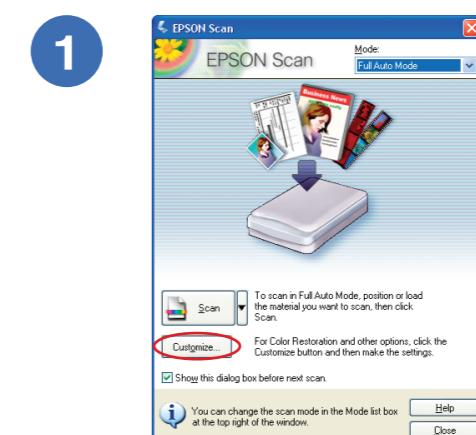

Remove dust from film/slides

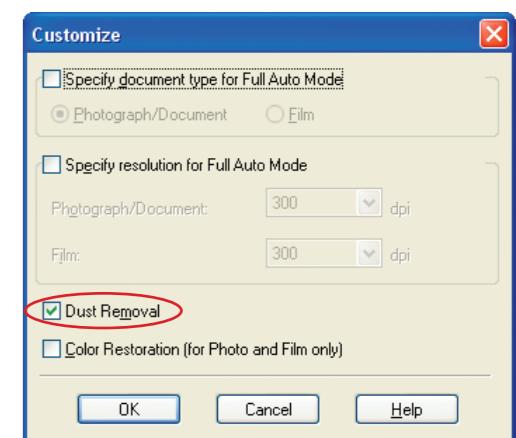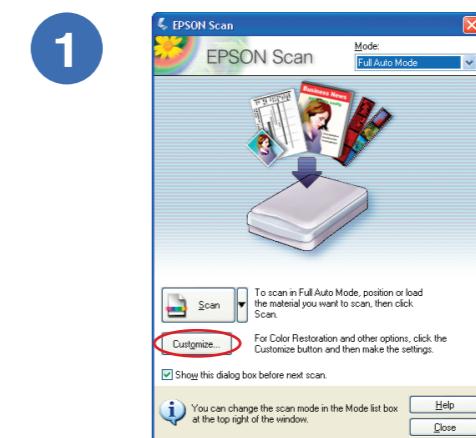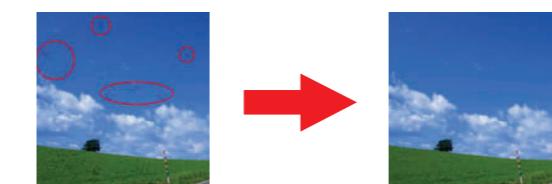



Remove dust or scratch marks using DIGITAL ICE Technology or DIGITAL ICE Lite Technology

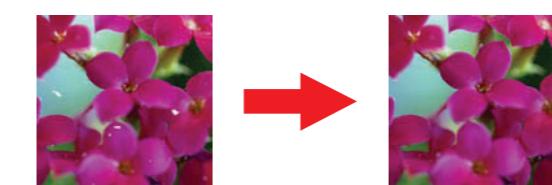

Note: View the on-screen User's Guide for instructions.



Help

EPSON Scan

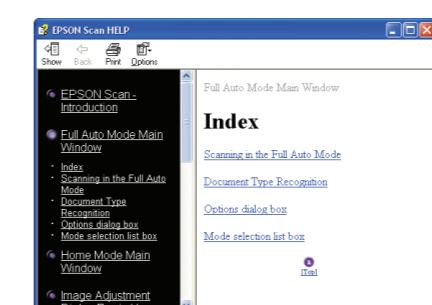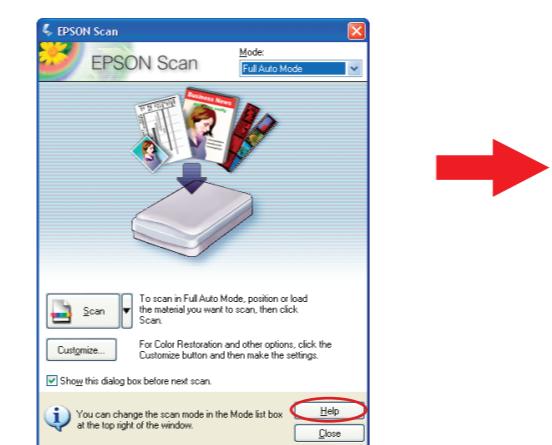

Click the Help button.

EPSON File Manager

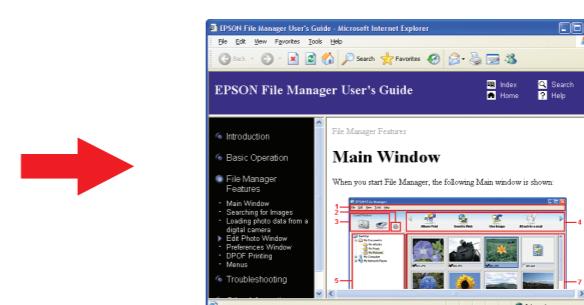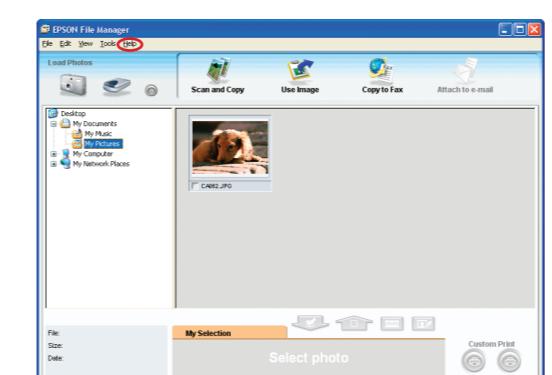

Open the Help menu and select EPSON File Manager User's Guide.