
FX-2175IIN Start Here

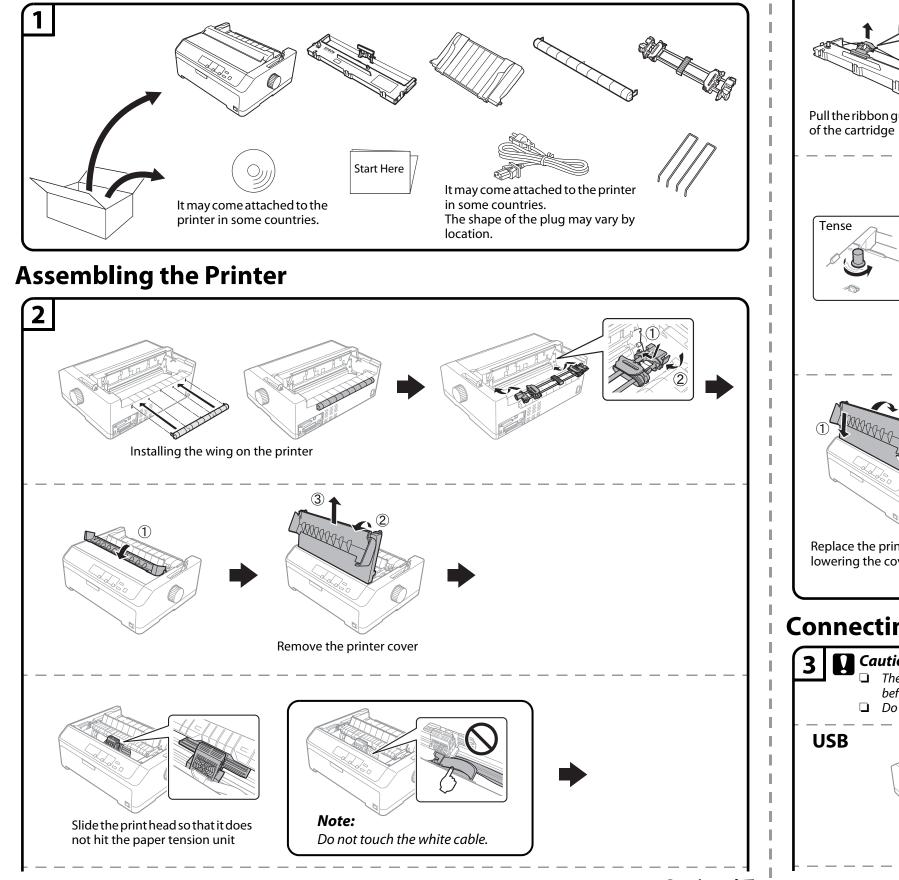






Pull the ribbon guide until it is out Caution: The ribbon should not be twisted or creased. When inserting the ribbon guide, press firmly until it clicks. Replace the printer cover and lowering the cover into place Attach the sheet guide **Connecting the Printer to Your Computer** 3 Caution: □ The interface cable connectors have only one correct orientation. Make sure the orientation of the connector is correct before inserting it into the appropriate port. Do not connect or disconnect the printer while it is turning on.


Connect firmly

Continued 🦊



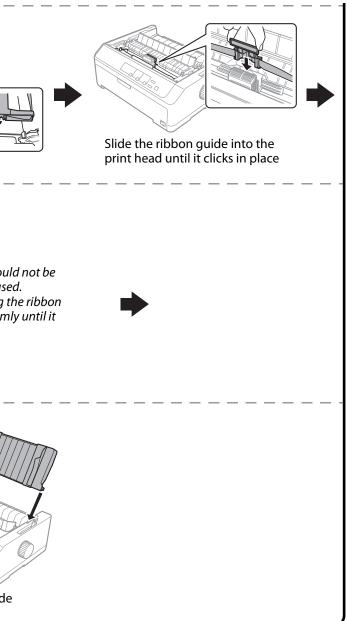

Connect firmly Continued on back

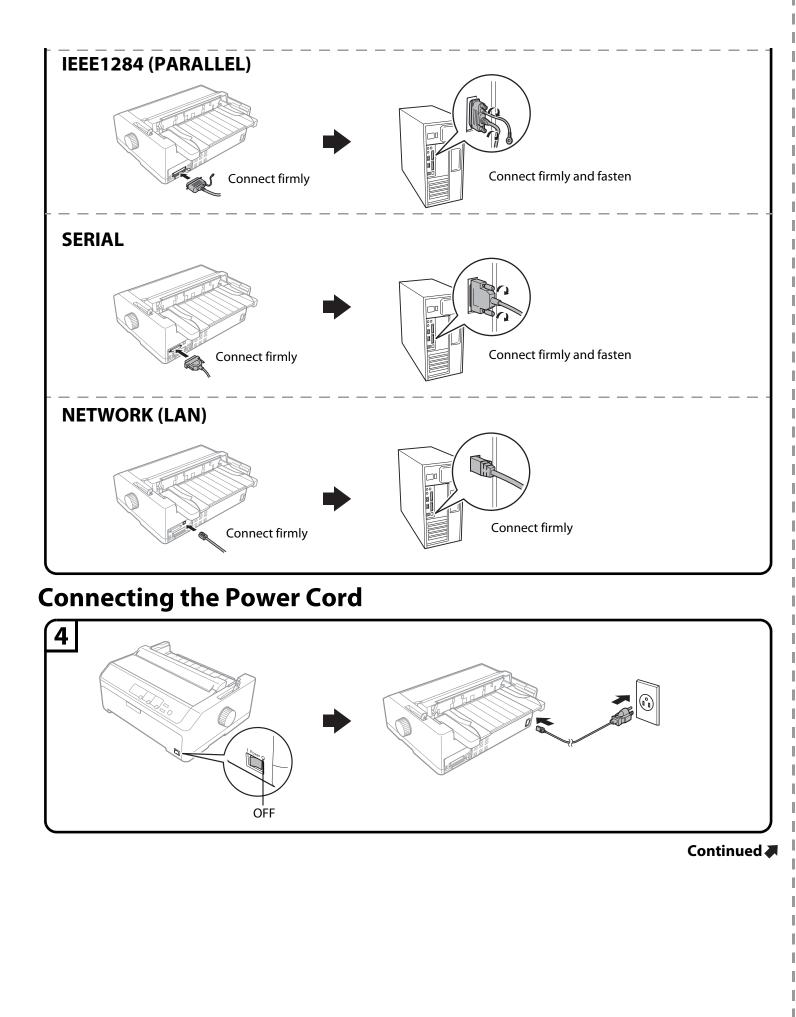

Installing the Printer Software

5 Note: Installing the printer software may require administrator privileges. If you have problems, ask your administrator for more information. From Web site You can download the printer software and the utility software (EPSON Status Minitor3) from the Epson web site. Download the software to any directory on your computer, and start installing it. http://www.epson.com **From CD-ROM** Confirm the O (OFF) Start & Cor Follow the instructions

Getting More Informations

6 Now setup is finished and the printer is ready.

For detailed information about the printer and troubleshooting, refer to the User's Guide. Select Information for Manuals and Applications, then select Manuals to see the User's Guide.

Note:

The User's Guide for the FX-2175IIN is shared with the FX-2175II User's Guide.

If you cannot find the information you require in the User's Guide and Network Guide, visit our Web site:

http://www.epson.com

The contents of this manual are subject to change without notice. Illustrations of the printer used in this manual are examples only. Although there may be slight differences depending on the model, the method of operation is the same.

© 2017 Seiko Epson Corporation Printed in XXXXXX

