



Warnings, Cautions and Notes




**Warnings** must be followed carefully to avoid bodily injury.



**Cautions** must be observed to avoid damage to your equipment.

**Notes** contain important information and useful tips on the operation of your printer.

## 1 Unpacking the Printer

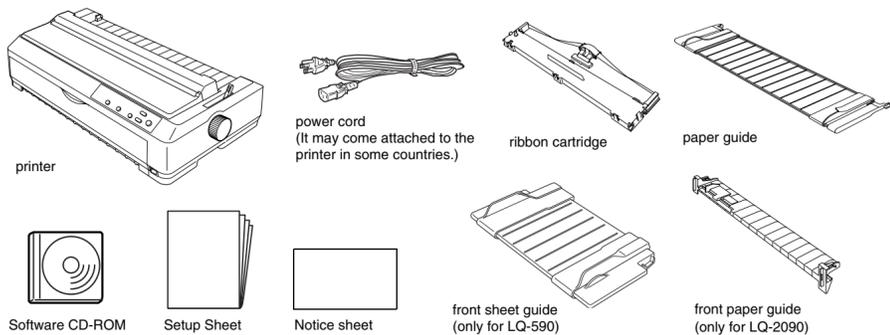


### Remove the protective materials

Follow the directions on the Notice Sheet to remove the protective materials.


Save all packing and protective materials in case you need to ship the printer in the future.

## 2 Assembling the Printer


1. Make sure the printer is turned off and unplugged.
2. Open the paper guide and printer cover, then pull them up to remove them.

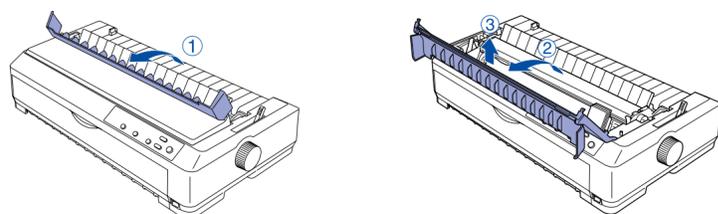

3. Press the tabs on each side of the paper tension unit upward and lift the unit up and off the printer. Then, slide the print head to the middle of the printer by hand.

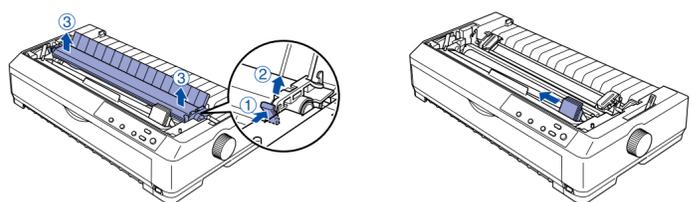

4. Remove the ribbon cartridge from the package.
5. Hold both sides of the ribbon guide and pull it until it is out of the cartridge.

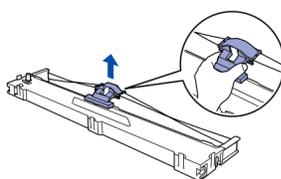


6. Insert the ribbon cartridge into the printer at an angle as shown below, then press firmly on both sides of the cartridge to fit the plastic hooks into the slots on the printer.




7. Slide the ribbon guide into the print head until it clicks in place. Turn the ribbon-tightening knob to help feed the ribbon into place.


- Caution:**
- The ribbon should not be twisted or creased.
  - When inserting the ribbon guide, press firmly until it clicks.

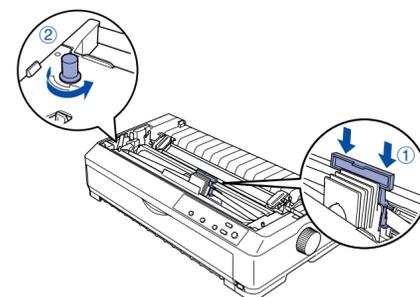

8. Reinstall the paper tension unit by lowering it onto the printer's mounting pegs. Then press down on both ends of the unit until it clicks into place.

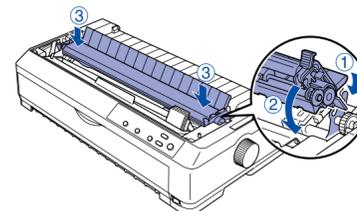


9. Replace the printer cover by inserting the front tabs into the slots on the printer and lowering the cover into place. Then push it down until it clicks. Finally, attach the paper guide.

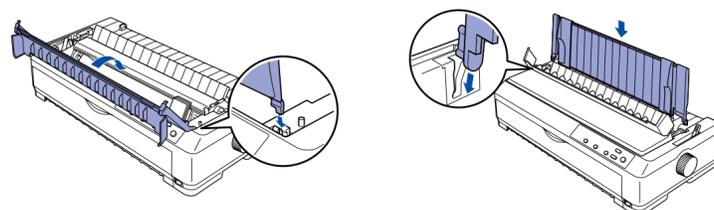


## 3 Connecting the Printer to Your Computer

### Connecting the printer

Make sure both the printer and computer are turned off, then connect the interface into the printer and computer. Use USB or parallel cable to connect the printer and computer.

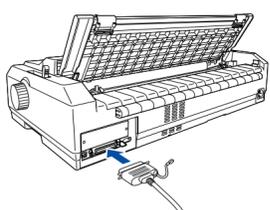


<parallel>

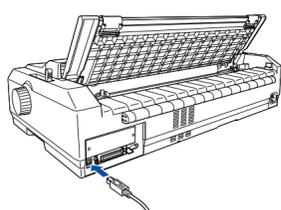

<USB>

### Plugging in the Printer

Make sure the printer is turned off, then plug the power cord into the printer's AC inlet and a properly grounded electrical outlet.

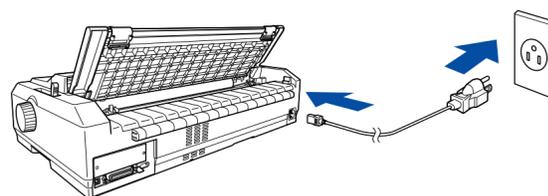

# 4 Installing the Printer Software

## Installing the software in Windows

### Note:

- ❑ Installing the printer software for Windows XP, Vista or 2000 may require administrator privileges. If you have problems, ask your administrator for more information.
- ❑ Turn off all virus protection programs before installing the printer software.

1. Make sure that the printer is turned off.
2. Insert the printer software CD-ROM into the CD-ROM drive. The Install dialog box appears.

### Note:

If the Installer dialog box does not appear, double-click **Setup.exe** in the CD-ROM.




3. Click **Start**.

### Note:

For Windows Vista, User Account Control window appears. Click **Continue** to proceed installation.

4. Select your printer, then follow the instructions on the screen.
5. Setup is complete. Your printer is ready to use.

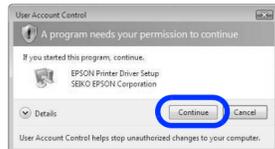

## For DOS programs

To control the printer from DOS application programs, you need to select the printer you are using. If the list in your application does not include your printer, choose the first available printer from the list below. Choose the Epson printer at the appropriate step in the installation or setup procedure. If the list in your application does not include your printer, choose the first available printer from the list below:

For LQ-590	
LQ-580 / LQ-570e	LQ-200
LQ-300+	LQ-500
LQ-300	LQ-860+
LQ-870	LQ-2550
LQ-570 / 570+	LQ-2500
LQ-850+	LQ-800
LQ-850	LQ-1500
LQ-510 / 550	

For LQ-2090	
LQ-2080 / 2180	LQ-500
LQ-2070 / 2170	LQ-860+ / 1060+
LQ-1070 / 1070+	LQ-2550
LQ-870 / 1170	LQ-2500
LQ-850+ / 1050+	LQ-800 / 1000
LQ-850 / 1050	LQ-1500
LQ-510 / 550 / 1010	
LQ-200	

Once the printer software has been successfully installed onto your computer, your printer is ready to use.

## Viewing the Reference Guide

The *Reference Guide* provides detailed information on the Printer's functions, optional products, Printer software, troubleshooting, and technical specifications.

A *Reference Guide* icon is created on the desktop when the printer software is installed. To view the guide, double-click the **LQ-590/LQ-2090 Reference Guide** icon on the desktop. You can also access the *Reference Guide* via the Start menu. Click **Start**, point to **All programs** in Windows XP and Vista or **Programs** in Windows Me, 98, 95, 2000, or Windows NT 4.0, point to **EPSON**, then select **LQ590/LQ2090 Reference Guide**.

If you are using the printer with Windows Vista, refer to **Software Guide**.

## Safety and Environmental Information

### Hot Parts Caution Symbol



This symbol is placed on the print head and other parts to indicate that they may be hot. Never touch those parts just after the printer has been used. Let them cool for a few minutes before touching them.

### Important Safety Instructions

Read all of these safety instructions before using the printer. In addition, follow all warnings and instructions marked on the printer itself.

#### Caution:

Be sure the AC power cord meets the relevant local safety standards.

- ❑ Use only the type of power source indicated on the printer's label.
- ❑ Connect all equipment to properly grounded power outlets.
- ❑ Do not use a damaged or frayed power cord.
- ❑ If you use an extension cord with the printer, make sure the total ampere rating of all devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- ❑ Unplug the printer before cleaning it, and always clean it with a piece of damp cloth only.
- ❑ Do not spill liquid onto the printer.
- ❑ Except as specifically explained in this guide, do not attempt to service the printer yourself.
- ❑ Unplug the printer and refer servicing to qualified service personnel under the following conditions:
  - i. If the power cord or plug is damaged.
  - ii. If liquid has entered the printer.
  - iii. If the printer has been dropped or the cabinet damaged.
  - iv. If the printer does not operate normally or exhibits a distinct change in performance.
- ❑ If you plan to use the printer in Germany, observe the following:
- ❑ To provide adequate short-circuit protection and over-current protection for this printer, the building installation must be protected by a 10- or 16-amp circuit breaker.

#### Note for German-speaking users:

Bei Anschluss des Druckers an die Stromversorgung muss sichergestellt werden, dass die Gebäudeinstallation mit einer 10 A- oder 16 A-Sicherung abgesichert ist.

### Choosing a Place for the Printer

- ❑ Do not place the printer on an unstable surface or near a radiator or heat source.
- ❑ Do not block or cover the slots and openings in the printer's cabinet, and do not insert objects through the slots.
- ❑ Place the printer on a flat, stable surface. The printer will not operate properly if it is tilted or placed at an angle.
- ❑ Place the printer where you can easily connect it to a network interface cable, if necessary.
- ❑ Leave adequate room around the printer for easy operation and maintenance.
- ❑ Avoid using storing the printer in places subject to rapid changes in temperature and humidity. Keep it away from direct sunlight, strong light, heat sources, or excessive moisture or dust.
- ❑ Avoid places subject to shocks and vibrations.
- ❑ Place the printer near a wall outlet where you can easily unplug the power cord.
- ❑ Keep the entire computer system away from potential sources of electromagnetic interference, such as loudspeakers or the base units of cordless telephones.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

EPSON is a registered trademark of Seiko Epson Corporation.

Microsoft, Windows, and Windows NT are registered trademarks of Microsoft Corporation in the United States and/or other countries.

**General Notice:** Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.