



# EPSON STYLUS™ CX1500 Series Setup Guide

4050366-00  
xxx


## 1. Unpacking

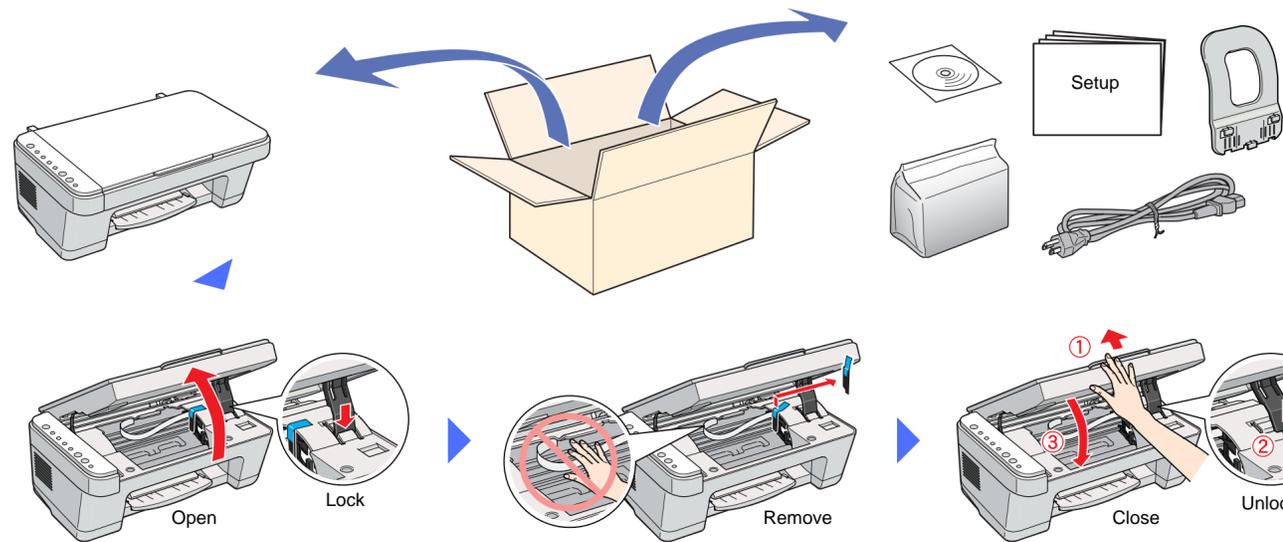


## 2. Attaching the Parts

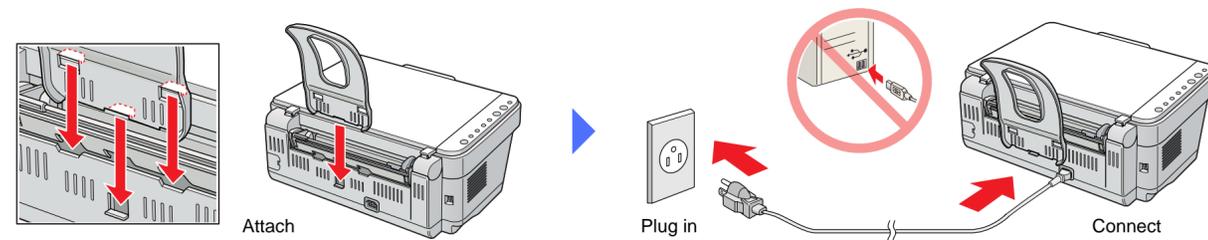

## 3. Installing Ink Cartridges

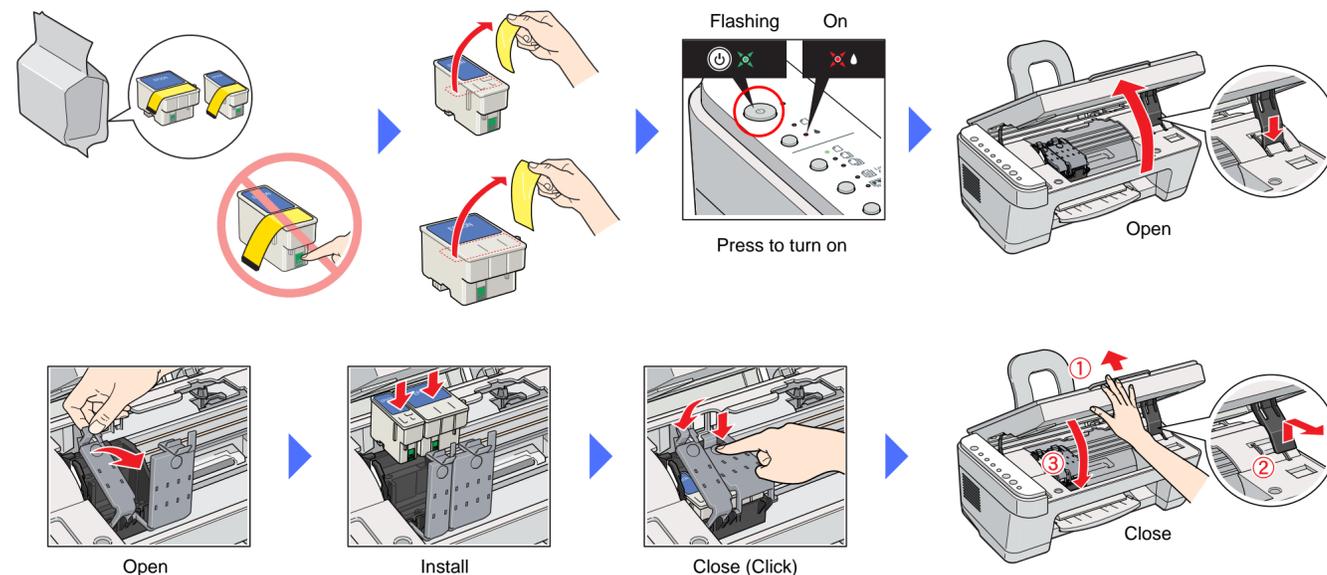


## 4. Ink Charging

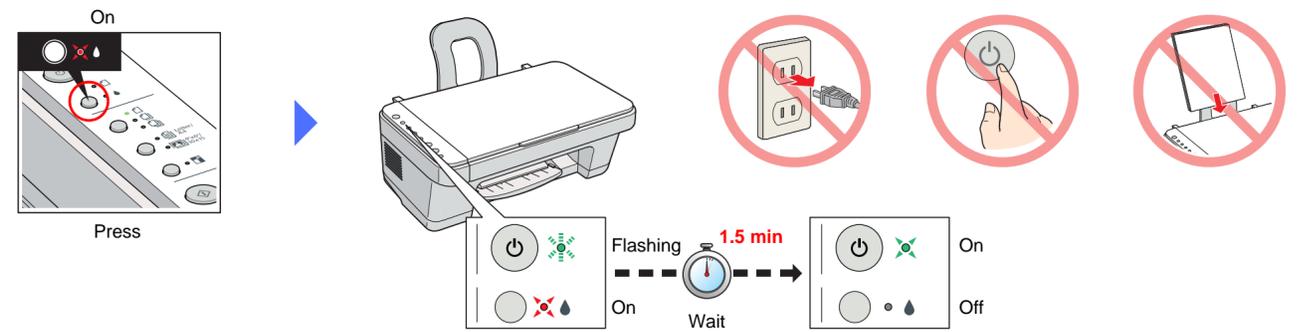


See the other side to copy

## Connecting to a Computer and Installing the Software

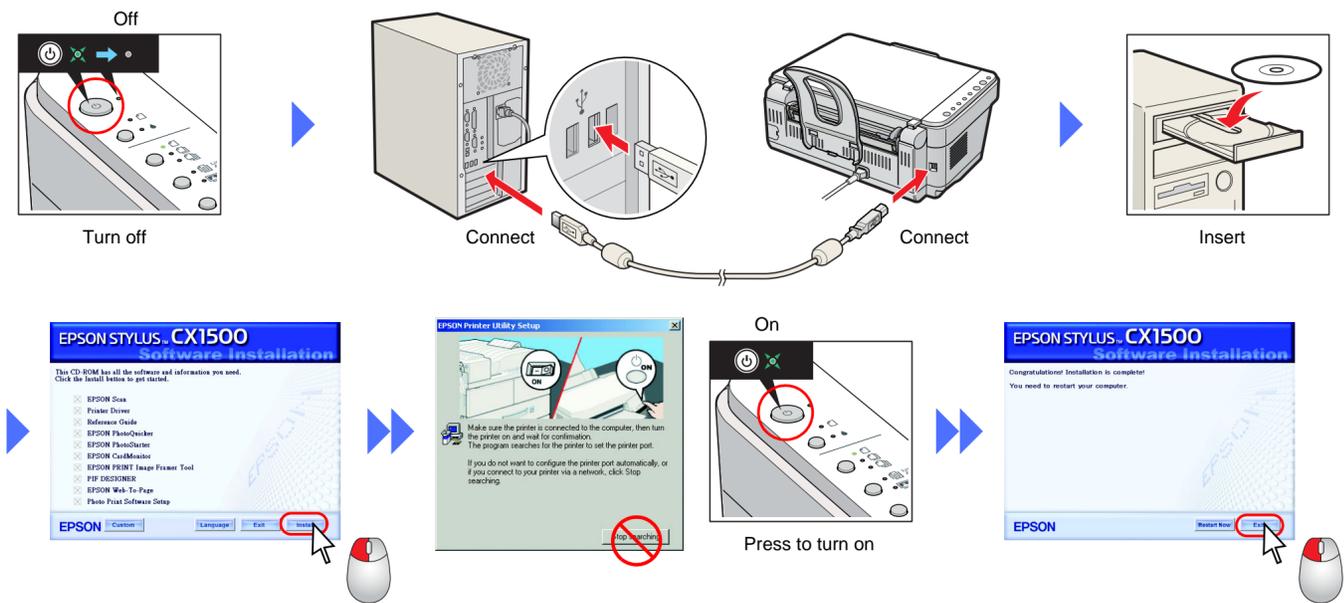


□ If the installer dialog box does not appear, double-click CD-ROM icon.

## Using Online Reference Guide

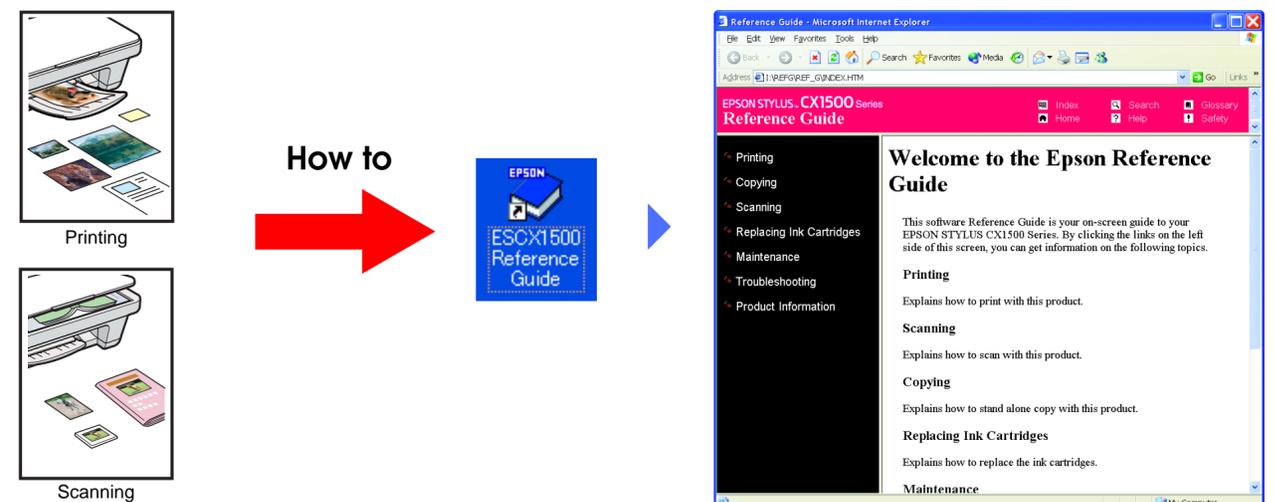

# Copying

## • Making Copies

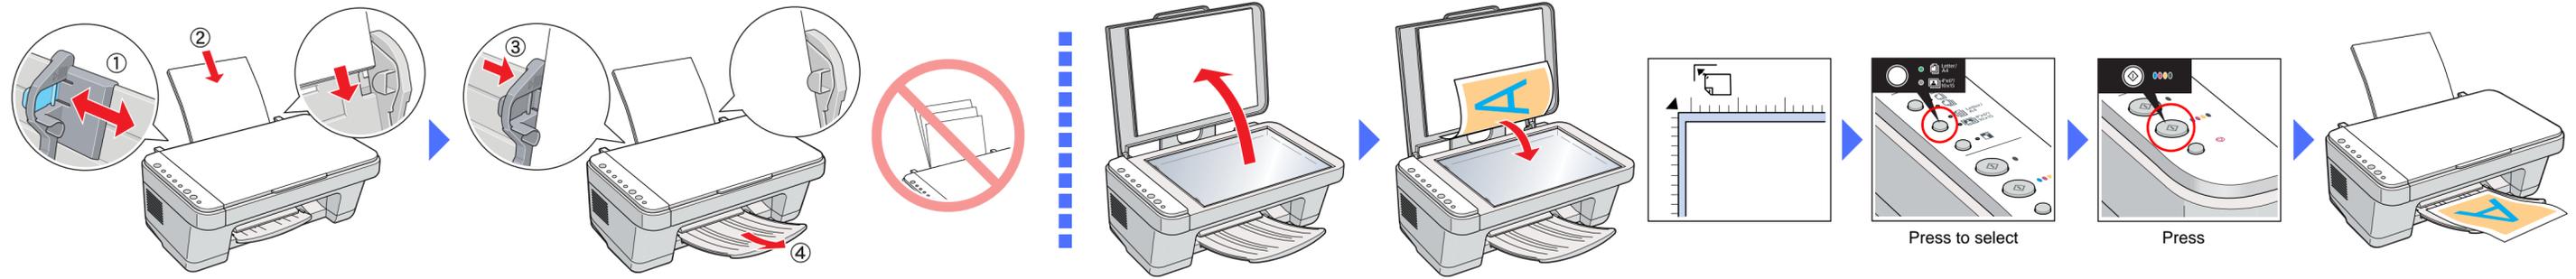

## • Function

---

---

### Number of Copies

### Paper Size/Type

Letter/A4  
4"x6"/10x15

A4/Plain paper

Letter/A4  
4"x6"/10x15

10 x 15 /Photo paper

### Fit to Page

### B&W Copying

### Color Copying

### Cancel Copying

## Error Display

| Lights              | Status                 | Solutions  |
|---------------------|------------------------|--|
|                     | Paper out or Paper jam | Press  Start Color (or B&W) button.  |
|                     | Ink near end           | Prepare a new black ink cartridge (T038) or color ink cartridge (T039). Replace the appropriate ink cartridge. |
|                     | Ink out or No Ink      | Replace the appropriate ink cartridge. Use the genuine Epson ink cartridges.                                   |
| All LEDs on or only | Unknown error          | Contact your dealer.   |

● = on, ● = flashing, ○ = off

## • Replacing Ink Cartridges

On or Flashing

● : Press 3 second  
● : Press

Open

Open

Remove

Install

Close (Click)

Close

On or Flashing

Press

Flashing 30 sec

On Wait

On

Off