

# EPSON®


# PhotoPC™700

# Quick Guide

Copyright © 1998 by SEIKO EPSON CORPORATION  
Nagano, Japan.

4008942  
xxx-00

Printed in Japan 98.xx-x

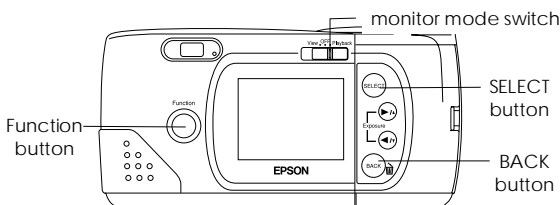

## Playing Back Photos

1. Slide the monitor mode switch to Playback. The last photo taken appears on the screen.
2. Press the  $\blacktriangleright/\blacktriangle$  or  $\blacktriangleleft/\blacktriangledown$  button to display the previous or next photos.

## Erasing Photos

### In Playback mode:

1. Press the Function button and BACK button simultaneously to erase an image displayed on the LCD screen.
2. When the confirmation message appears, press SELECT to erase the photo.

### In View mode:

1. Press the Function button and BACK button simultaneously to erase an image right after it has been taken.
2. When the confirmation message appears, press SELECT to erase the photo.

## Setting Panorama or Zoom



To take pictures in Panorama or Zoom mode, follow these instructions:

1. Slide the monitor mode switch to VIEW, then press SELECT. Highlight the Panorama/Zoom menu icon using the  $\blacktriangleleft/\blacktriangledown$  button, then press SELECT again.
2. Press the SELECT button to choose Panorama or Zoom from the menu.
3. Press the BACK button.

## Setting Shooting Conditions



To take up to ten pictures in continuous shooting mode, or set the white balance, exposure, and sensitivity to attain your desired images, follow these instructions:

1. Slide the monitor mode switch to View, then press SELECT. Highlight the Conditions menu icon using the  $\blacktriangleright/\blacktriangle$  or  $\blacktriangleleft/\blacktriangledown$  button, then press SELECT again.
2. Press the  $\blacktriangleleft/\blacktriangledown$  button to highlight the icon of the condition you want to change. Then press the SELECT button to make the setting.



### Continuous Shooting

ON: You can take up to 10 photos in sequence.



### White Balance

FIX: White balance of your photos is fixed.



### Exposure

MANUAL: You can make the manual exposure setting.




### Sensitivity

HIGH: You can increase the sensitivity of your camera.

3. When your setting is done, press the BACK button.
4. If you want to adjust the exposure manually, press the Function button and the  $\blacktriangleright/\blacktriangle$  or  $\blacktriangleleft/\blacktriangledown$  button simultaneously.

## Camera Settings

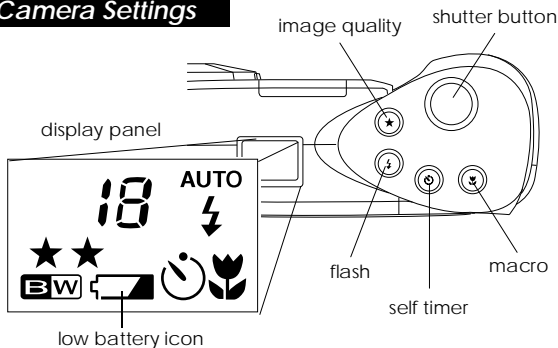

### Image Quality Settings

- ★★ Fine
- ★★★ Super fine
- ★★ Monochrome fine  
BW
- ★★★ Monochrome super fine  
BW
- ★ Standard

### Flash Settings

- AUTO  
⚡ Automatic
- ⚡ Forced flash
- ⚡ (with slash) Flash off

- 🕒 Self timer

- 🌷 Macro mode