

**EPSON®**

**EPSON PhotoPC™ L-400**

# **Digital Camera Software Guide**

---

To install the software, read this manual first.

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SEIKO EPSON CORPORATION. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither SEIKO EPSON CORPORATION nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product.

SEIKO EPSON CORPORATION and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by SEIKO EPSON CORPORATION.

EPSON is a registered trademark of SEIKO EPSON CORPORATION.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and other countries.

Apple, Macintosh, Mac, iMac, and Power Macintosh are registered trademarks of Apple Computer, Inc.

QuickTime and the QuickTime logo are trademarks used under license. The QuickTime logo is registered in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective companies.

Copyright © 2003 by SEIKO EPSON CORPORATION, Nagano, Japan.



---

## **Introducing the Software**

The software CD that comes with your EPSON digital camera contains the following software.

- ❑ EPSON Photo!4 allows you to view and manage image files saved on your computer or your camera's SD memory card.
- ❑ EPSON CameraStarter provides you with a convenient way to open software for printing and saving images on your SD memory card.
- ❑ EPSON AutoDownloader gives you a quick and organized way to transfer photos from your camera to your computer.
- ❑ EPSON CardMonitor enables EPSON CameraStarter to start automatically by detecting when the camera is connected to your computer, or when the SD memory card is inserted in a PC Card slot.
- ❑ EPSON PhotoQuicker allows you to print photos in simple but various ways by using your computer.
- ❑ PIF DESIGNER enables you to create or edit original Frames (layout files) and register them to your digital camera. You can print your photo together with your original Frame.
- ❑ EPSON PRINT Image Framer Tool enables you to transfer Frames to your SD memory card in your digital camera.
- ❑ QuickTime 5 enables you to play video clips.

---

## Installing and Setting up the Software

The software CD contains the digital camera software and online manuals.

**Note:**

*To use the printing function, you must install EPSON PhotoQuicker version 3.4 or later.*

## System Requirements

Before connecting your digital camera to your computer and running the digital camera software, make sure that your computer uses one of the following operating systems.

Software	OS
<input type="checkbox"/> EPSON Photo!4/EPSON CameraStarter/EPSON AutoDownloader <input type="checkbox"/> EPSON CardMonitor <input type="checkbox"/> EPSON PRINT Image Framer Tool <input type="checkbox"/> PIF DESIGNER <input type="checkbox"/> QuickTime 5	Microsoft® Windows® XP Home Edition, XP Professional, Millennium Edition, 98, 2000 Professional  Mac OS® 8.6 to 9.x, Mac OS X 10.2 or later
<input type="checkbox"/> EPSON PhotoQuicker	Microsoft Windows XP Home Edition, XP Professional, Millennium Edition, 98, 2000 Professional  Mac OS 8.6 to 9.x

**Note:**

- When using a USB cable, make sure the following requirements are met.
  - Your computer is installed with Windows XP/Me/98/2000. (Make sure Windows Me/98/2000 is installed at the time of purchase or pre-installed Windows Me/98 is upgraded to Windows XP/Me/2000.)
  - Your computer is USB-enabled.
  - Your computer has a USB port available.
- EPSON PhotoQuicker 3.4 included on the software CD of EPSON Digital Camera, cannot be used with Mac OS X.

## **Installing the software**

Be sure to close all running programs and turn off any virus protection programs.

1. Insert the software CD into the CD-ROM drive.

For Windows users:

The EPSON Installer Program dialog box appears.

**Note:**

*If the EPSON Installation Program dialog box does not appear, take the following steps:*

*For Windows XP users: Click Start and My Computer, and then double-click EPSON.*

*For Windows Me, 98, and 2000 users: Double-click My Computer, and then double-click EPSON.*

For Mac OS 8.6 to 9.x users:

Double-click the EPSON icon inside the EPSON folder.

For Mac OS X users:  
Double-click the Mac OS X folder inside the EPSON folder,  
and then click the EPSON icon.

**Note:**

*When the authentication dialog box to assign administrator privileges appears, enter the user name and password, and then click OK.*

2. If you are prompted to turn off any virus protection programs, click Continue.
3. Read the license agreement, then click Agree.
4. If you are prompted to select a language, select your preferred language.
5. When a dialog box appears to show a list of software you can install, click Install.



6. Follow the on-screen instructions until all of the software is installed. Click Next or Finish (Windows) or Quit (Macintosh) to continue, as needed.
7. At the end of the installation, click Exit.

***Note for Windows XP and Mac OS X users:***

*To start CardMonitor automatically when you insert a SD memory card in the digital camera or the PC Card slot of a device, you need to change the settings for CardMonitor. To change the settings, see "Setting CardMonitor" on page 7.*

## **Setting CardMonitor**

To start CardMonitor automatically when you insert a SD memory card in the digital camera or PC Card slot of a device, follow the steps below.

### *For Windows XP*

1. Click Start and then select My Computer.
2. Right-click the device you want to use to insert a SD memory card, and then select Properties.
3. Click the AutoPlay tab.
4. Choose Pictures as the content type.

If the SD memory card contains audio recordings or video clips, choose Mixed content.

5. Select Select an action to perform, and then select Startup CardMonitor using EPSON CardMonitor1.x.
6. Click Apply and OK.

For Mac OS X

1. Double-click the Image Capture icon in the Applications folder.
2. Select Preferences from the Image Capture menu to open the Image Capture Preferences dialog box.
3. Select Other from the list of Camera Preferences.

A dialog box appears to prompt you to select an application.

4. Select EPSON CardMonitor for X in the EPSON CardMonitor folder of the Applications folder.
5. Click Open.

---

## Starting the Software

To start the software, follow the steps in this section.

**Note:**

- ❑ *To start EPSON CameraStarter and EPSON AutoDownloader, see the online EPSON Photo!4/AutoDownloader/ CameraStarter User's Guide. For details on the online User's Guide, see "Finding More Information" on page 10.*
- ❑ *Mac OS X users must use the Classic environment to print using EPSON PhotoQuicker.*



## Windows

<b>Software</b>	<b>Menu</b>
EPSON Photo!4	Click Start, point to All Programs (or Programs), and then select EPSON Camera. Select EPSON Photo!4, and then click EPSON Photo!4.
EPSON PhotoQuicker	Click Start, point to All Programs (or Programs), and then select EPSON PhotoQuicker. Click EPSON PhotoQuicker3.4.
EPSON PRINT Image Framer Tool	Start EPSON Photo!4 and then select Start EPSON PRINT Image Framer Tool from the File menu.
PIF DESIGNER	Click Start, point to All Programs (or Programs), and then select EPSON PhotoQuicker. Choose PIF DESIGNER2.1.

## Macintosh

<b>Software</b>	<b>Menu</b>
EPSON Photo!4	Double-click the EPSON Photo!4 icon in the EPSON Photo!4 program folder.
EPSON PhotoQuicker	Double-click the EPSON PhotoQuicker shortcut icon on the desktop.
EPSON PRINT Image Framer Tool	Start EPSON Photo!4 and then select Start EPSON PRINT Image Framer Tool from the File menu.
PIF DESIGNER	Double-click the PIF DESIGNER icon in the PIF DESIGNER program folder.

---

## Finding More Information

To learn more about the software included on the software CD, see the online user's guide of the respective software.

Software	To start online User's Guide...
EPSON Photo!4	Start EPSON Photo!4 and then select EPSON Photo!4 Help from the Help menu (Windows), Apple menu (Mac OS 8.6 to 9.x), or EPSON Photo!4 menu (Mac OS X).
EPSON PhotoQuicker	Click the Help button on the dialog box.
EPSON PRINT Image Frammer Tool	<b>For Windows:</b> Click Start, point to All Programs (or Programs), and then select EPSON PhotoQuicker. Choose EPSON PRINT Image Frammer Tool 2.1 Operating Manual. <b>For Macintosh:</b> Double-click the EPSON PRINT Image Frammer Tool folder, the Manual folder, and then the INDEX.HTM icon.
PIF DESIGNER	<b>For Windows:</b> Click Start, point to All Programs (or Programs), and then select EPSON PhotoQuicker. Choose PIF DESIGNER2.x Operating Manual. <b>For Macintosh:</b> Double-click the PIF DESIGNER folder, the Manual folder, and then the INDEX.HTM icon.

### Note:

*You can access the online EPSON Photo!4/AutoDownloader/CameraStarter User's Guide or the EPSON PhotoQuicker User's Guide by using the Start menu of Windows (Windows), or by double-clicking the MANUAL folder in each of the software's program folders, and then double-click INDEX.HTM (Macintosh).*

---

## **Uninstalling the USB Driver**

Follow the steps below to uninstall the USB driver.

**Note:**

*To uninstall other software such as EPSON Photo!4 or EPSON Photo Quicker, refer to the online User's Guide of the corresponding software.*

**Note for Windows 2000, XP, Mac OS 9.x, and Mac OS X users:**

*The USB driver is included in your OS. Therefore, you do not need to uninstall the USB driver.*

### **For Windows Me and 98 users**

1. In Control Panel, double-click the Add/Remove Programs icon.
2. Select EPSON Photo Device USB Driver from the list, and then click Add/Remove.
3. When a confirmation dialog box appears, click OK.
4. Click Finish to complete the uninstallation.

If a message appears to prompt you to restart the computer, be sure to click Yes to restart your computer now.

### **For Mac OS 8.6 users**

Delete the following two files in the Extensions folder of System Folder on the Macintosh HD.

- EPdsc\_334StorageDriver
- EPdsc\_334Storage Shim

**EPSON**