 


Guide to Control Panel / 控制面板指南 / контрол панель көмегдешікі / Хянах самбaryн заавар



	TURNS THE PRINTER ON OR OFF.
	PRINTS A NETWORK CONNECTION REPORT TO DETERMINE THE CAUSES OF ANY NETWORK PROBLEMS. TO GET MORE INFORMATION, HOLD THIS BUTTON DOWN FOR MORE THAN 5 SECONDS TO PRINT A NETWORK STATUS SHEET.
	CLEAR A NETWORK ERROR. HOLD DOWN FOR 5 SECONDS OR MORE TO MAKE NETWORK SETTINGS USING THE WPS PUSH BUTTON.
	STOP THE CURRENT OPERATION. HOLD THIS BUTTON DOWN FOR 5 SECONDS UNTIL THE FLASHES TO RUN PRINT HEAD CLEANING.
	HOLD DOWN THE AND SIMULTANEOUSLY TO START PIN CODE SETUP (WPS).
	HOLD DOWN THE AND SIMULTANEOUSLY TO START WI-FI DIRECT (SIMPLE AP) SETUP.
	TURN THE PRINTER ON WHILE HOLDING DOWN THE TO RESTORE THE DEFAULT NETWORK SETTINGS. WHEN THE NETWORK SETTINGS ARE RESTORED, THE PRINTER TURNS ON AND THE NETWORK STATUS LIGHTS FLASH ALTERNATELY.
	TURN THE PRINTER ON WHILE HOLDING DOWN THE TO PRINT THE NOZZLE CHECK PATTERN.

Reading the Indication Lights

	ON : The printer is connected to a wireless (Wi-Fi) network.
	ON : The printer is connected to a network in Wi-Fi Direct (Simple AP) mode.
	Wi-Fi CONNECTION ERROR HAS OCCURRED. PRESS THE TO CLEAR THE ERROR AND TRY AGAIN.
	INITIAL INK CHARGING MAY NOT BE COMPLETE. SEE THE "2 CHARGING INK" SECTION OF FRONT PAGE.
	NO PAPER IS LOADED OR MORE THAN ONE SHEET HAS BEEN FED AT A TIME. LOAD PAPER AND PRESS THE .
	FLASHING SLOWLY (AT 1.25 SECOND INTERVALS) A PAPER JAM HAS OCCURRED. REMOVE THE PAPER AND PRESS THE .
	FLASHING FAST (AT 0.5 SECOND INTERVALS) PAPER REMAINS INSIDE THE PRINTER. LOAD A4 SIZE PAPER IN THE REAR PAPER FEED SLOT, AND THEN PRESS THE TO REMOVE THE PAPER INSIDE. LOAD PAPER IN THE PORTRAIT DIRECTION.
	THE PRINTER WAS NOT TURNED OFF CORRECTLY. AFTER CLEARING THE ERROR BY PRESSING THE , CANCEL ANY PENDING PRINT JOBS. WE RECOMMEND PERFORMING A NOZZLE CHECK BECAUSE THE NOZZLES MAY HAVE DRIED OR CLOGGED. TO TURN OFF THE PRINTER, MAKE SURE YOU PRESS THE .
	FLASHING ALTERNATELY A MAINTENANCE BOX IS NEARING OR AT THE END OF ITS SERVICE LIFE. THE MAINTENANCE BOX NEEDS TO BE REPLACED. TO REPLACE THE MAINTENANCE BOX, SEE THE "USER'S GUIDE".
	FLASHING SIMULTANEOUSLY THE PRINTER COVER IS OPEN. CLOSE THE PRINTER COVER UNTIL IT CLICKS. THE OUTPUT SWITCH LEVER IS LOWERED. RAISE THE OUTPUT SWITCH LEVER. THE OUTPUT SWITCH LEVER IS RAISED. OPEN THE PAPER CASSETTE COVER, AND THEN LOWER THE OUTPUT SWITCH LEVER.
	THE PRINTER HAS STARTED IN RECOVERY MODE BECAUSE THE FIRMWARE UPDATE FAILED. FOR MORE DETAILS, SEE THE ERROR INDICATOR TABLE FROM "SOLVING PROBLEMS" IN THE "USER'S GUIDE".
	A PRINTER ERROR HAS OCCURRED. OPEN THE PRINTER COVER AND REMOVE ANY PAPER INSIDE THE PRINTER. TURN THE POWER OFF AND ON AGAIN. IF THE ERROR CONTINUES TO OCCUR AFTER TURNING THE POWER OFF AND ON AGAIN, CONTACT EPSON SUPPORT.

	OPEN OR CLOSE THE PRINTER COVER.
	PRINT OUT A NETWORK CONNECTION REPORT, TO DETERMINE THE CAUSES OF ANY NETWORK PROBLEMS. TO GET MORE INFORMATION, HOLD THIS KEY FOR 5 SECONDS UNTIL THE FLICKERS TO PRINT A NETWORK STATUS SHEET.
	CLEAR A NETWORK ERROR. HOLD THIS KEY FOR 5 SECONDS OR MORE TO MAKE NETWORK SETTINGS USING THE WPS PUSH BUTTON.
	STOP THE CURRENT OPERATION. HOLD THIS KEY FOR 5 SECONDS UNTIL THE FLICKERS TO RUN PRINT HEAD CLEANING.
	SIMULTANEOUSLY HOLD DOWN THE AND TO START PIN CODE SETUP (WPS).
	SIMULTANEOUSLY HOLD DOWN THE AND TO START WI-FI DIRECT (SIMPLE AP) SETUP.
	HOLD DOWN THE TO REOPEN THE PRINTER COVER TO RESTORE THE DEFAULT NETWORK SETTINGS. WHEN THE NETWORK SETTINGS ARE RESTORED, THE PRINTER TURNS ON AND THE NETWORK STATUS LIGHTS FLICKER ALTERNATELY.
	HOLD DOWN THE TO PRINT THE NOZZLE CHECK PATTERN.

讀取指示燈

	ON : 灰色
正常狀態	
	印表機已連上無線 (Wi-Fi) 網路。
	印表機已在 Wi-Fi Direct (Simple AP) 模式中連接至網路。
錯誤狀態	
	發生 Wi-Fi 連線錯誤。按下 鍵以清除該錯誤並再試一次。
	初始墨水填充可能未完成。請參閱首頁的「2 填充墨水」部分。
	無紙裝入或一次裝入多於一張紙張。裝入紙張並按下 .
	緩慢閃爍 (間隔 1.25 秒)。發生了夾紙。取出紙張並按下 .
	快速閃爍 (間隔 0.5 秒)。將 A4 大小紙張裝入後端進紙槽，然後按下 以取出內部的紙張。沿水平方向裝入紙張。
	印表機未正確關閉。按下 鍵清除錯誤後，取消任何未開始的印表機。我們建議執行頭噴嘴檢查，因為噴嘴可能已變乾或阻塞。若要關閉印表機，請確保按下 .
	交替閃爍。維修箱已接近或達到使用壽命終點。維修箱需要更換。若要更換維修箱，請參考 進階使用說明 。
	同時閃爍。印表機護蓋開啟。合上印表機護蓋直到發出關閉聲。
	輸出開關桿被拉低。抬高輸出開關桿。
	輸出開關桿被抬高。打開印表機護蓋，然後拉下輸出開關桿。
	由於刷頭更新失敗，印表機已開始恢復模式。若需更多詳細資訊，請參考 進階使用說明 中的「解決問題」。
	印表機發生錯誤。打開印表機護蓋，取出印表機內的任何紙張。關閉電源並再次開啟。如果在關閉並再次開啟後錯誤依然存在，請聯絡 Epson 支援。
	ON : 黑色
Normal Status	
	The printer is connected to a wireless (Wi-Fi) network.
	The printer is connected to a network in Wi-Fi Direct (Simple AP) mode.
Error Status	
	Wi-Fi CONNECTION ERROR HAS OCCURRED. PRESS THE TO CLEAR THE ERROR AND TRY AGAIN.
	INITIAL INK CHARGING MAY NOT BE COMPLETE. SEE THE "2 CHARGING INK" SECTION OF FRONT PAGE.
	NO PAPER IS LOADED OR MORE THAN ONE SHEET HAS BEEN FED AT A TIME. LOAD PAPER AND PRESS THE .
	FLASHING SLOWLY (AT 1.25 SECOND INTERVALS) A PAPER JAM HAS OCCURRED. REMOVE THE PAPER AND PRESS THE .
	FLASHING FAST (AT 0.5 SECOND INTERVALS) PAPER REMAINS INSIDE THE PRINTER. LOAD A4 SIZE PAPER IN THE REAR PAPER FEED SLOT, AND THEN PRESS THE TO REMOVE THE PAPER INSIDE. LOAD PAPER IN THE PORTRAIT DIRECTION.
	THE PRINTER WAS NOT TURNED OFF CORRECTLY. AFTER CLEARING THE ERROR BY PRESSING THE , CANCEL ANY PENDING PRINT JOBS. WE RECOMMEND PERFORMING A NOZZLE CHECK BECAUSE THE NOZZLES MAY HAVE DRIED OR CLOGGED. TO TURN OFF THE PRINTER, MAKE SURE YOU PRESS THE .
	FLASHING ALTERNATELY A MAINTENANCE BOX IS NEARING OR AT THE END OF ITS SERVICE LIFE. THE MAINTENANCE BOX NEEDS TO BE REPLACED. TO REPLACE THE MAINTENANCE BOX, SEE THE "USER'S GUIDE".
	FLASHING SIMULTANEOUSLY THE PRINTER COVER IS OPEN. CLOSE THE PRINTER COVER UNTIL IT CLICKS. THE OUTPUT SWITCH LEVER IS LOWERED. RAISE THE OUTPUT SWITCH LEVER. THE OUTPUT SWITCH LEVER IS RAISED. OPEN THE PAPER CASSETTE COVER, AND THEN LOWER THE OUTPUT SWITCH LEVER.
	THE PRINTER HAS STARTED IN RECOVERY MODE BECAUSE THE FIRMWARE UPDATE FAILED. FOR MORE DETAILS, SEE THE ERROR INDICATOR TABLE FROM "SOLVING PROBLEMS" IN THE "USER'S GUIDE".
	A PRINTER ERROR HAS OCCURRED. OPEN THE PRINTER COVER AND REMOVE ANY PAPER INSIDE THE PRINTER. TURN THE POWER OFF AND ON AGAIN. IF THE ERROR CONTINUES TO OCCUR AFTER TURNING THE POWER OFF AND ON AGAIN, CONTACT EPSON SUPPORT.
	ON : 黑色
Normal Status	
	THE PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	THE PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.

印表機指示燈亮起時的動作

	ON : 黑色
Normal Status	
	PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.
Error Status	
	Wi-Fi CONNECTION ERROR HAS OCCURRED. PRESS THE TO CLEAR THE ERROR AND TRY AGAIN.
	INITIAL INK CHARGING MAY NOT BE COMPLETE. SEE THE "2 CHARGING INK" SECTION OF FRONT PAGE.
	NO PAPER IS LOADED OR MORE THAN ONE SHEET HAS BEEN FED AT A TIME. LOAD PAPER AND PRESS THE .
	FLASHING SLOWLY (AT 1.25 SECOND INTERVALS) A PAPER JAM HAS OCCURRED. REMOVE THE PAPER AND PRESS THE .
	FLASHING FAST (AT 0.5 SECOND INTERVALS) PAPER REMAINS INSIDE THE PRINTER. LOAD A4 SIZE PAPER IN THE REAR PAPER FEED SLOT, AND THEN PRESS THE TO REMOVE THE PAPER INSIDE. LOAD PAPER IN THE PORTRAIT DIRECTION.
	THE PRINTER WAS NOT TURNED OFF CORRECTLY. AFTER CLEARING THE ERROR BY PRESSING THE , CANCEL ANY PENDING PRINT JOBS. WE RECOMMEND PERFORMING A NOZZLE CHECK BECAUSE THE NOZZLES MAY HAVE DRIED OR CLOGGED. TO TURN OFF THE PRINTER, MAKE SURE YOU PRESS THE .
	FLASHING ALTERNATELY A MAINTENANCE BOX IS NEARING OR AT THE END OF ITS SERVICE LIFE. THE MAINTENANCE BOX NEEDS TO BE REPLACED. TO REPLACE THE MAINTENANCE BOX, SEE THE "USER'S GUIDE".
	FLASHING SIMULTANEOUSLY THE PRINTER COVER IS OPEN. CLOSE THE PRINTER COVER UNTIL IT CLICKS. THE OUTPUT SWITCH LEVER IS LOWERED. RAISE THE OUTPUT SWITCH LEVER. THE OUTPUT SWITCH LEVER IS RAISED. OPEN THE PAPER CASSETTE COVER, AND THEN LOWER THE OUTPUT SWITCH LEVER.
	THE PRINTER HAS STARTED IN RECOVERY MODE BECAUSE THE FIRMWARE UPDATE FAILED. FOR MORE DETAILS, SEE THE ERROR INDICATOR TABLE FROM "SOLVING PROBLEMS" IN THE "USER'S GUIDE".
	A PRINTER ERROR HAS OCCURRED. OPEN THE PRINTER COVER AND REMOVE ANY PAPER INSIDE THE PRINTER. TURN THE POWER OFF AND ON AGAIN. IF THE ERROR CONTINUES TO OCCUR AFTER TURNING THE POWER OFF AND ON AGAIN, CONTACT EPSON SUPPORT.
	ON : 黑色
Normal Status	
	PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.

	ON : 黑色
Normal Status	
	PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.
Error Status	
	Wi-Fi CONNECTION ERROR HAS OCCURRED. PRESS THE TO CLEAR THE ERROR AND TRY AGAIN.
	INITIAL INK CHARGING MAY NOT BE COMPLETE. SEE THE "2 CHARGING INK" SECTION OF FRONT PAGE.
	NO PAPER IS LOADED OR MORE THAN ONE SHEET HAS BEEN FED AT A TIME. LOAD PAPER AND PRESS THE .
	FLASHING SLOWLY (AT 1.25 SECOND INTERVALS) A PAPER JAM HAS OCCURRED. REMOVE THE PAPER AND PRESS THE .
	FLASHING FAST (AT 0.5 SECOND INTERVALS) PAPER REMAINS INSIDE THE PRINTER. LOAD A4 SIZE PAPER IN THE REAR PAPER FEED SLOT, AND THEN PRESS THE TO REMOVE THE PAPER INSIDE. LOAD PAPER IN THE PORTRAIT DIRECTION.
	THE PRINTER WAS NOT TURNED OFF CORRECTLY. AFTER CLEARING THE ERROR BY PRESSING THE , CANCEL ANY PENDING PRINT JOBS. WE RECOMMEND PERFORMING A NOZZLE CHECK BECAUSE THE NOZZLES MAY HAVE DRIED OR CLOGGED. TO TURN OFF THE PRINTER, MAKE SURE YOU PRESS THE .
	FLASHING ALTERNATELY A MAINTENANCE BOX IS NEARING OR AT THE END OF ITS SERVICE LIFE. THE MAINTENANCE BOX NEEDS TO BE REPLACED. TO REPLACE THE MAINTENANCE BOX, SEE THE "USER'S GUIDE".
	FLASHING SIMULTANEOUSLY THE PRINTER COVER IS OPEN. CLOSE THE PRINTER COVER UNTIL IT CLICKS. THE OUTPUT SWITCH LEVER IS LOWERED. RAISE THE OUTPUT SWITCH LEVER. THE OUTPUT SWITCH LEVER IS RAISED. OPEN THE PAPER CASSETTE COVER, AND THEN LOWER THE OUTPUT SWITCH LEVER.
	THE PRINTER HAS STARTED IN RECOVERY MODE BECAUSE THE FIRMWARE UPDATE FAILED. FOR MORE DETAILS, SEE THE ERROR INDICATOR TABLE FROM "SOLVING PROBLEMS" IN THE "USER'S GUIDE".
	A PRINTER ERROR HAS OCCURRED. OPEN THE PRINTER COVER AND REMOVE ANY PAPER INSIDE THE PRINTER. TURN THE POWER OFF AND ON AGAIN. IF THE ERROR CONTINUES TO OCCUR AFTER TURNING THE POWER OFF AND ON AGAIN, CONTACT EPSON SUPPORT.
	ON : 黑色
Normal Status	
	PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.

	ON : 黑色
Normal Status	
	PRINTER IS CONNECTED TO A WIRELESS (WI-FI) NETWORK.
	PRINTER IS CONNECTED TO A NETWORK IN WI-FI DIRECT (SIMPLE AP) MODE.
Error Status	
	Wi-Fi CONNECTION ERROR HAS OCCURRED. PRESS THE TO CLEAR THE ERROR AND TRY AGAIN.
	INITIAL INK CHARGING MAY NOT BE COMPLETE. SEE THE "2 CHARGING INK" SECTION OF FRONT PAGE.
	NO PAPER IS LOADED OR MORE THAN ONE SHEET HAS BEEN FED AT A TIME. LOAD PAPER AND PRESS THE .
<	