



Start Here


1. Unpacking

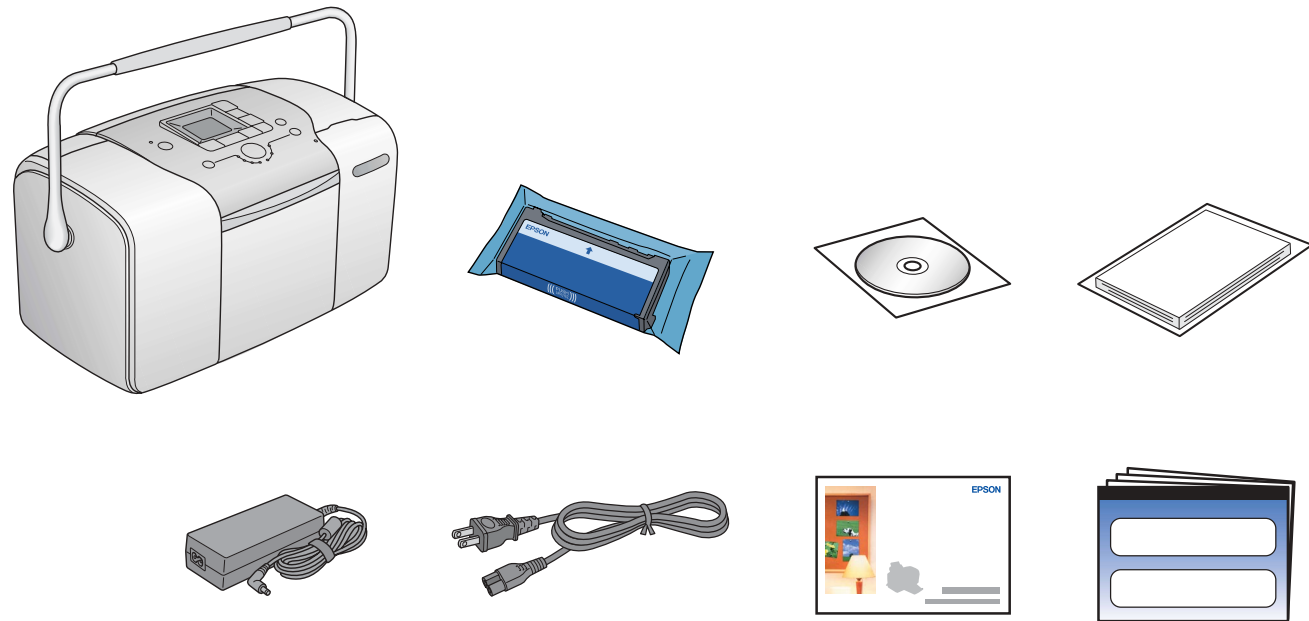

2. Turning on the Printer

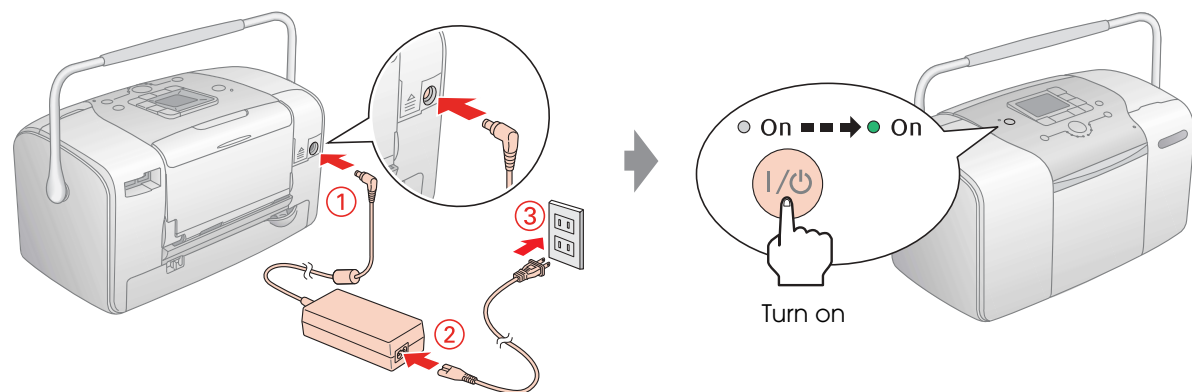


3. Installing the Photo Cartridge

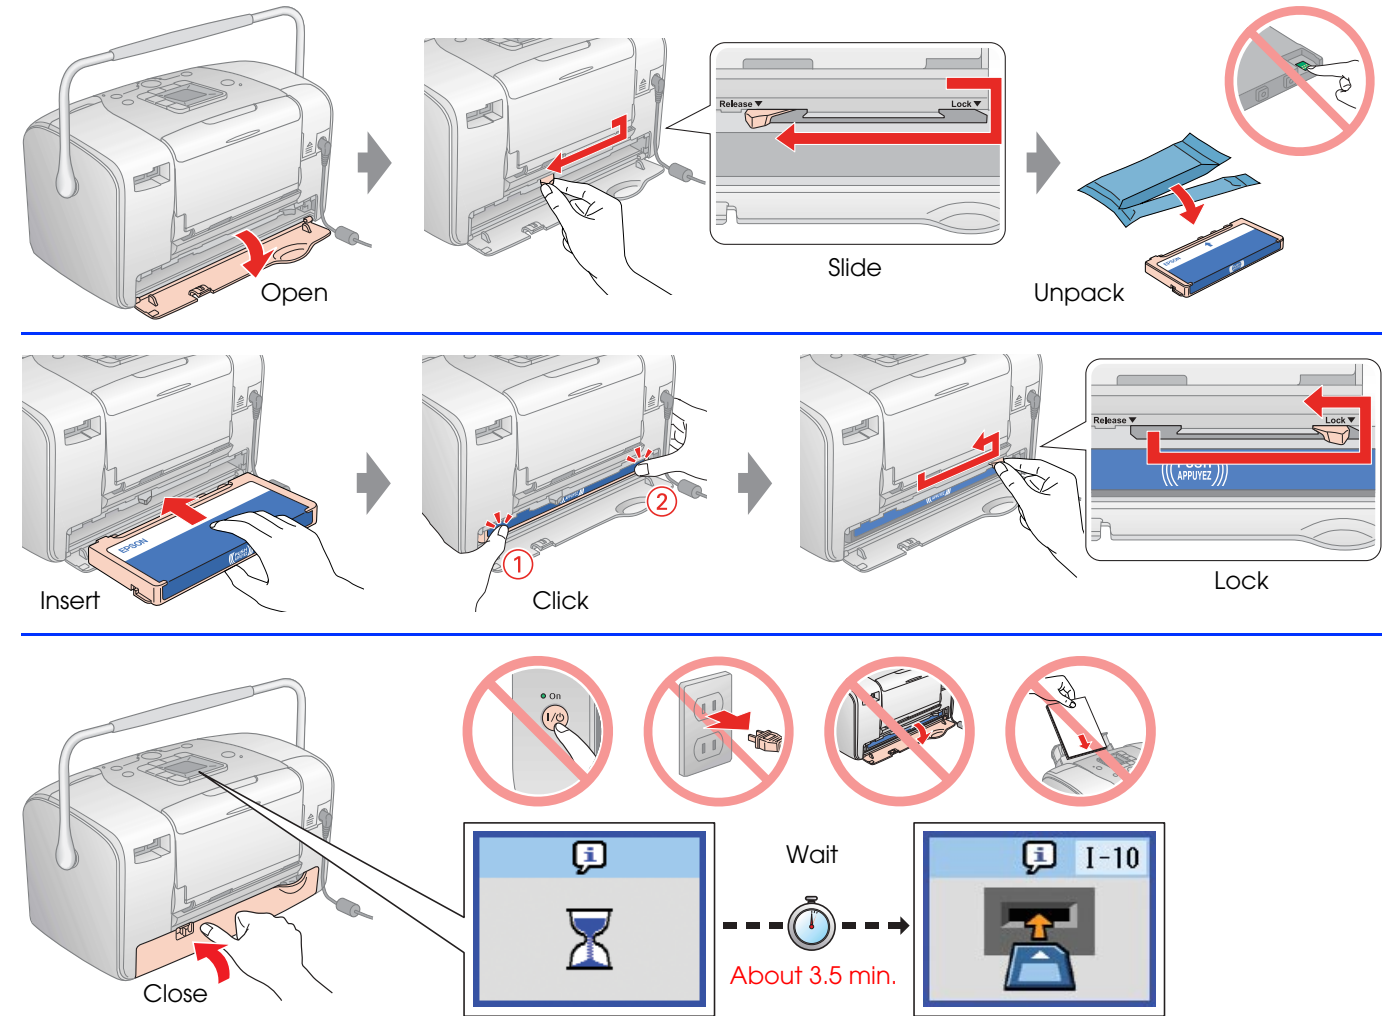

Note:

- ❑ If you cannot close the cartridge compartment cover, slide the lever to the **Release** position to eject the photo cartridge, then reinstall it.
- ❑ The photo cartridge first installed in your printer will be partly used to charge the print head. Subsequent photo cartridges will last for their full rated life.


4. Loading Paper

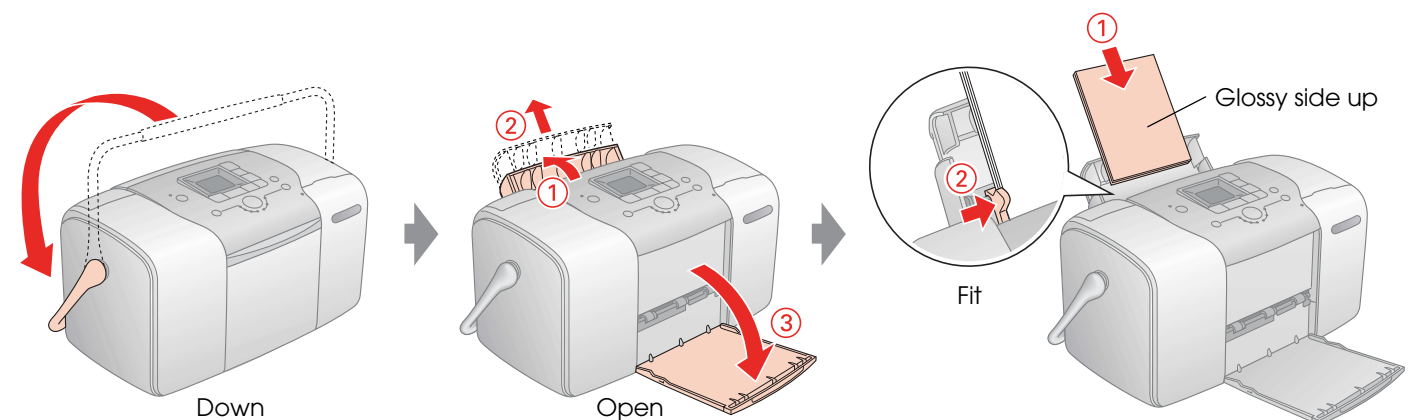


41022590

Printing Photos from a Memory Card

1. Inserting a Memory Card

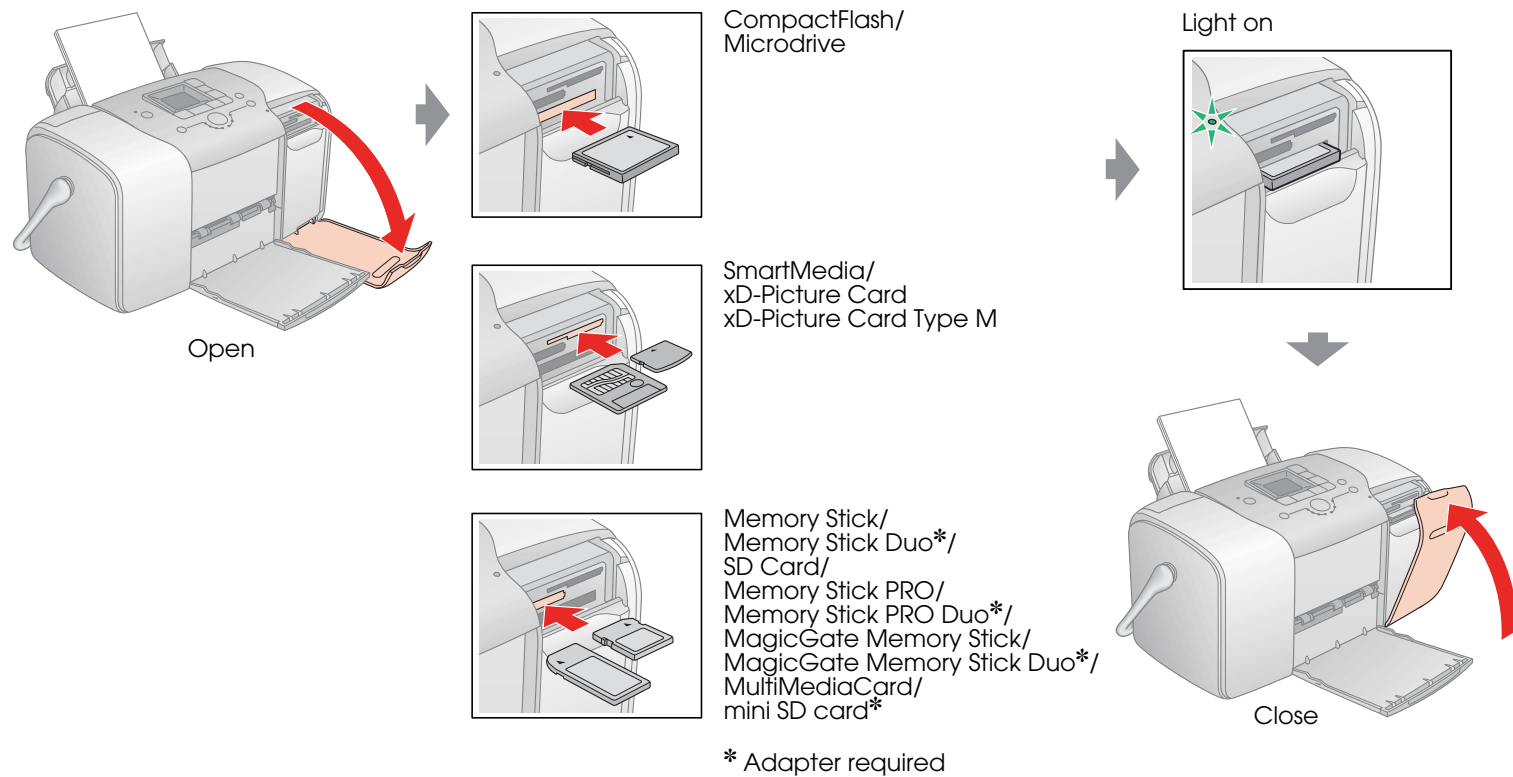


2. Printing Photos

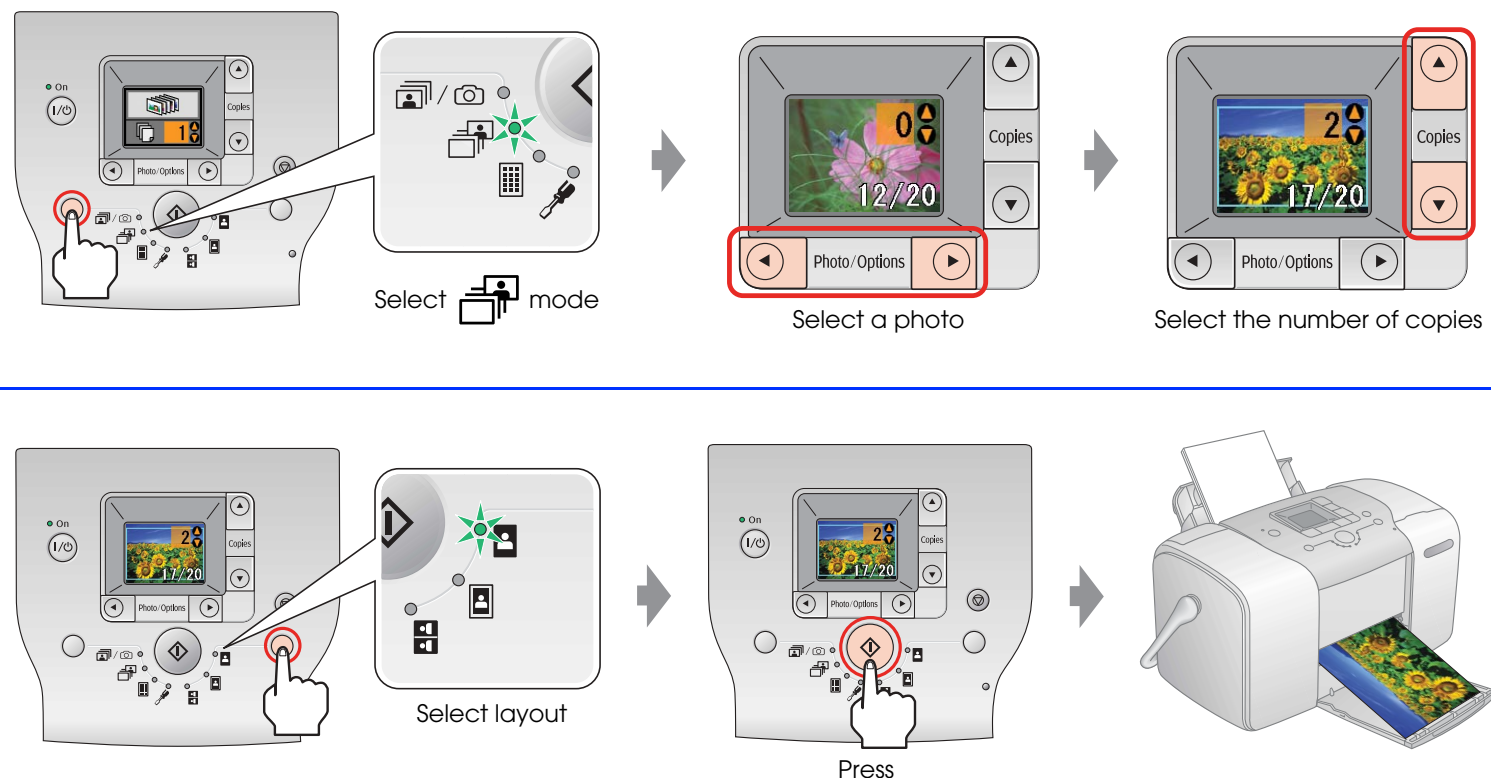


For Computer Users


Installing the software

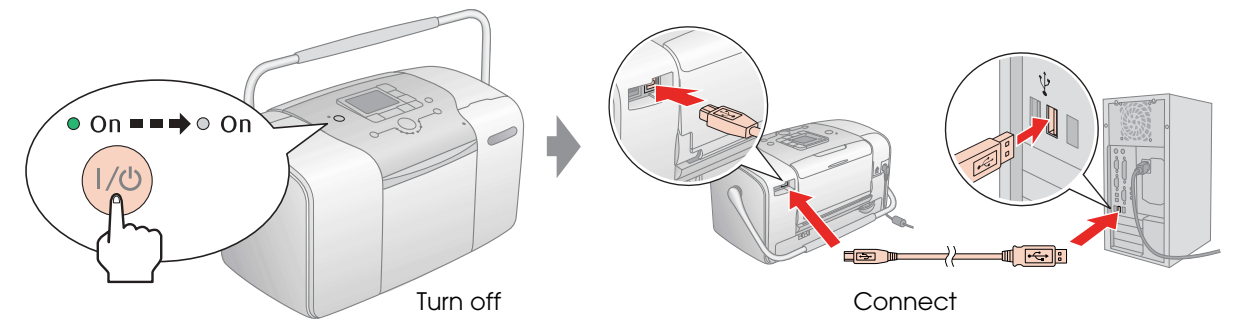

For Windows

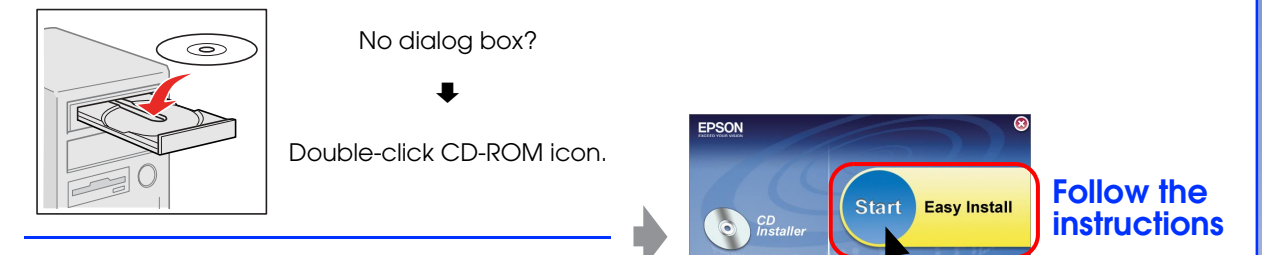


For Mac OS X

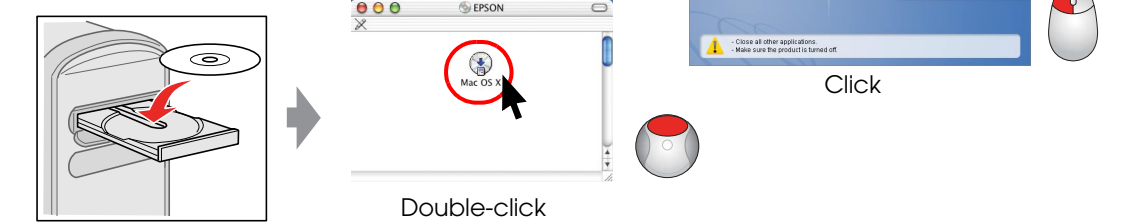

For Mac OS 9, download the driver. → <http://www.epson.com>

Getting More Information

Printing without a computer

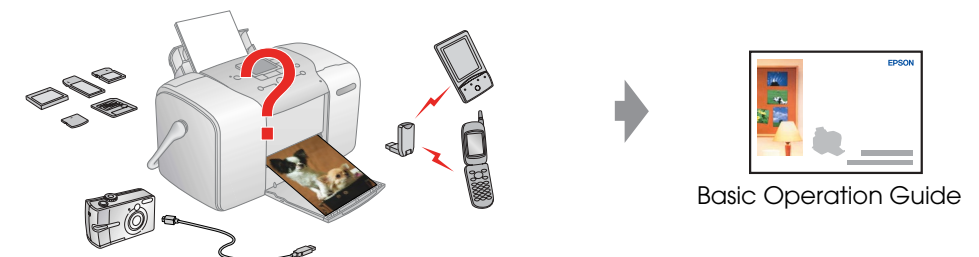

Printing with a computer

