



Start Here


1. Unpacking

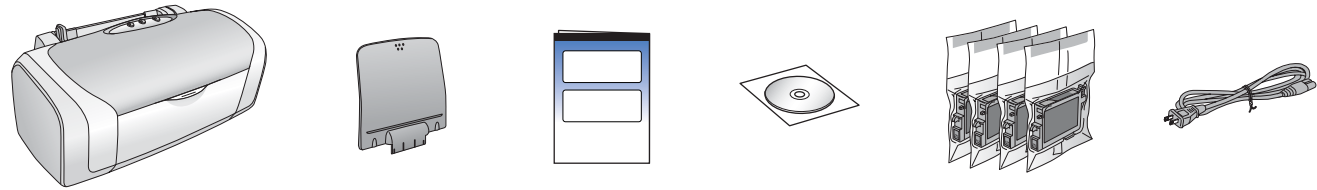


2. Removing Protective Tape

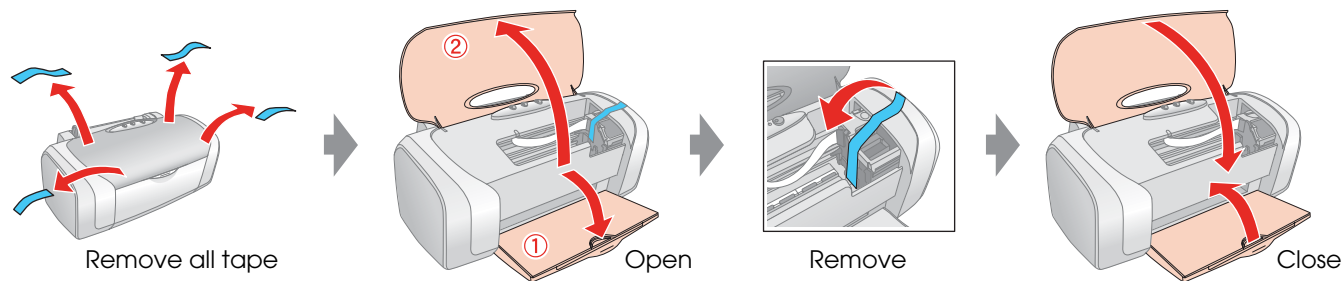




3. Plugging in the Printer

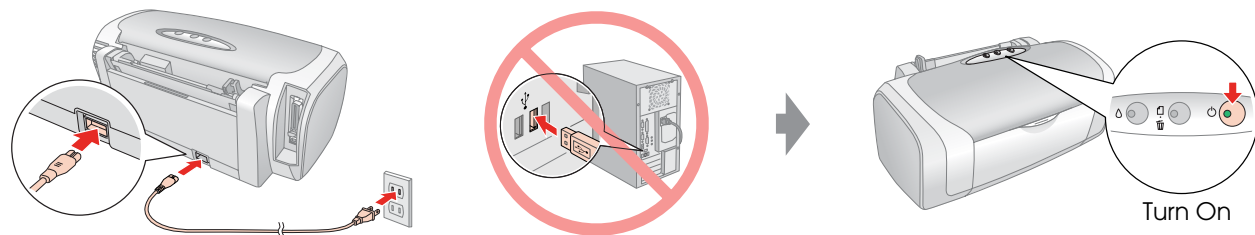


4. Shaking the Ink Cartridges

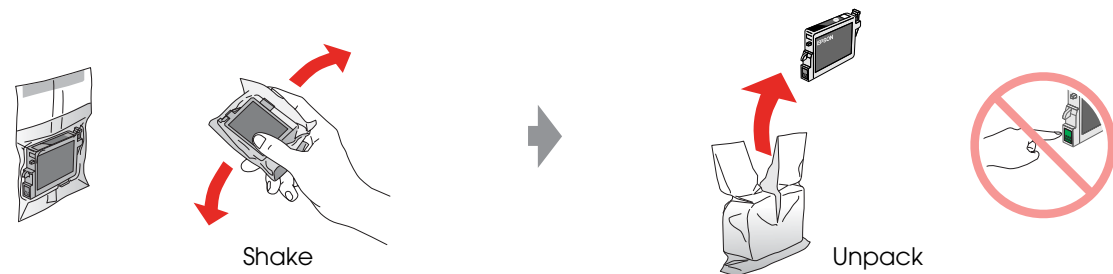

5. Installing the Ink Cartridges

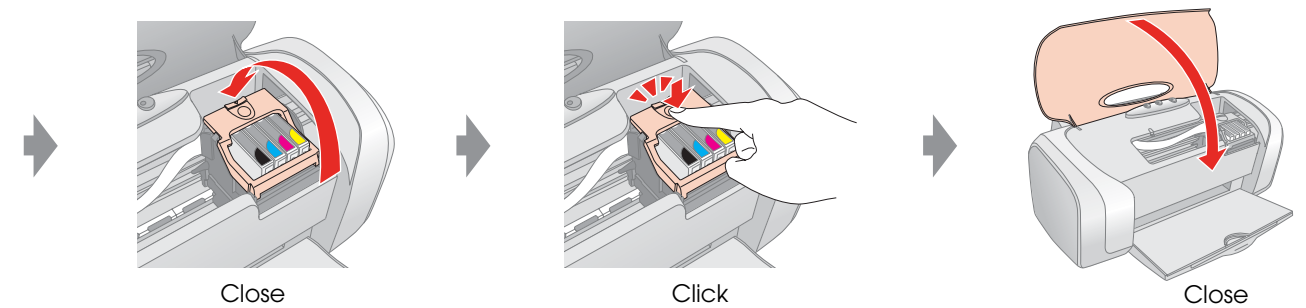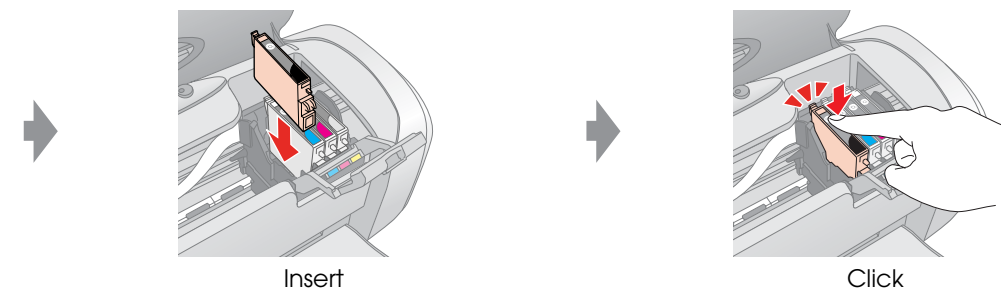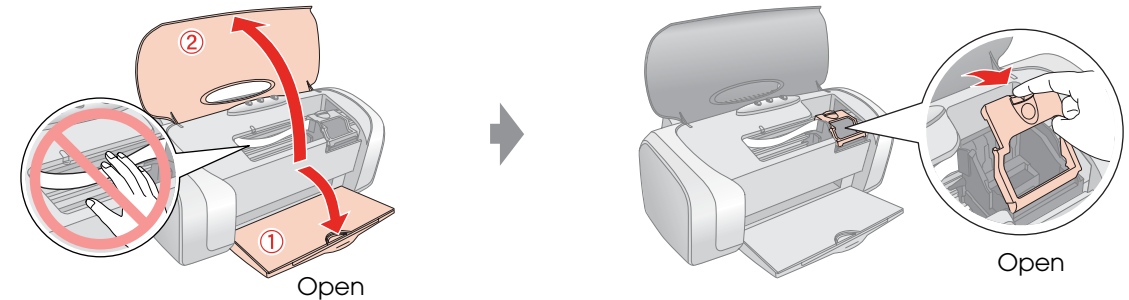


6. Ink Charging

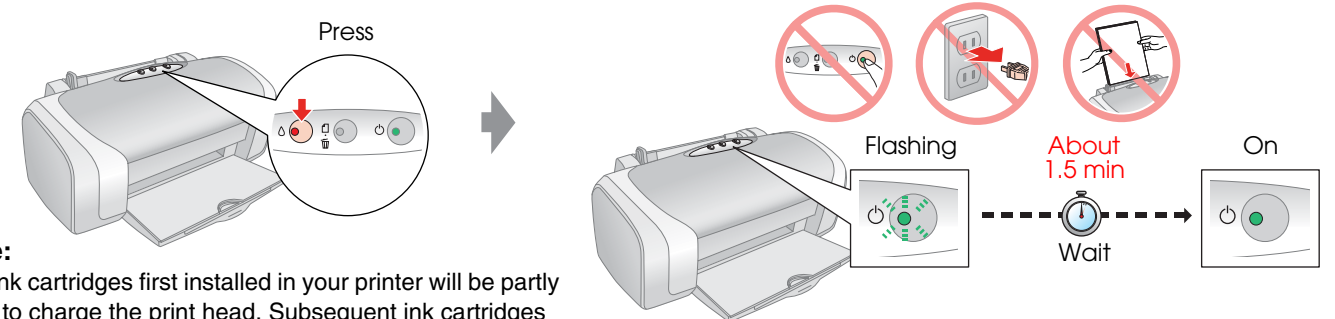


Note: The ink cartridges first installed in your printer will be partly used to charge the print head. Subsequent ink cartridges will last for their full rated life.



7. Connecting to a Computer

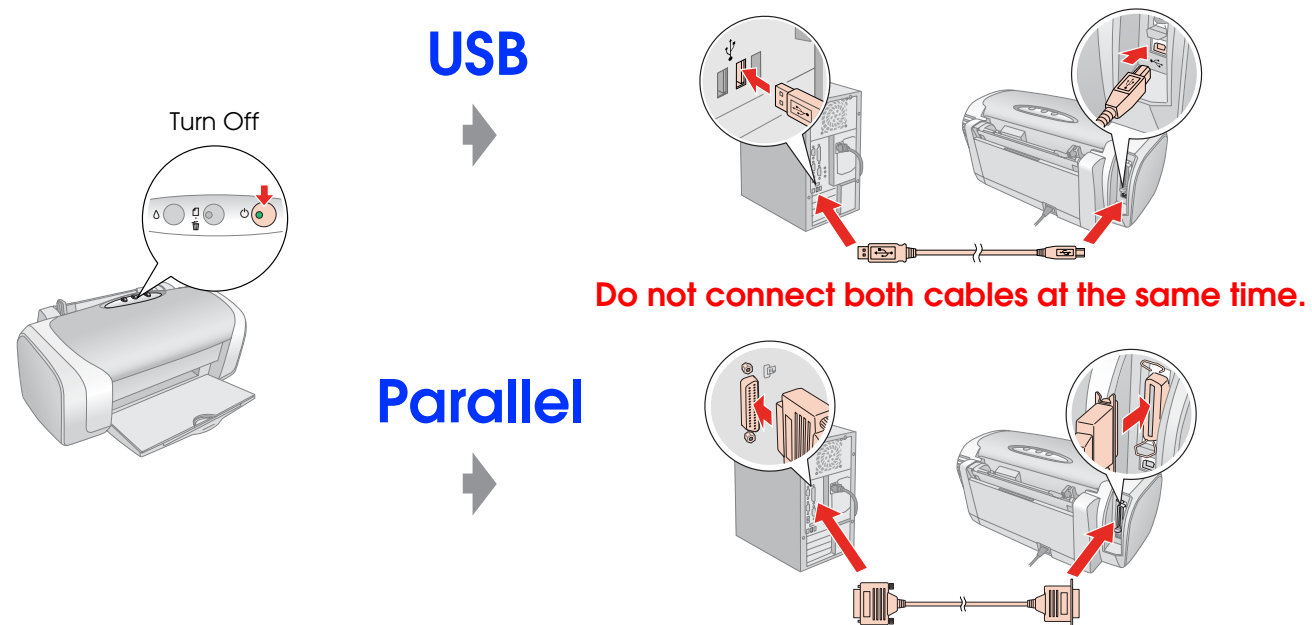


9. Loading Paper

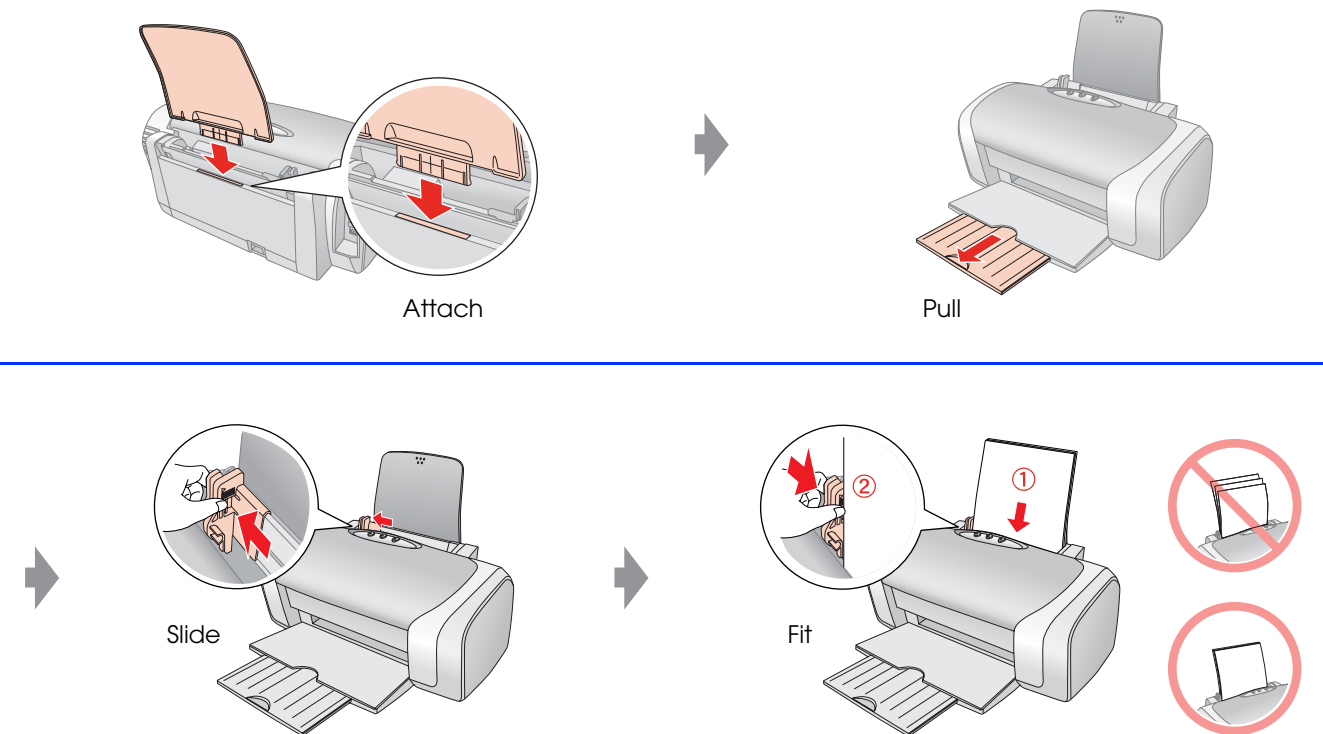


8. Installing the Software

For Windows

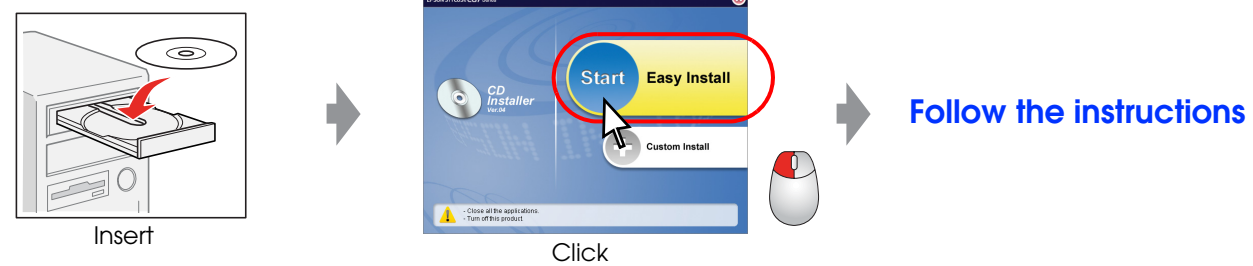

- ❑ No dialog box? ➔ Double-click CD-ROM icon.
- ❑ For Windows XP x64, download the driver. ➔ <http://www.epson.com>

For Mac OS X

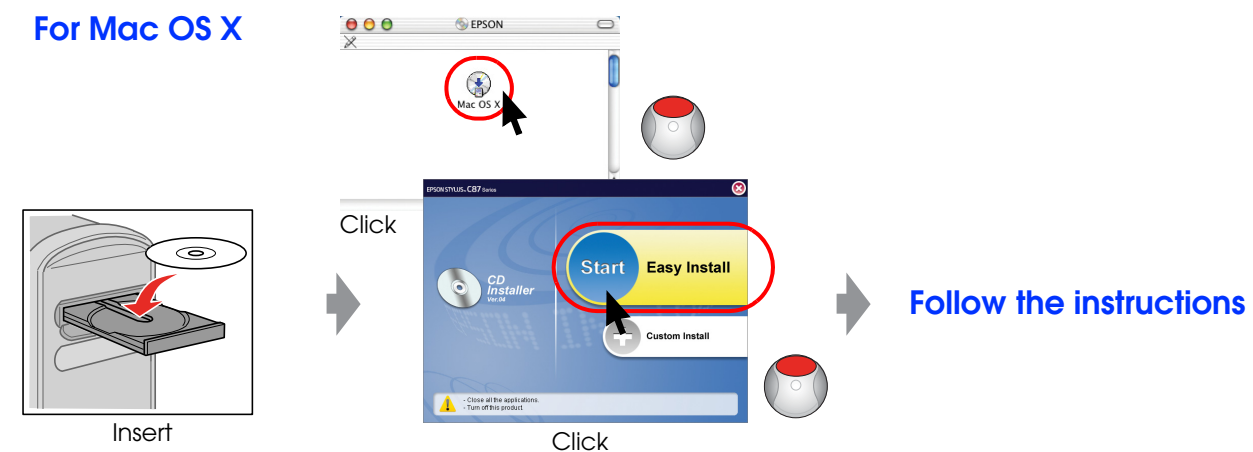

- ❑ For Intel-based Macintosh users, EPSON cannot guarantee the printer driver will operate properly if you install it from the software CD-ROM. Download the driver. ➔ <http://www.epson.com>
- ❑ For Mac OS 9, download the driver. ➔ <http://www.epson.com>

10. Getting More Information

