


EPSON STYLUS™ PHOTO 1410 Series

Start Here


1. Unpacking

Note:


Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

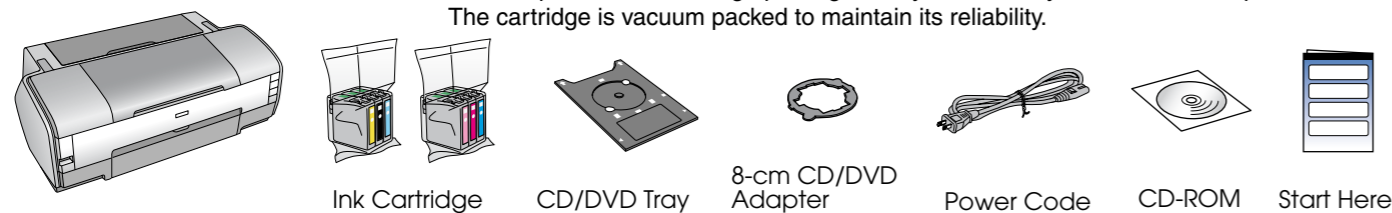

2. Removing Protective Tape

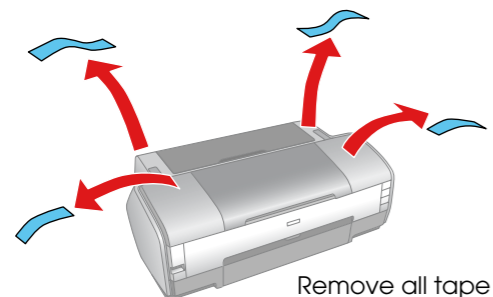


3. Turning On

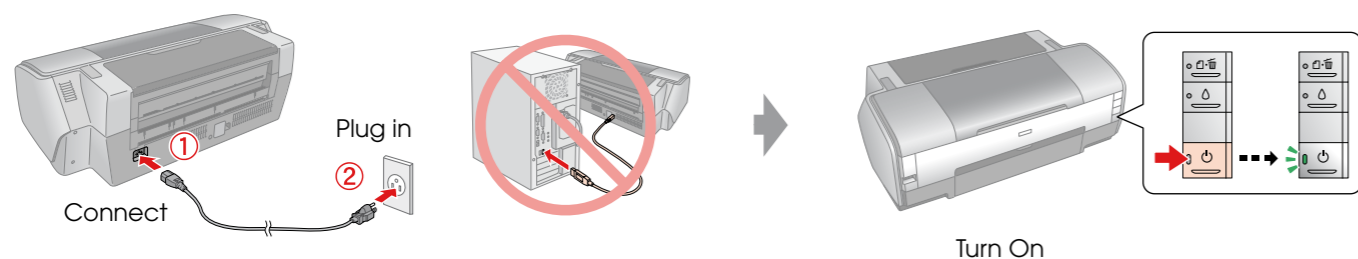


4. Preparing the Ink Cartridges



5. Installing the Ink Cartridges

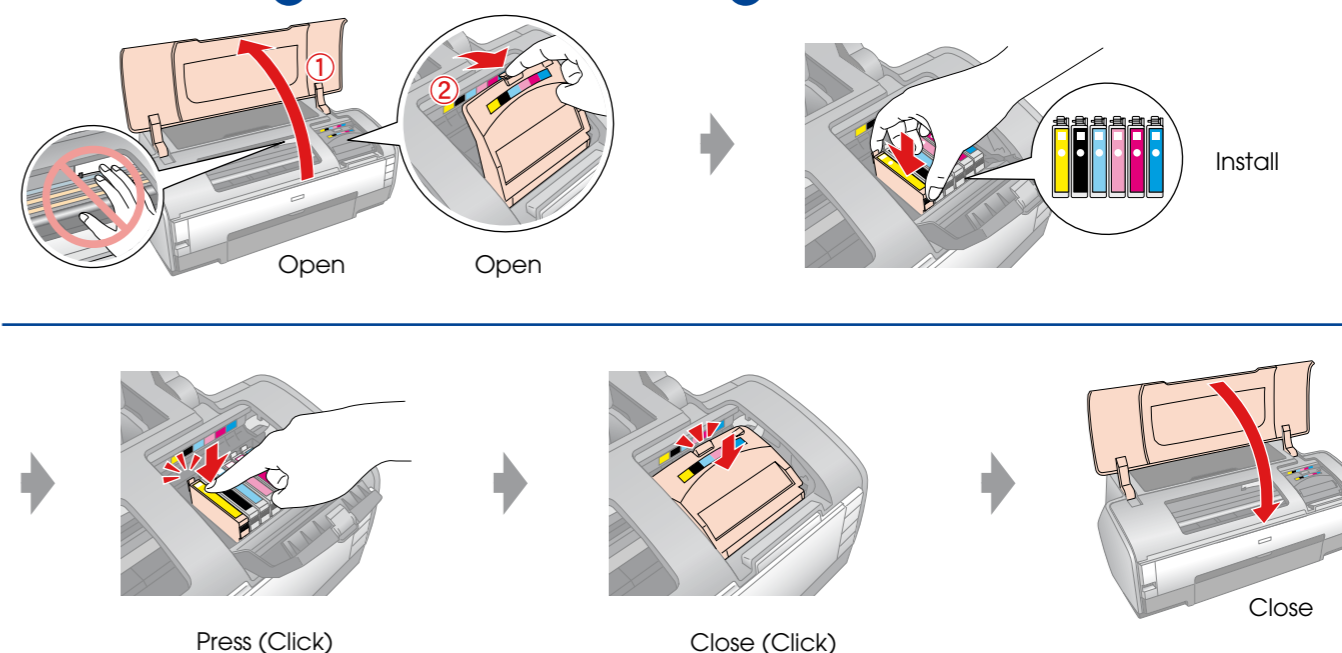

6. Ink Charging

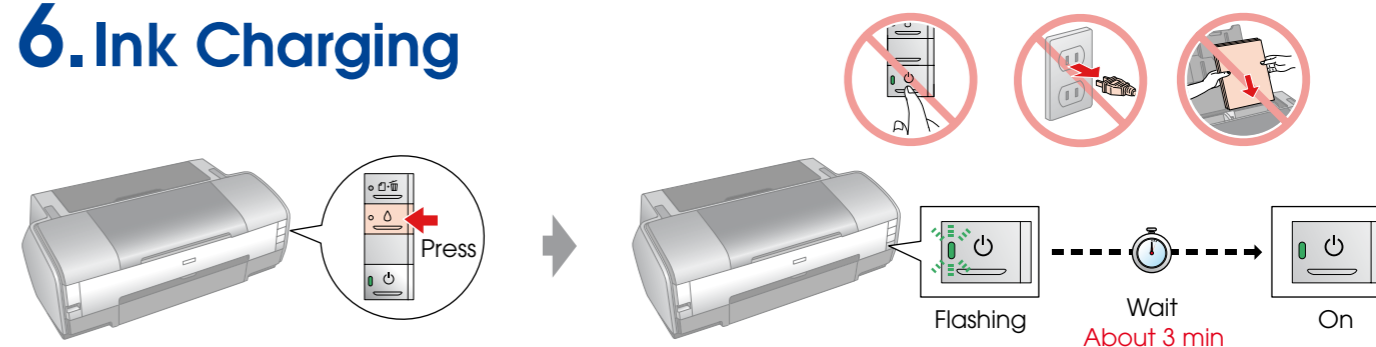

Note: The ink cartridges first installed in your printer will be partly used to charge the print head. Subsequent ink cartridges will last for their full rated life.



Copyright © 2006 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX XX-XX-XX XXX





Turn over




7. Installing the Software

Do not connect the USB cable until you are instructed to do so.

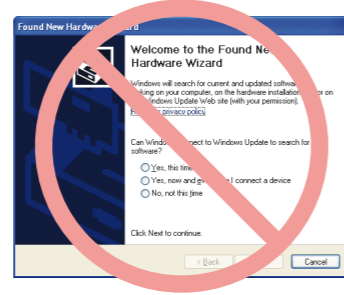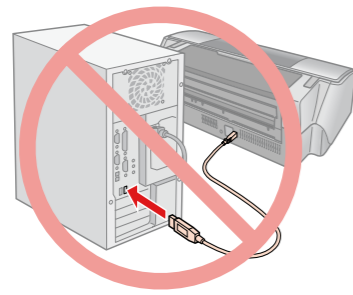

If this screen appears, click **Cancel**.

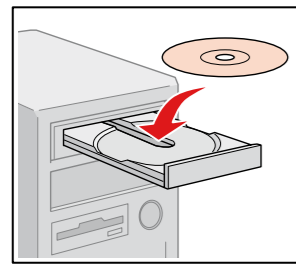

Insert

For Windows

For Mac OS X





Double Click



Click


❑ For Windows. No installation screen? ➔ Double-click the CD-ROM icon.

➔ Follow the instructions.

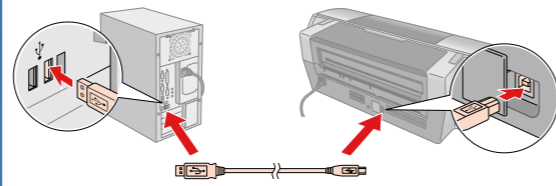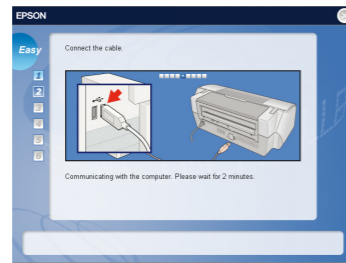


When this screen appears, connect to your PC.

➔ Follow the instructions.

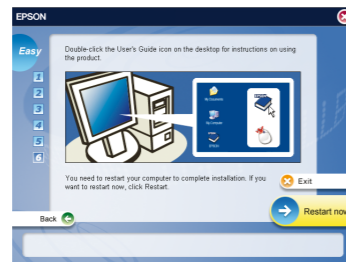

Installation complete.


8. Loading Paper

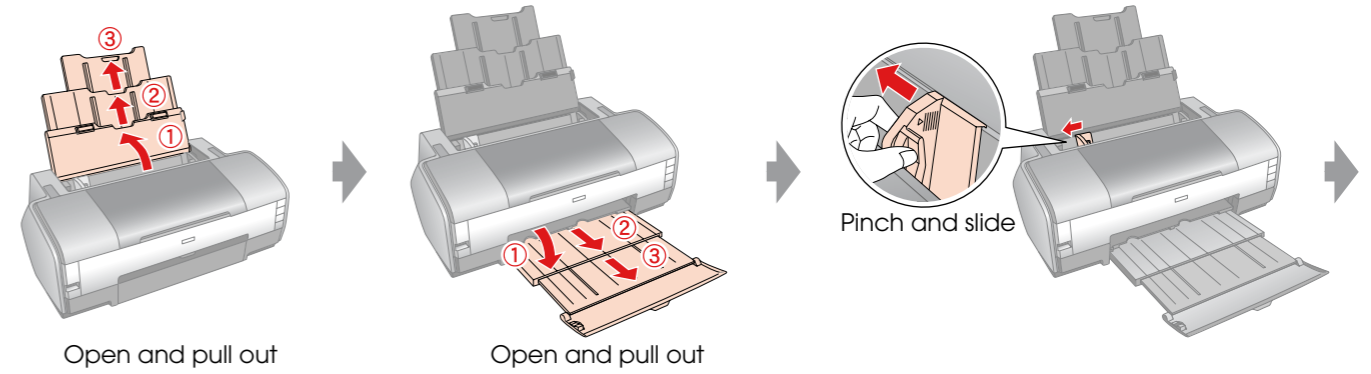

Open and pull out

Open and pull out

Pinch and slide

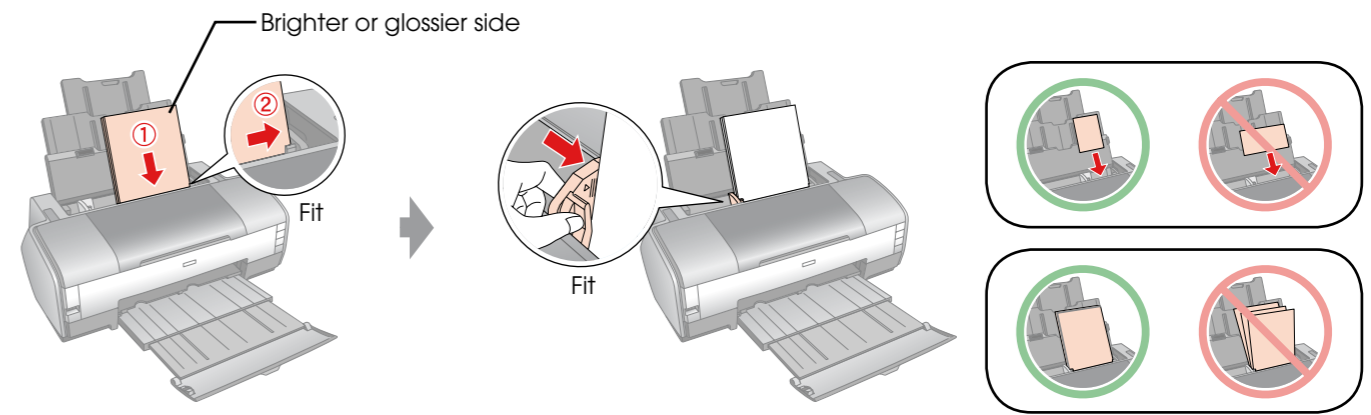


Brighter or glossier side

Fit

Fit

9. Getting More Information

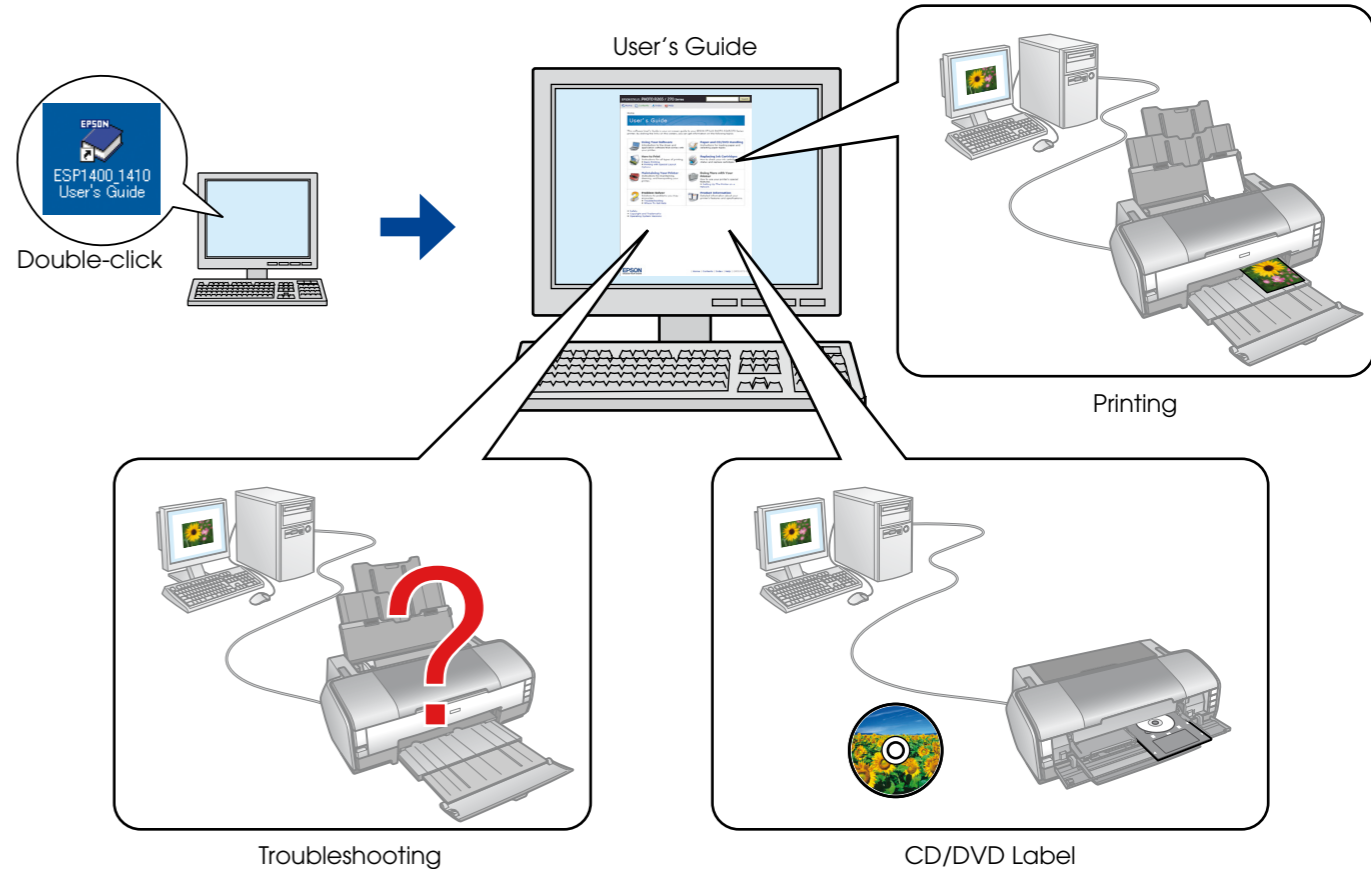

Double-click

User's Guide

Printing

Troubleshooting

CD/DVD Label