


# Notice



Insert the paper into the rear manual feed slot until the paper meets resistance. Maintain a constant pressure against the paper until you feel the printer pull the paper in slightly. Let go of the paper to allow the printer to adjust the paper position.

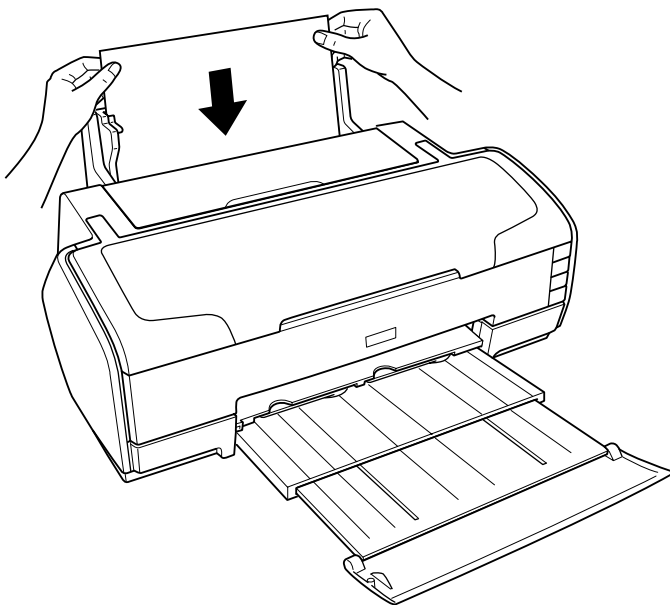

\*410159500\*

Copyright© 2005 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX XX.XX-XX XXX