EPSON STYLUS THE PHOTO R250 Series


Start Here

1. Unpacking





2. Removing Protective Tape




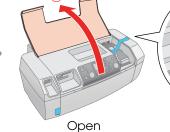





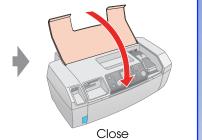

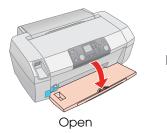

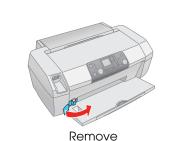


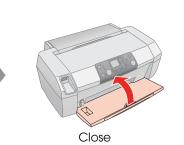


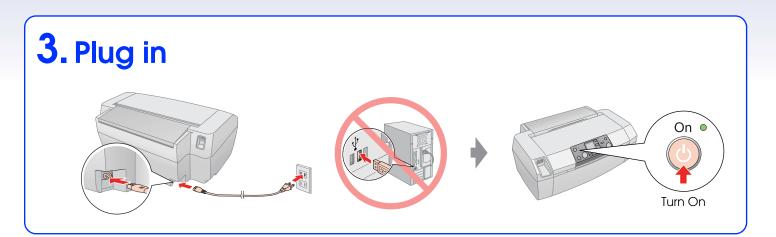

4. Installing the Ink Cartridges



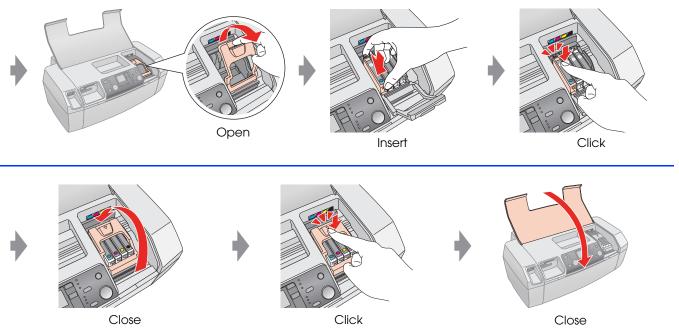

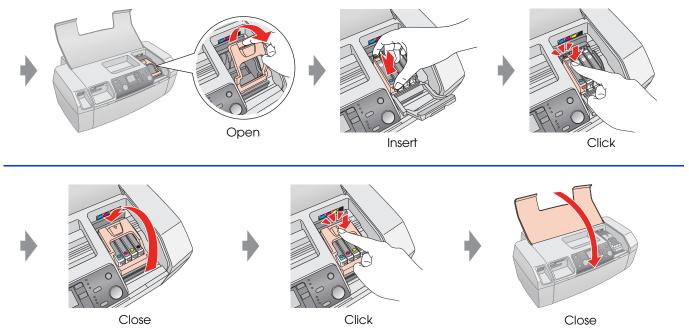


5. Ink Charging

Press Note: The ink cartridges first installed in your printer will be partly

used to charge the print head. Subsequent ink cartridges will last for their full rated life.






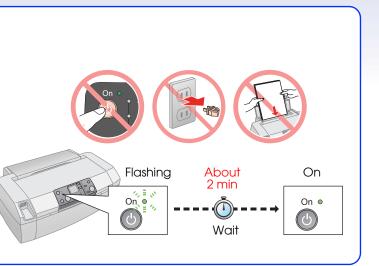




6. Connecting to a Computer

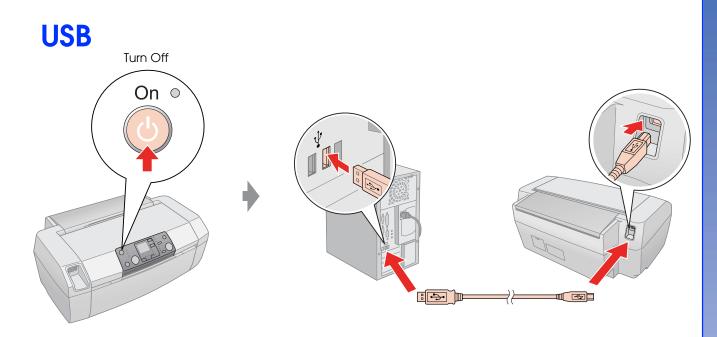

7. Installing the Software



□ No dialog box? → Double-click CD-ROM icon.

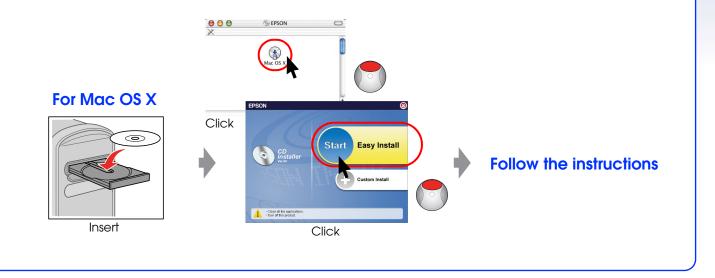

8. Loading Paper

