


# EPSON STYLUS™ PHOTO R2880

## Start Here







 : Warnings must be followed carefully to avoid bodily injury.

### 1. Unpacking

#### Note:

- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Store the CD/DVD tray flat.

Choose between Photo Black and Matte Black cartridge according to the purpose of your printing.  
**Keep the other cartridge unopened until you decide to exchange them.**

 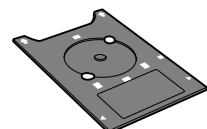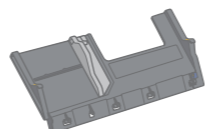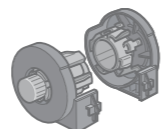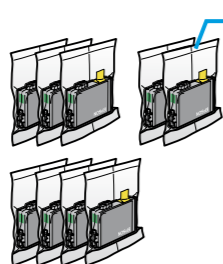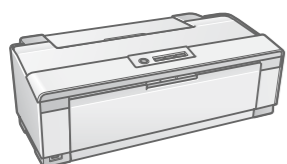

CD/DVD Tray

8-cm CD/DVD Adapter

Power Cord

CD-ROM


Start Here

9 Ink Cartridges

Roll Paper Holder

Rear Sheet Guide

### 2. Removing Protective Materials

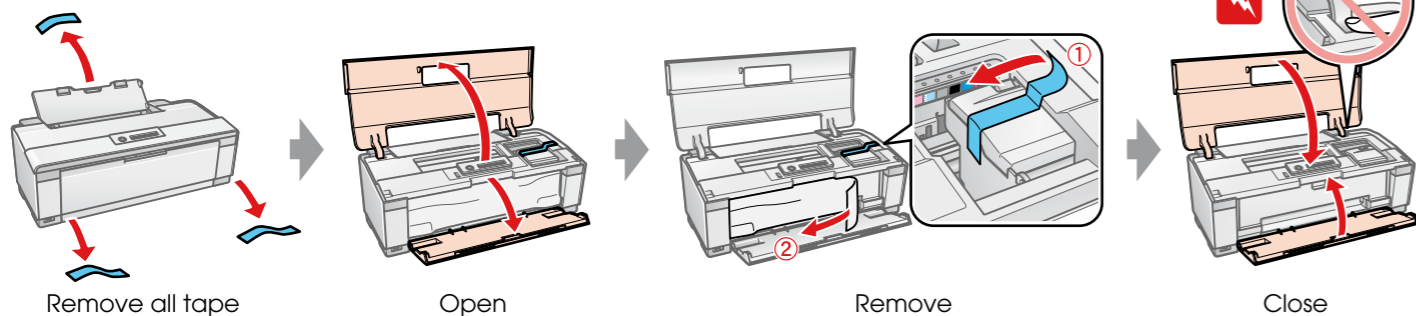


Remove all tape

Open

Remove

Close

### 3. Turning On

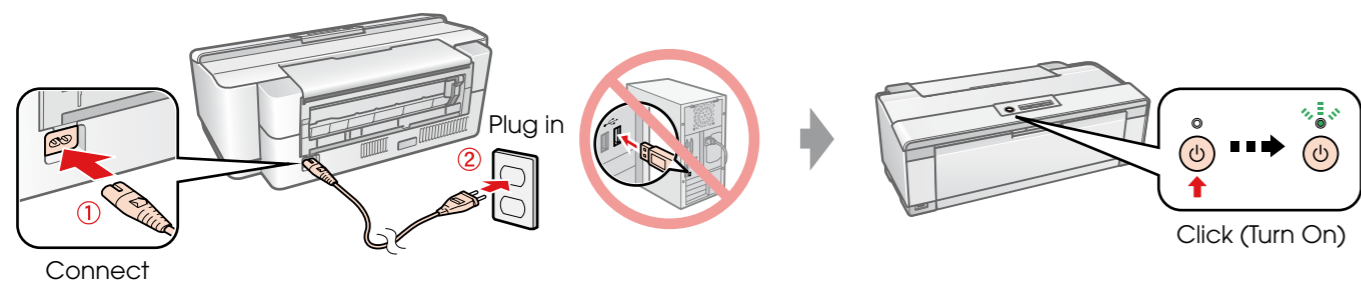


Connect

Plug in

Click (Turn On)

### 4. Preparing the Ink Cartridges

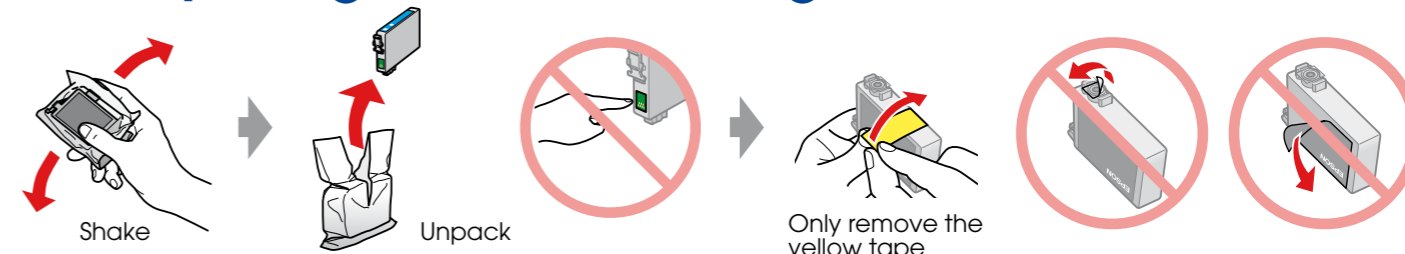

Shake


Unpack

Only remove the yellow tape

#### Note:

When shaking ink cartridges, you may hear a sound from inside.

### 5. Installing the Ink Cartridges

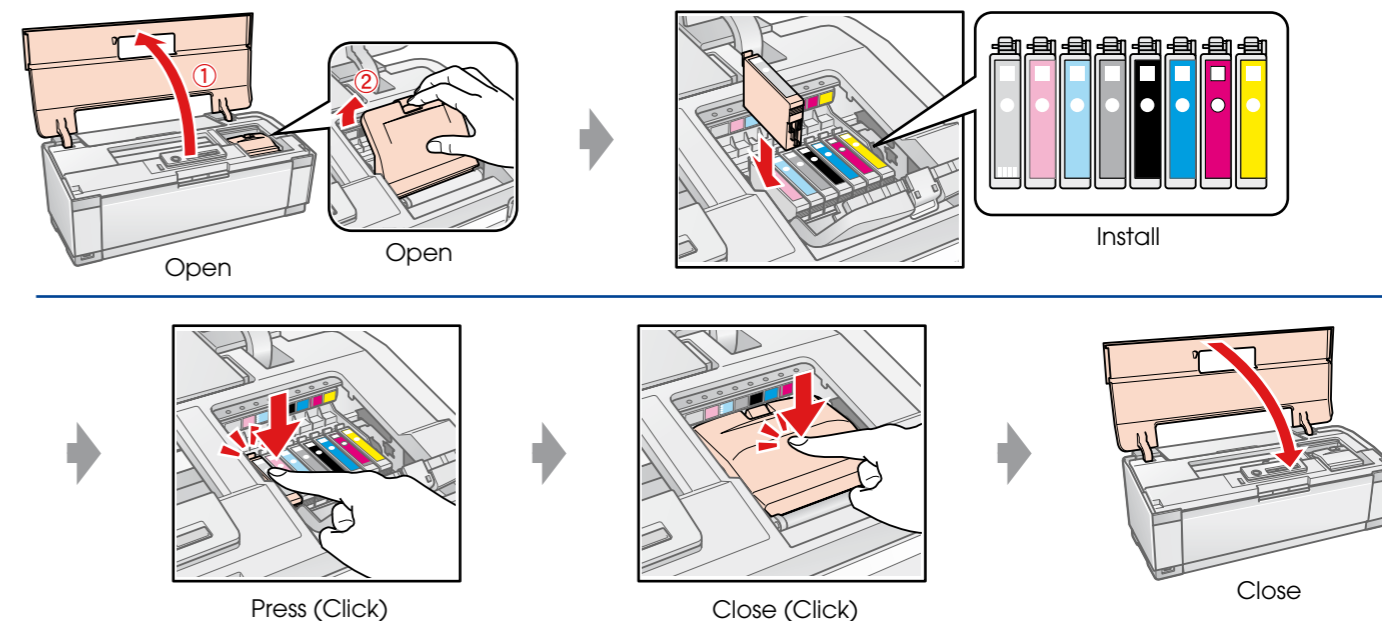

Open

Open


Install

Press (Click)

Close (Click)

Close

### 6. Ink Charging

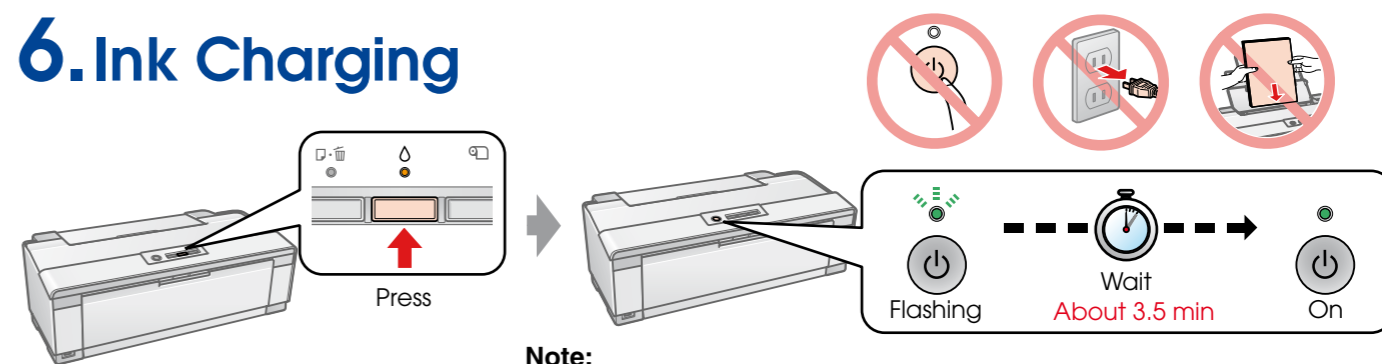

Press

Wait  
About 3.5 min

On

#### Note:

The ink cartridges first installed in your printer will be partly used to charge the print head. These cartridges print fewer pages compared to subsequent ink cartridges.



\*411302000\*

Copyright © 2008 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX




Turn over




# 7. Installing the Software



Do not connect the USB cable until you are instructed to do so.

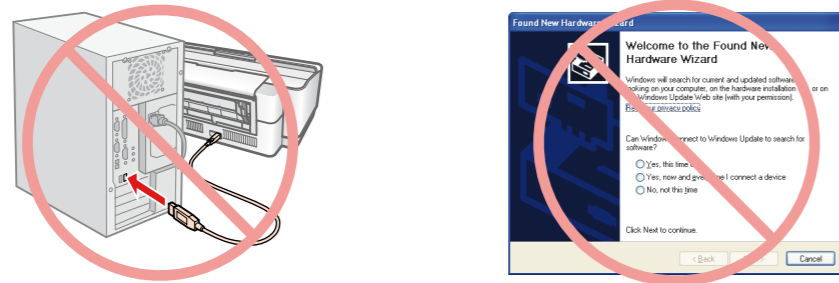



If this screen appears, click **Cancel**.

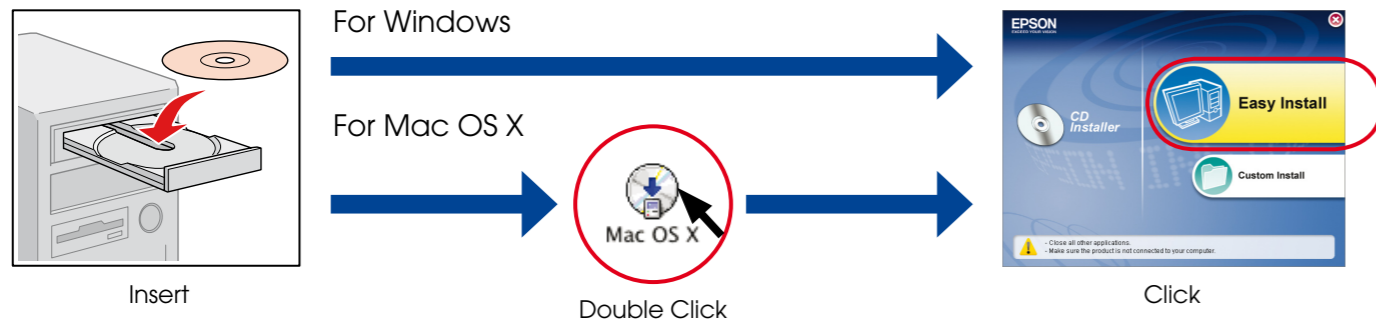

For Windows. No installation screen? → Double-click the CD-ROM icon.

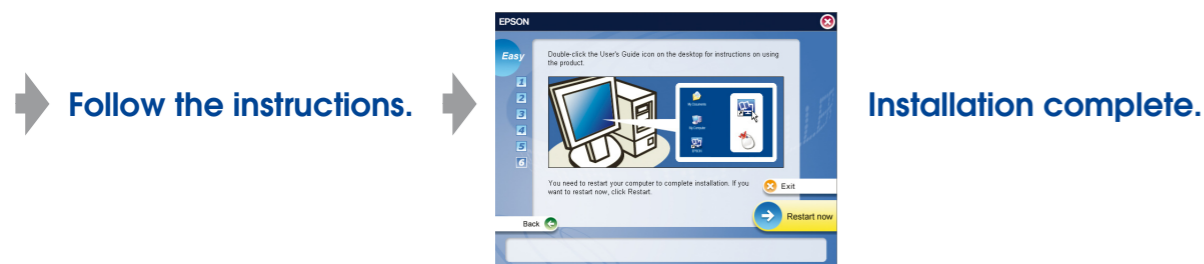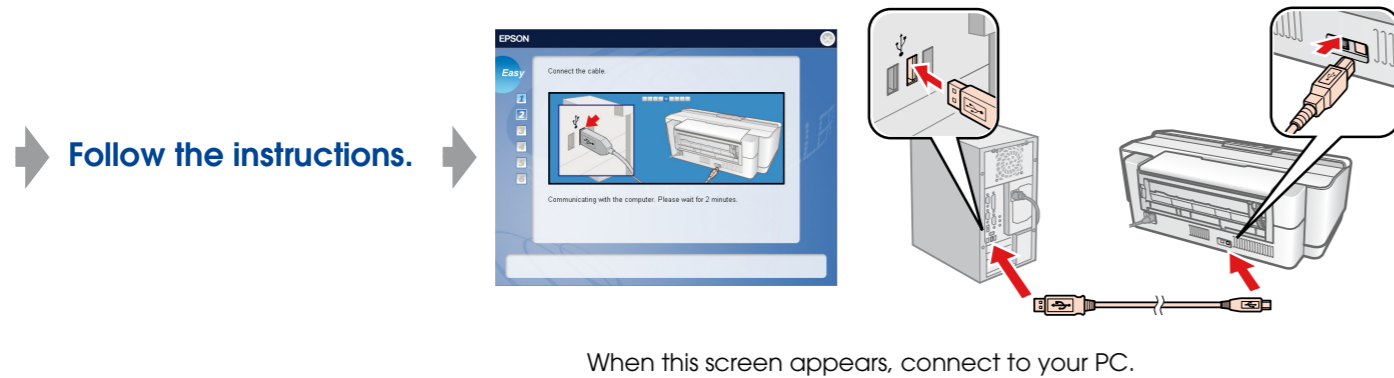

# 8. Loading Paper

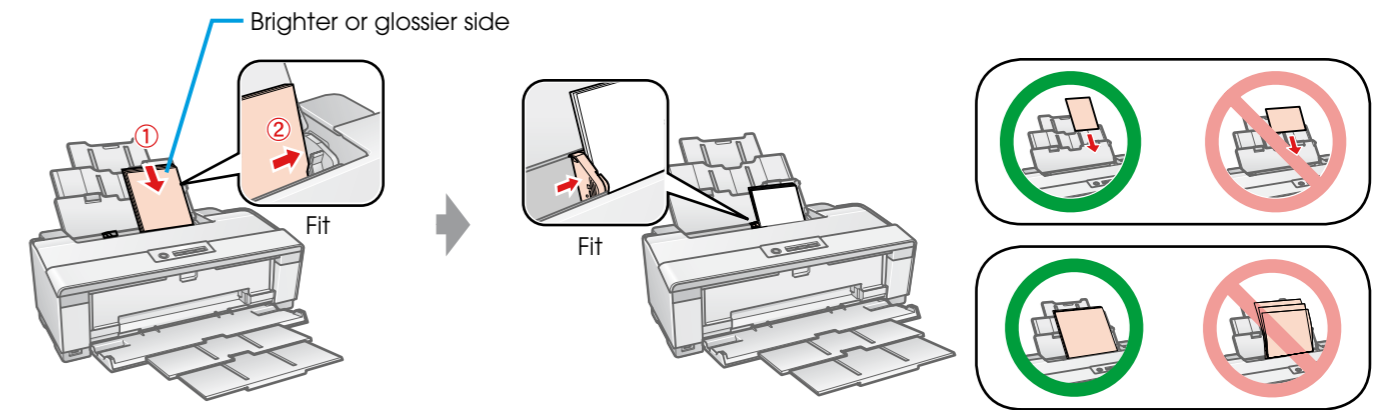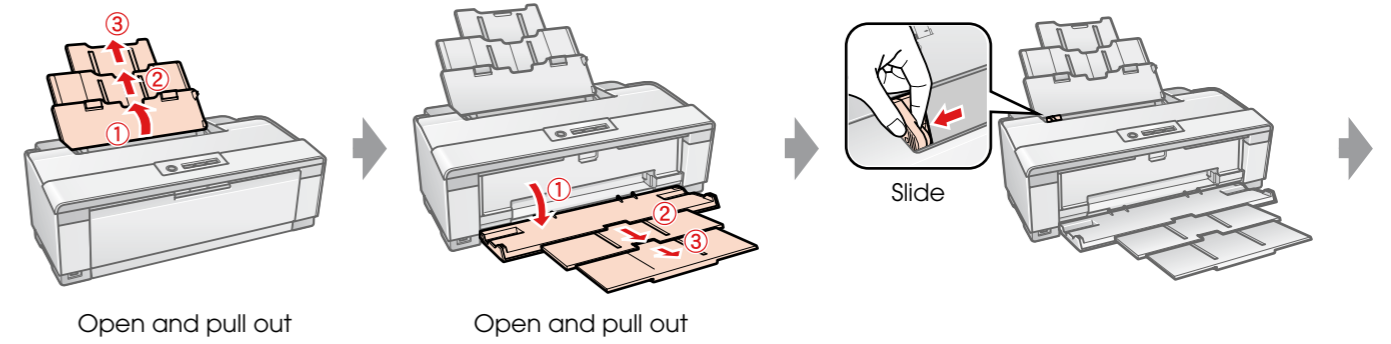

# 9. Getting More Information

