
Color Laser Printer

EPSON Aculaser C4100 Paper Jam Guide



Warnings must be followed carefully to avoid bodily injure.


When the LCD panel displays the Jam XXX error message, choose the appropriate description to clear the jammed paper. For more information, see the Online Reference Guide.

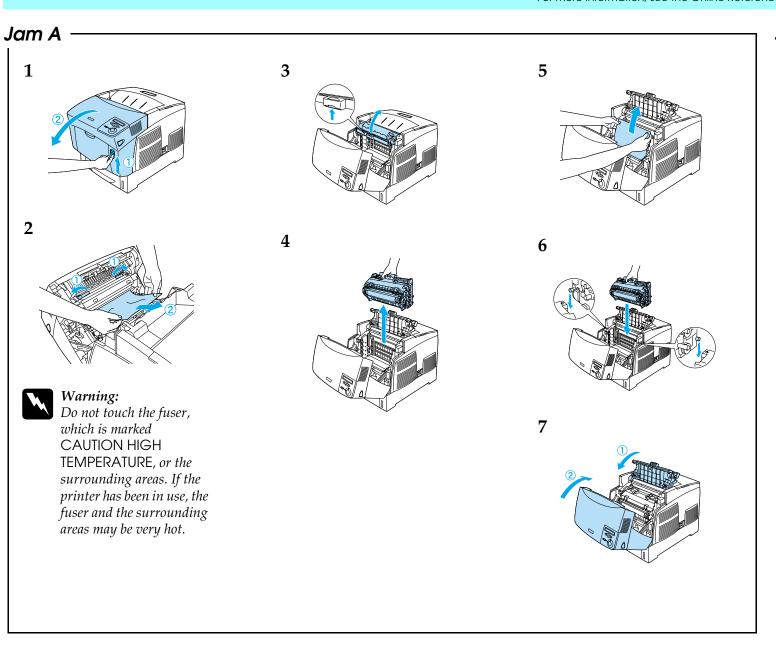

Jam at the MP tray -

Remove the paper from the MP tray and remove any jammed paper. Open and close cover A to clear the message on the LCD panel, then reload the paper. The printer resumes printing from the page that jammed.




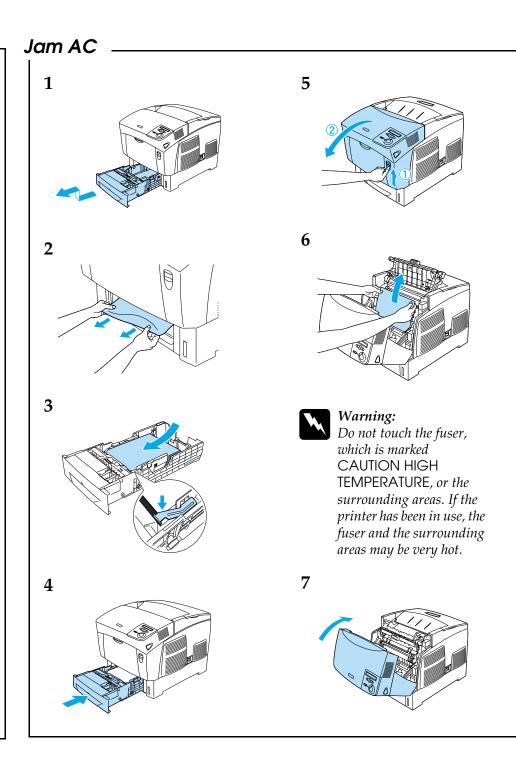

When a paper jam occurs repeatedly at the paper cassettes, see the Online Reference Guide.

Jam ABC

To clear the paper jam, first clear at Jam AC, and then clear at Jam B.

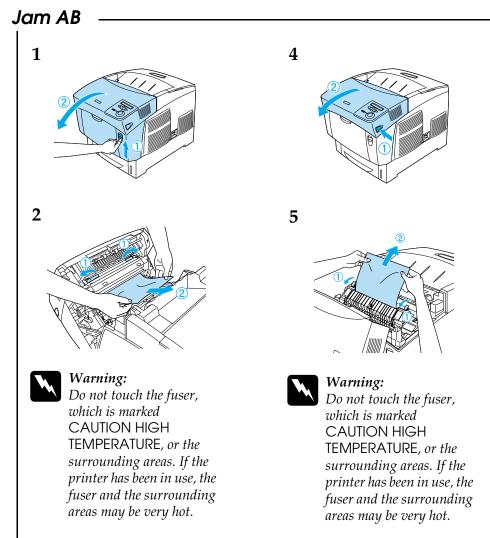

6



