

For Windows® XP x86 Users

Use the printer driver included with Windows XP x86.

To install the printer driver included in Windows XP x86, follow the steps below.

How to install the printer driver

1. Turn the printer off, then connect the printer to your computer.
2. Turn the printer on.
3. Turn your computer on and run Windows XP x86.
4. The printer is detected by your computer which then automatically begins installing the printer driver included with Windows XP x86.

When you have upgraded Windows 2000 to Windows XP x86, uninstall the printer driver that was installed in Windows 2000.

If you cannot install the printer driver according to the steps shown above, contact customer support services.

