


EPSON STYLUS™ **OFFICE BX600FW/OFFICE TX600FW/SX600FW** Series

EPSON
EXCEED YOUR VISION

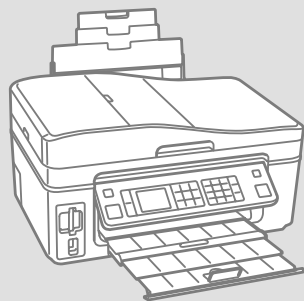




Basic Operation Guide




- for use without a computer -


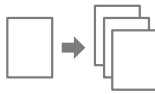
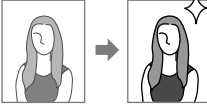






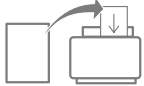



About This Guide



Follow these guidelines as you read your instructions:






				
<p>Warning: Warnings must be followed carefully to avoid bodily injury.</p>	<p>Caution: Cautions must be observed to avoid damage to your equipment.</p>	<p>Must be observed to avoid bodily injury and damage to your equipment.</p>	<p>Note: Notes contain important information and hints for using the printer.</p>	<p>Indicates a page number where additional information can be found.</p>

	  9
Handling	

			  19
Copy mode	Photos/Documents	Color restoration	

				  27
Photos mode	Photos	Index Sheet	Greeting Card	










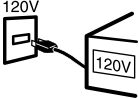


	
Fax mode	

			  41
Backup Data	Scan mode	Print Ruled Papers	

Contents


Important Safety Instructions.....	5
Guide to Control Panel.....	6
Using the LCD Screen.....	7
Restarting Automatically after a Power Failure	8
Adjusting the Angle of the Panel.....	8
Power Saving Function.....	8
Handling Media	
Selecting Paper.....	10
Loading Paper.....	11
Placing Originals	13
Inserting a Memory Card.....	16
Copying	
Copying Documents.....	20
Reprint/Restore Photos	22
Copy Mode Menu List	25
Photos Mode	
Printing Photos.....	28
Printing in Various Layouts	30
Printing Photo Greeting Cards.....	32
Printing Photos from an Index Sheet	35
Photos Mode Menu List.....	38
Other Mode	
Printing Ruled Paper.....	42
Scanning to a Memory Card.....	44
Scanning to a Computer	45
Backup to External Storage Device	46
Other Mode Menu List.....	47
Setup Mode (Maintenance)	
Checking the Ink Cartridge Status.....	50
Checking/Cleaning the Print Head.....	52
Aligning the Print Head	54
PictBridge Setup.....	56
Setup Mode Menu List.....	58
Solving Problems	
Error Messages.....	60
Replacing Ink Cartridges	61
Paper Jam	64
Print Quality Problems.....	67
Print Layout Problems.....	68
Contacting Customer Support.....	69
Index.....	70








  

 
 


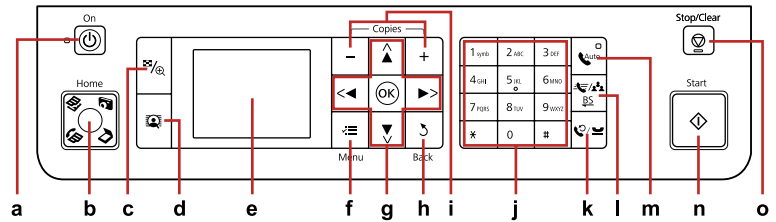
Important Safety Instructions

					
<p>Make sure the power cord meets all relevant local safety standards.</p>	<p>Place the printer near a wall outlet where the power cord can be easily unplugged.</p>	<p>Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.</p>	<p>Use only the type of power source indicated on the label.</p>	<p>Do not let the power cord become damaged or frayed.</p>	<p>Do not open the scanner unit while copying, printing, or scanning.</p>
					
<p>Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.</p>	<p>Except as specifically explained in your documentation, do not attempt to service the printer yourself.</p>	<p>Keep ink cartridges out of the reach of children and do not drink the ink.</p>	<p>If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately.</p>	<p>Do not shake ink cartridges after opening their packages; this can cause leakage.</p>	<p>If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area.</p>






Guide to Control Panel

Control panel design varies by area.








a	b	c	d	e
	Home			
Turns on/off printer.	Returns to the top menu. When on the top menu, switches between Copy, Photos, Scan, and Fax mode.	Changes the view of photos or crops the photos.	Switches View PhotoEnhance On or Off. For details, see  ➔ 7	Displays a preview of the selected images, or displays settings.
f	g	h	i	j
				
Displays detailed settings for each mode.	Selects photos and menus.	Cancels/returns to the previous menu.	Sets the number of copies.	Specifies the date/time or the number of copies, as well as fax numbers.
k	l	m	n	o
				
Displays last dialed number dialed. Enters a pause when entering or editing numbers. You can also use “-”.	Displays speed dial list in Fax mode. Enters a back space when entering/editing numbers/characters.	Turns Auto Answer on/off. Enters a space when entering/editing numbers/characters.	Starts copying/printing.	Stops copying/printing/faxing or reset settings.

Using the LCD Screen

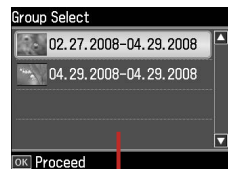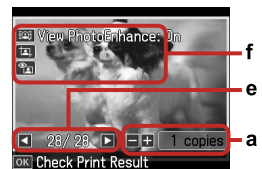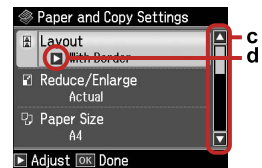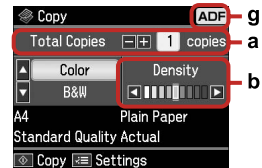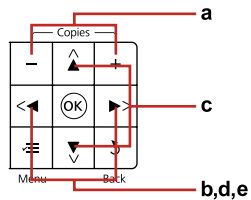

a	b	c	d	e
Press Copies + or - to set the number of copies for the selected photo.	Press ◀ or ▶ to set the density.	Press ▲ or ▼ to select the menu item. The highlight moves up or down.	Press ▶ to open the setting item list.	Press ◀ or ▶ to change the photo displayed on the LCD screen.

    f	g
<p>The PhotoEnhance function automatically corrects color and improves the quality of your images. You can preview the adjusted images by pressing the  button and changing View PhotoEnhance to On.</p> <p>When the Fix Red-Eye setting is set to On-This Photo or On-All Photos, the  icon is displayed.</p> <p>The  icon is displayed on a cropped image.</p> <p>When the image is cropped, an  icon is displayed.</p>	<p>In Fax mode and Copy mode, the ADF icon is displayed in the upper right of the LCD screen when there is a document in the automatic document feeder.</p>

h	
<p>When you have more than 999 photos on your memory card, the LCD screen displays a message to let you select a group. Images are sorted by the date they were taken. To select and show images in a group, press ▲ or ▼ to select a group and then press OK. To re-select a group or folder, select Setup, Select Location, and then select Group Select or Folder Select.</p>	<p></p> <p>The actual screen display may differ slightly from those shown in this guide.</p>

Restarting Automatically after a Power Failure

If the power supply fails while the printer is in fax standby mode or printing, it restarts automatically when the power is reconnected. The printer beeps for about two seconds.



Do not put your hand inside the printer until the print head stopped moving.




Restart is stopped if any of the buttons on the control panel are pressed before the LCD turns on.



Depending on the circumstances before the power failure occurred, it may not restart. In this case, you can restart by pressing **On**.

Adjusting the Angle of the Panel

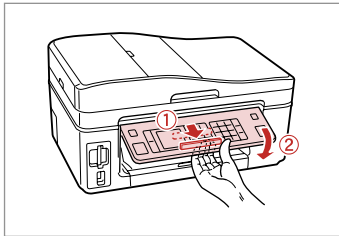

To lower or close the panel, unlock by pulling the lever on the rear until it clicks, and then lower down. Simply lift the panel to raise it.

Power Saving Function

After 13 minutes of inactivity, the screen turns black to save energy. Press any button (except **On**) to return the screen to its previous state.

Handling Media



Selecting Paper


The availability of special paper varies by area.

If you want to print on this paper...	Choose this Paper Type on the LCD screen	Loading capacity (sheets)
(a) Plain paper	Plain Paper	[12 mm] *1
(b) Epson Premium Ink Jet Plain Paper	Plain Paper	80
(c) Epson Bright White Ink Jet Paper	Plain Paper	80
(d) Epson Matte Paper Heavyweight	Matte	20
(e) Epson Photo Quality Ink Jet Paper	Matte	80
(f) Epson Premium Glossy Photo Paper	Prem.Glossy	20
(g) Epson Premium Semigloss Photo Paper	Prem.Glossy	20
(h) Epson Photo Paper	Photo Paper	20
(i) Epson Ultra Glossy Photo Paper	Ultra Glossy	20
(j) Epson Glossy Photo Paper	Photo Paper	20

*1 Paper with a weight of 64 to 90 g/m².


Loading Paper

1

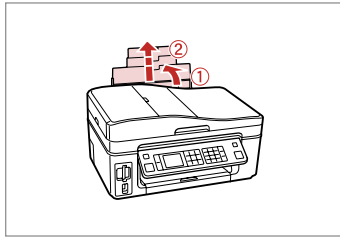

Open and slide out.

2

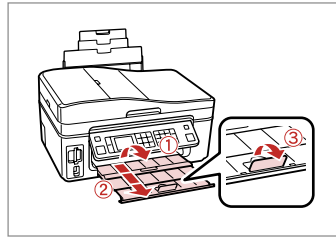


Open.




See the online User's Guide when using Legal size paper.

3

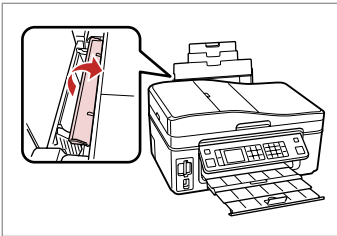


Flip forward.

4

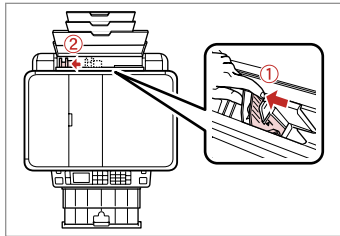


Pinch and slide.

5

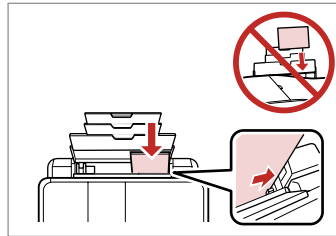

Load printable side up.

6

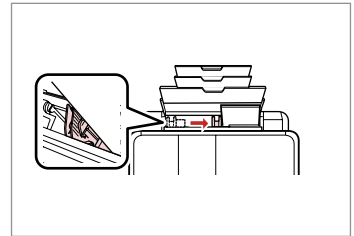


Fit.



Do not load paper above the ▼ arrow mark inside the edge guide.

7

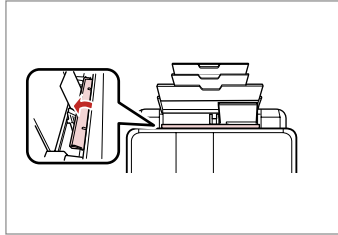


Flip back.



Align the edges of the paper before loading.




Do not use paper with binder holes.

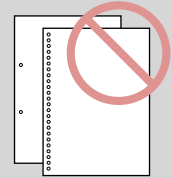

Placing Originals


Document Table

1

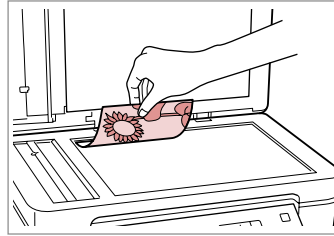


Place face-down horizontally.

2

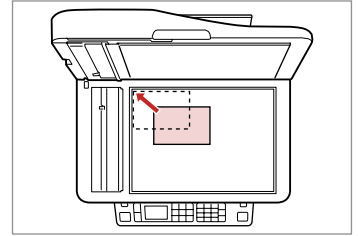

Fit to the corner.

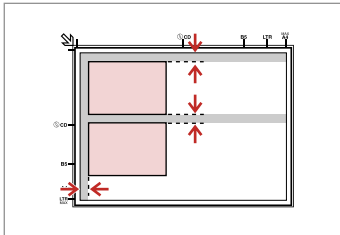

Place photos 5 mm apart.



You can reprint one photo or multiple photos of different sizes at the same time, as long as they are larger than 30 × 40 mm.



When there is a document in the automatic document feeder and on the document table, priority is given to the document in the automatic document feeder.

Automatic Document Feeder (ADF)


Usable originals

Size	A4/Letter/Legal
Type	Plain paper
Weight	60 g/m ² to 95 g/m ²
Capacity	30 sheets or 3 mm or less (A4, Letter) / 10 sheets (Legal)

! To prevent paper jams avoid the following documents. For these types, use the document table.


- Documents held together with paper clips, staples, and so on.
- Documents that have tape or paper stuck to them. Photos, OHPs, or thermal transfer paper.
- Paper that is torn, wrinkled, or has holes.

1

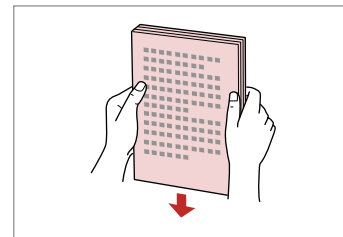


Tap to even edges.

2

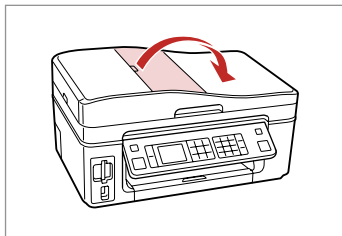


Open.

3

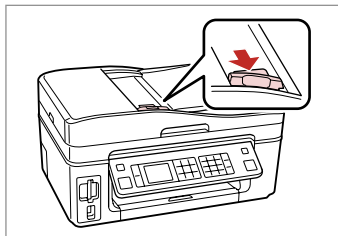


Slide.

4

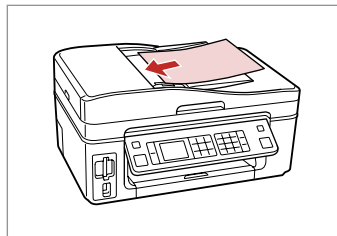

Insert facing-up.

5

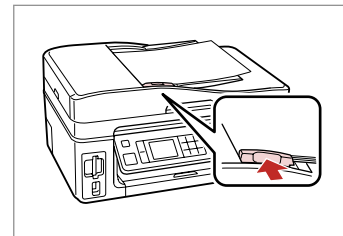

Fit.




When you use the copy function with the automatic document feeder, the print settings are fixed at zoom - 100%, Paper Type -Plain Paper, and Paper Size - A4. The print out is cropped if you copy an original larger than A4.




Inserting a Memory Card

1

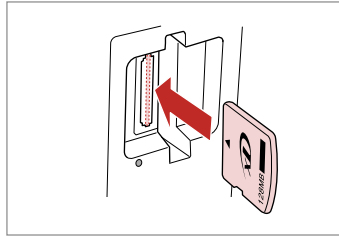

Insert one card at a time.

2

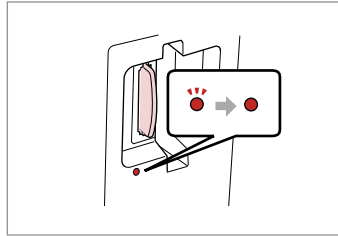


Check the light.



Do not try to force the card all the way into the slot. It should not be fully inserted.


Removing a Memory Card

1

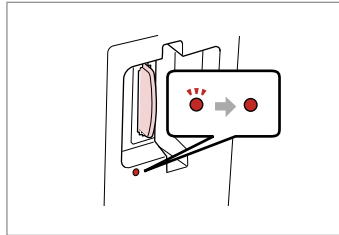

Check the light.

2

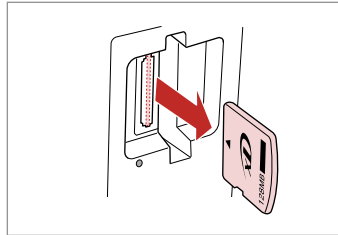

Remove.



On	Flashing

		xD-Picture Card xD-Picture Card Type M xD-Picture Card Type M+ xD-Picture Card Type H
		SD Memory Card SDHC Memory Card MultiMediaCard MMCplus
		MMCmobile *
		MMCmicro *
		miniSD * miniSDHC *
		microSD * microSDHC *
		Memory Stick Memory Stick Pro MagicGate Memory Stick
		Memory Stick Duo * Memory Stick Pro Duo * Memory Stick Pro-HG Duo * MagicGate Memory Stick Duo *
		Memory Stick Micro *

		Compact Flash
		Microdrive

*Adapter required




If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck.

Copying




Copying Documents

1  → 11

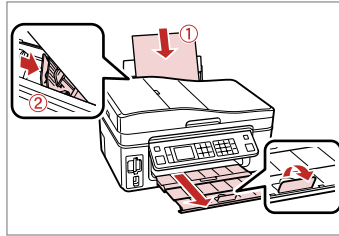


Load paper.

2  → 13

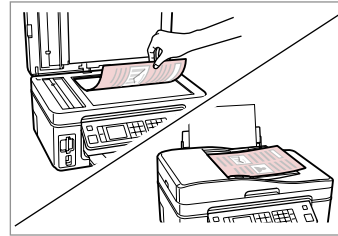


Place original horizontally.

3

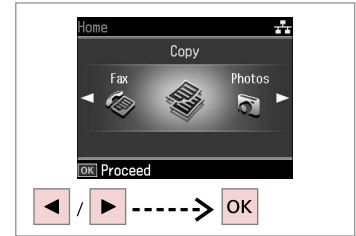


Select **Copy**.

4

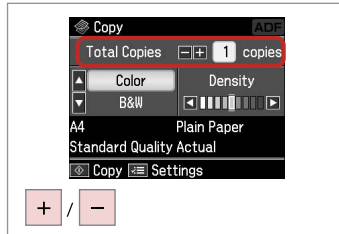


Set the number of copies.

5

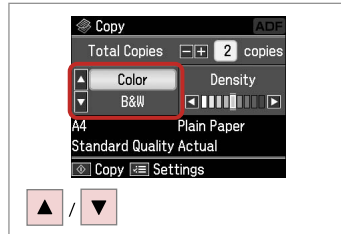


Select a color mode.

6

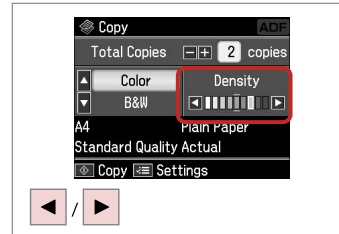


Set the density.

7

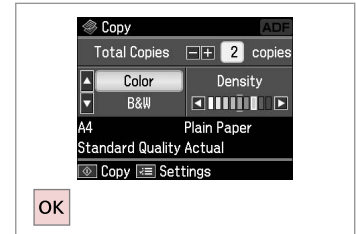


Proceed.

8

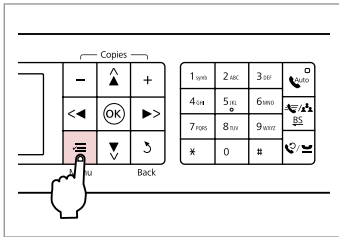


Enter the copy setting menu.

9

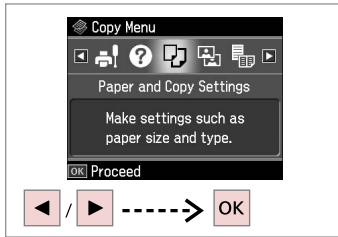

Select **Paper and Copy settings**.


10 → 25

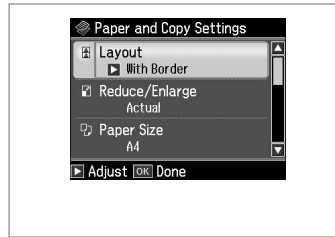

Make the appropriate copy settings.


Make sure you set the Paper Size and Paper Type.

11

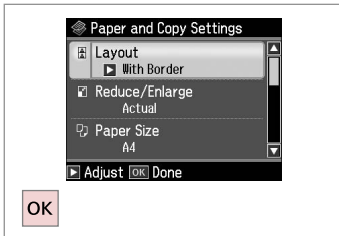

Finish the settings.


12

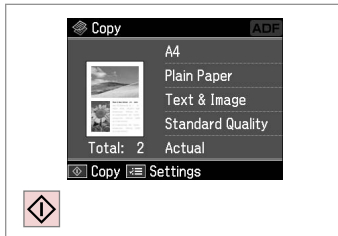

Start copying.


Reprint/Restore Photos

1 → 11

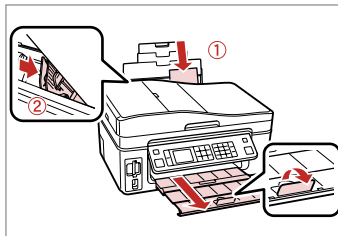


Load paper.

2 → 13

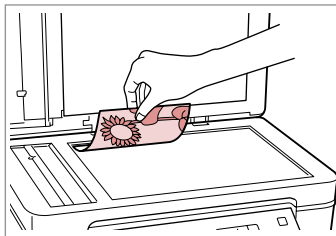


Place original horizontally.

3

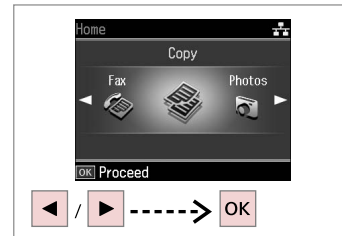


Select **Copy**.

4

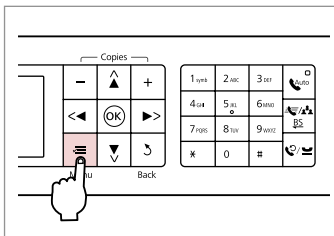

Enter the copy setting menu.

5

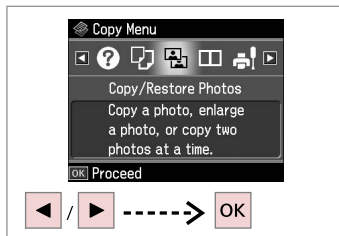


Select **Copy/Restore Photos**.

6




Select On or Off.

7

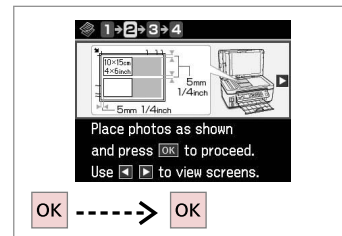

Proceed.

8

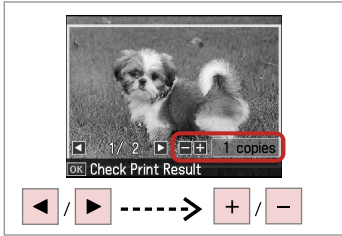

Set the number of copies.




If you scanned two photos, repeat step 8 for the second photo.

9




Proceed.

10

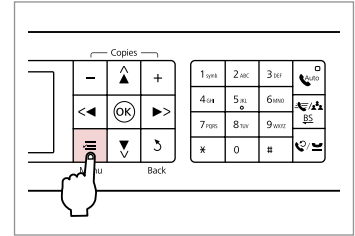


Enter the copy setting menu.

11

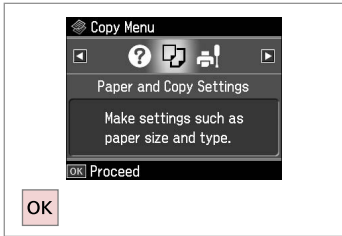

Proceed.

12 25

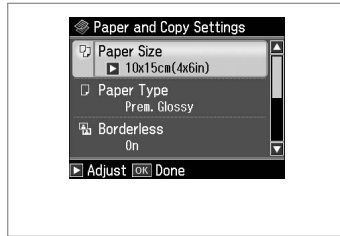


Make the appropriate print settings.



Make sure you set the Paper Size and Paper Type.

13

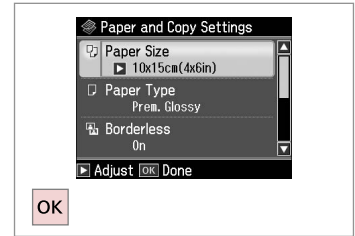

Finish the settings.




14



Start copying.



Copy Mode Menu List

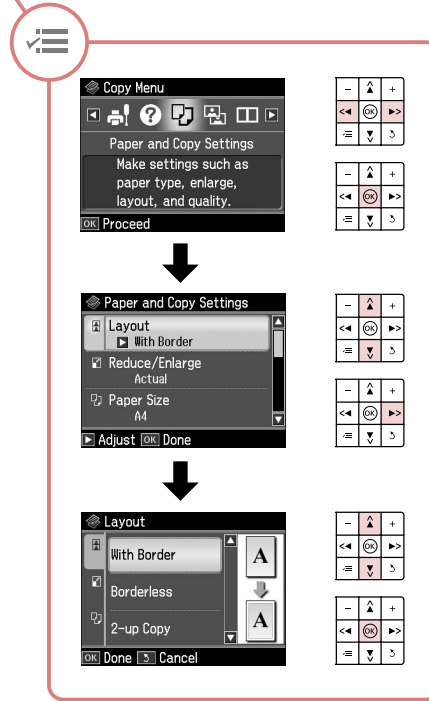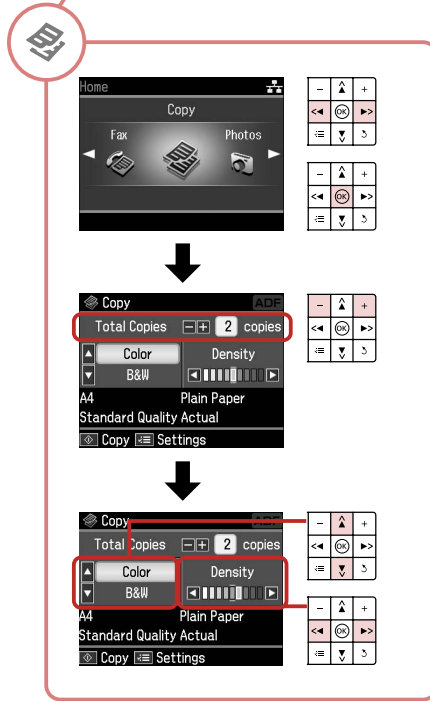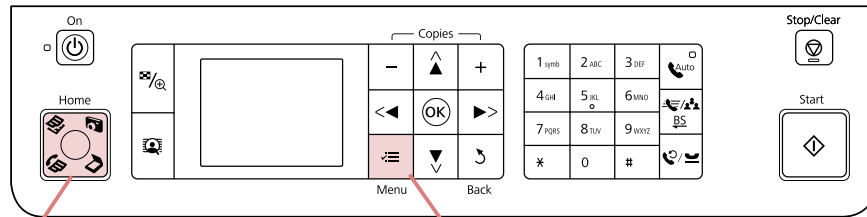

☰ Print settings for Copy Mode

Paper and Copy settings	Layout	With Border, Borderless * ¹ , 2-up Copy
	Reduce/Enlarge	Actual, Auto Fit Page, 10×15cm->A4, A4->10×15cm, 13×18->10×15, 10×15->13×18, A5->A4, A4->A5
	Paper Size	A4, 13×18(5×7in), 10×15cm(4×6in), A5
	Paper Type	Plain Paper, Ultra Glossy, Prem. Glossy, Glossy, Photo Paper, Matte
	Document Type	Text , Text & Image, Photo
	Quality	Draft, Standard Quality, Best
	Expansion * ²	Standard, Medium, Minimum
Copy/Restore Photos	Paper and Copy settings	Paper Size
		Paper Type
		Borderless
		Expansion * ²
		Filter
Copy Layout Wizard		
Maintenance	🔧 ➔ 58	
Problem Solver		

*¹ Your image is slightly enlarged and cropped to fill the sheet of paper. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing.


*² Select the amount the image is expanded when printing Borderless photos.

Photos Mode




Printing Photos

1  → 11

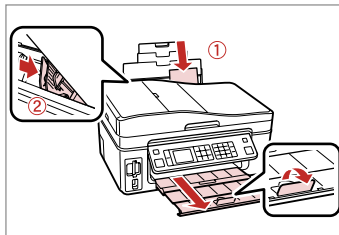


Load photo paper.

2  → 16

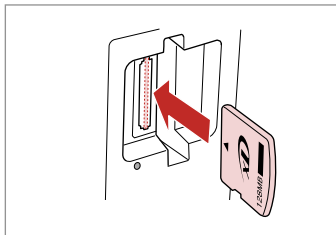


Insert a memory card.

3

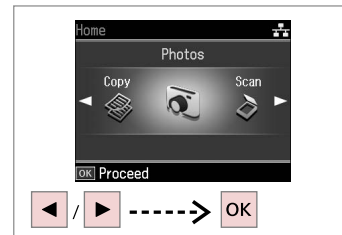

Select **Photos**.

4

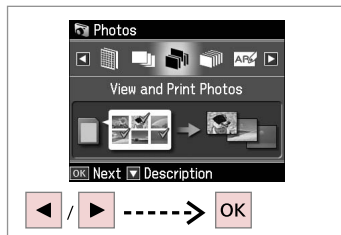


Select **View and Print Photos**.

5



Select a photo.

6

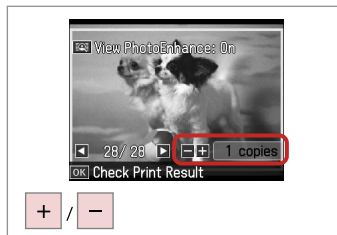


Set the number of copies.




To select more photos, repeat steps 5 and 6.

7

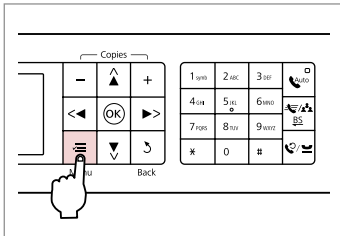

Enter the print setting menu.


8

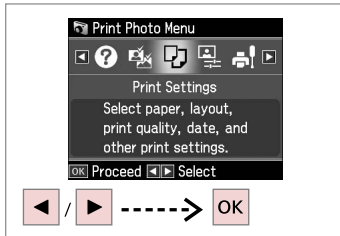

Select **Print Settings**.

9

→ 38

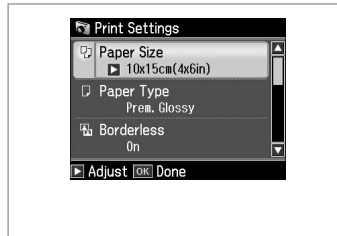

Select appropriate print settings.




Make sure you set the Paper Size and Paper Type.



To adjust photos, press \equiv and make the appropriate settings.

→ 38


10

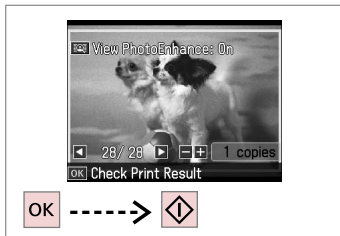

Start printing.




After step 5, you can crop and enlarge your photo. Press \mathbb{Q} and make the settings.

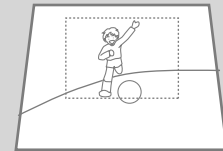


Printing in Various Layouts

1  → 11

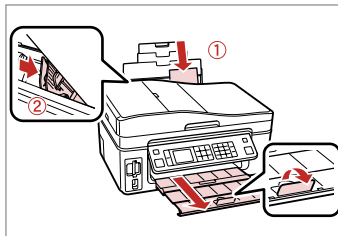


Load photo paper.

2  → 16

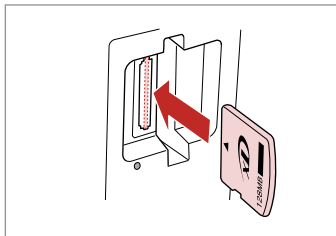


Insert a memory card.

3

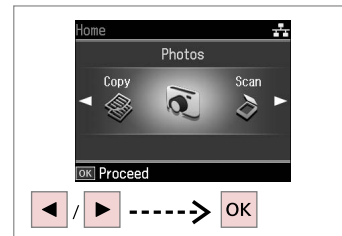


Select **Photos**.

4

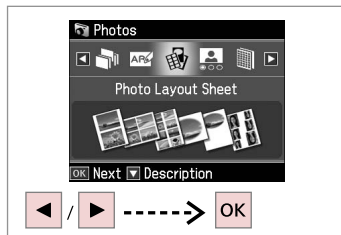


Select **Photo Layout Sheet**.

5

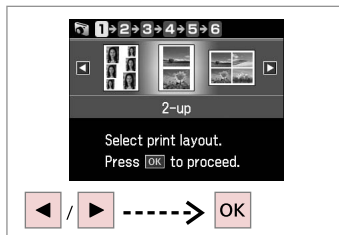


Select a layout.

6

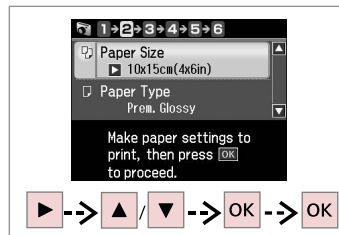

Select paper type and size.

7

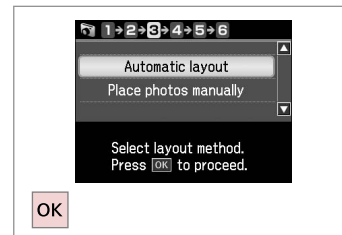


Select **Automatic layout**.




If you select **Place photos manually**, layout a photo as shown in (1) or leave a blank as shown in (2).

(1) ◀ / ▶ ---> OK

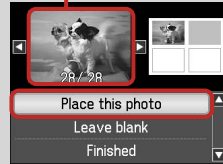

(2) OK

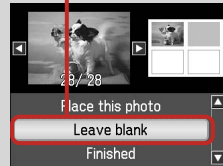

8



Proceed.

9



Select a photo.




To select more photos, repeat step 9.

10




Finish selecting photos.

11

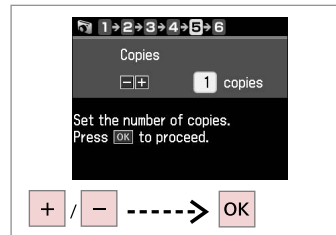


Set the number of copies.

12

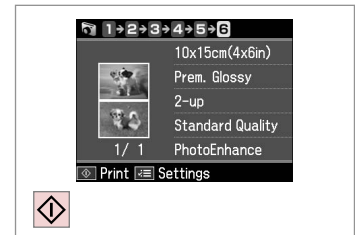


Print.

Printing Photo Greeting Cards

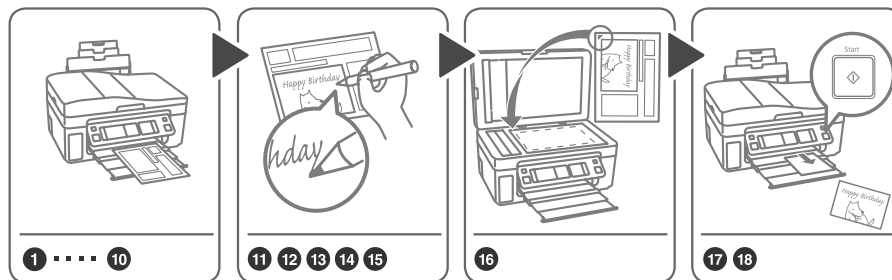


You can easily print handwritten messages or drawings onto a photo.

1 → 11

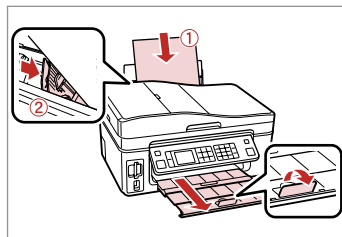


Load A4-size plain paper.

2 → 16

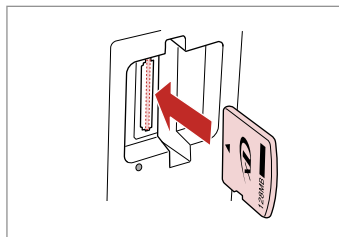


Insert a memory card.

3

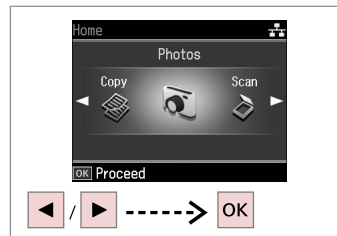


Select **Photos**.


4

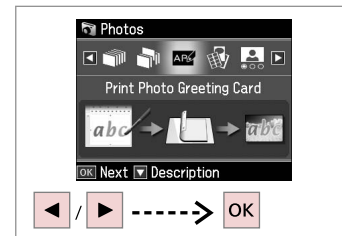


Select **Print Photo Greeting Card**.

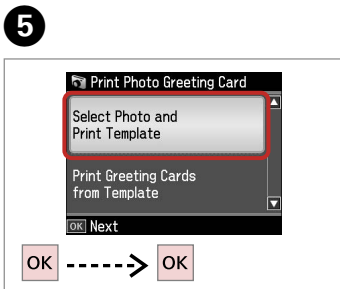


Proceed.

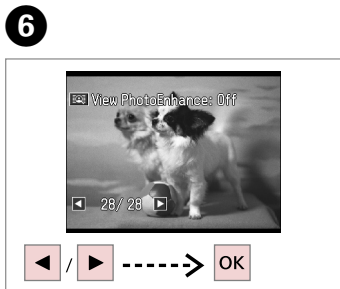


Select the photo to print.

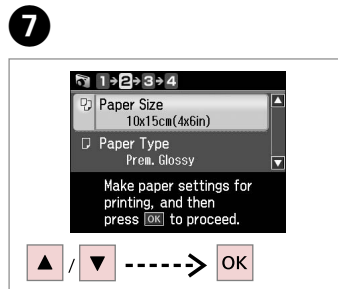


Select a setting menu.

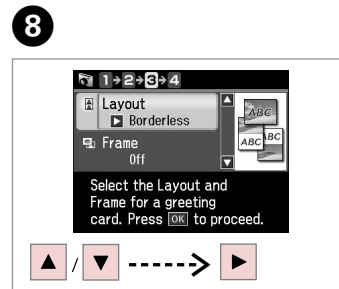


Select a settings menu.

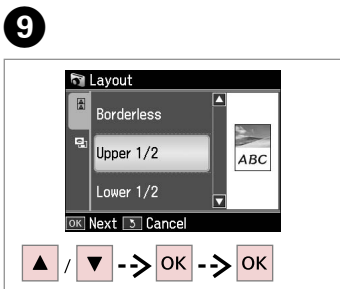

Select an item.

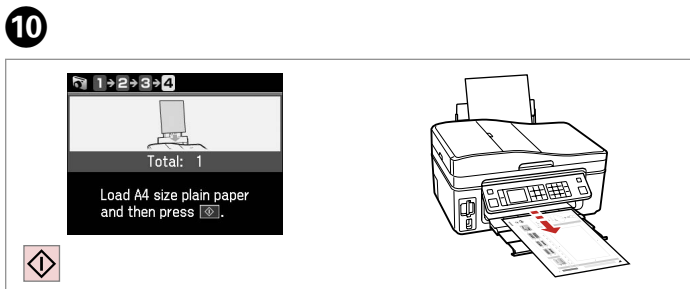


Print.

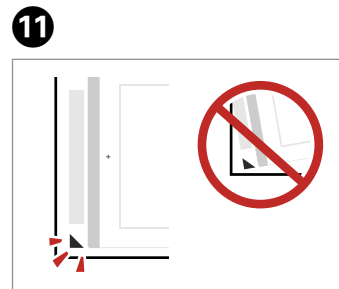


Check ▲ aligns with the corner.

12

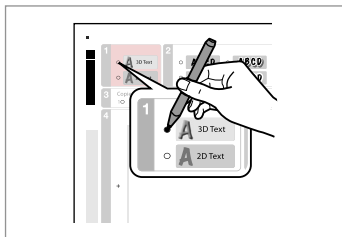


Select the style of the text.

13

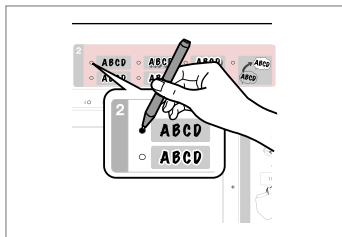


Select the type.

14

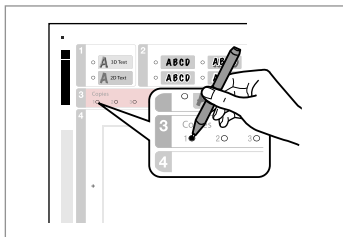


Select the number of copies.

15

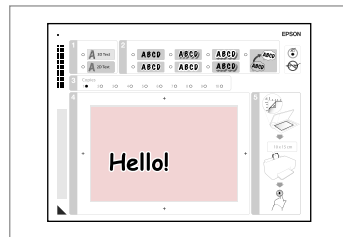


Write a message or drawing.

16  → 13

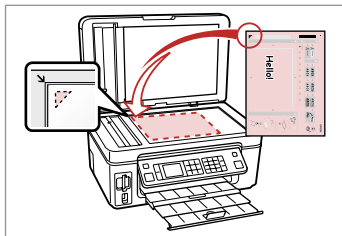


Place the template face-down.

17  → 11

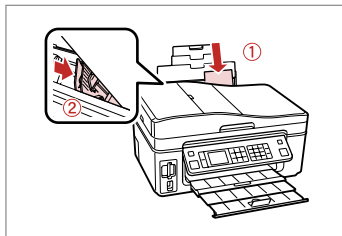


Load 10 × 15 cm photo paper.

18

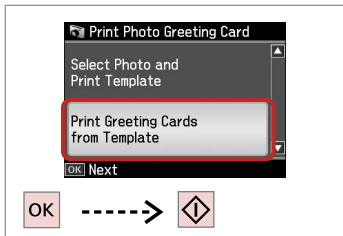


Print greeting cards.

Printing Photos from an Index Sheet

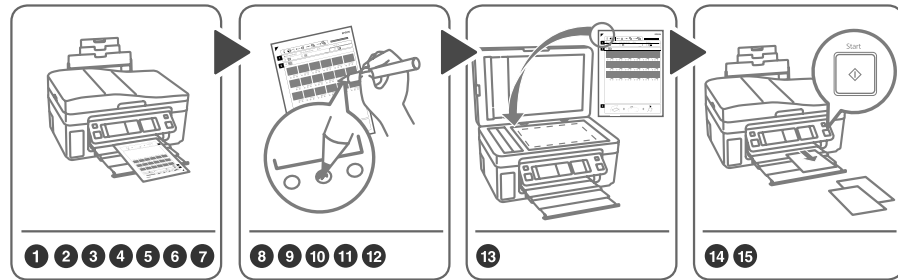


Select photos on the index sheet (A4), then scan it to print photos.

1 → 11

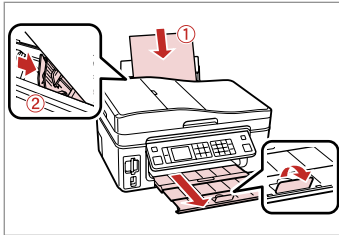


Load A4-size plain paper.

2 → 16

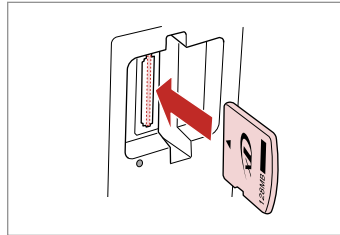


Insert a memory card.

3

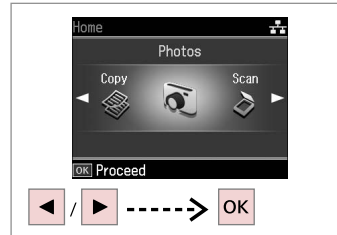


Select **Photos**.

4

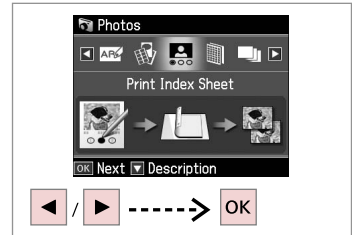


Select **Print Index Sheet**.

5

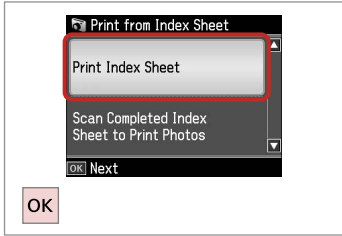


Select **Print Index Sheet**.

6

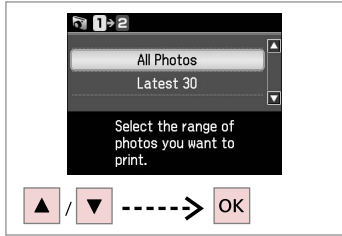


Select the range of photos.

7

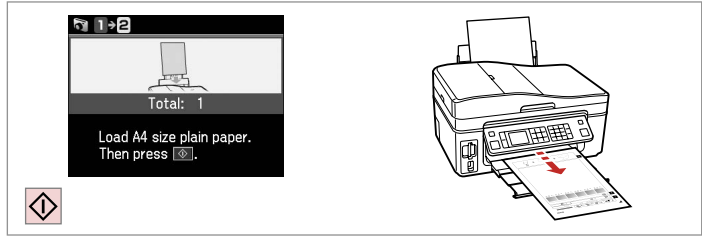


Print the index sheet.

8

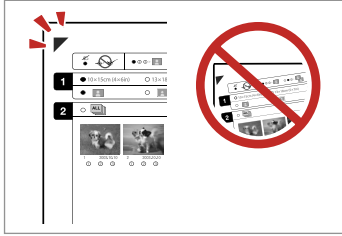


Check ▲ aligns with the corner.

9

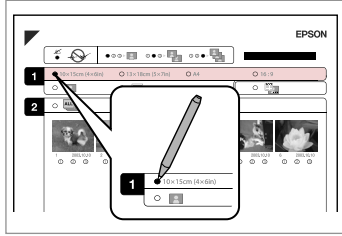


Select a paper size.

10

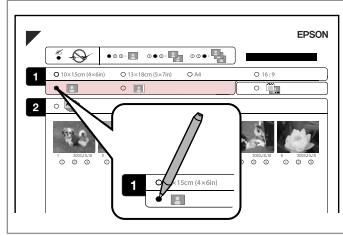


Select border or borderless.

11

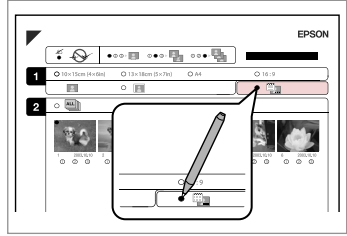


Select to print with a date stamp.

12

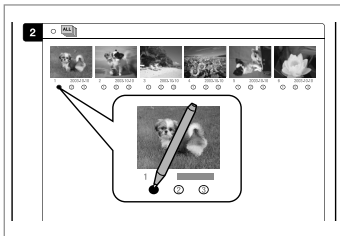


Select the number of copies.

13

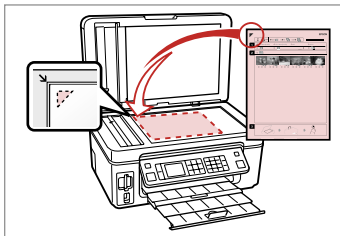


Place the index sheet face-down.

14  → 11

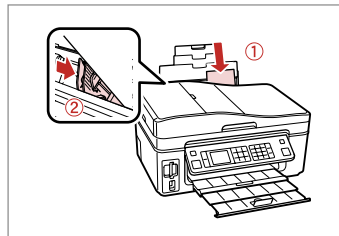

Load the photo paper.

15



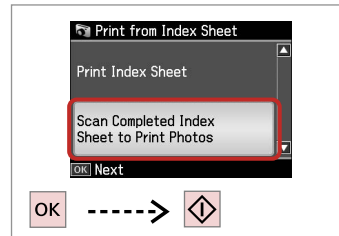


Print photos from the index sheet.



You can print photos on Ultra Glossy Photo Paper, Premium Glossy Photo Paper or Premium Semigloss Photo Paper.


Photos Mode Menu List

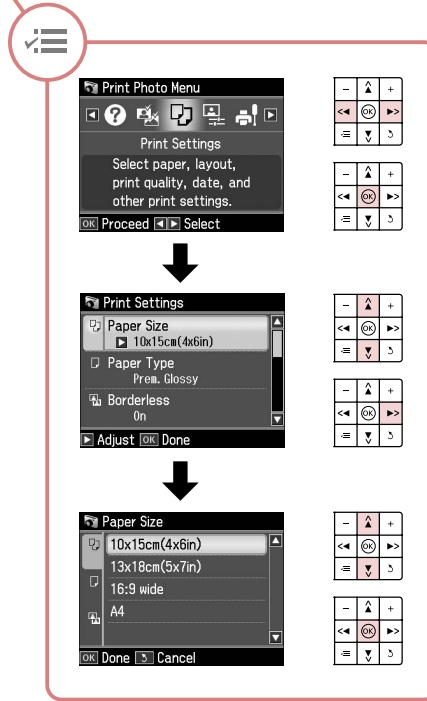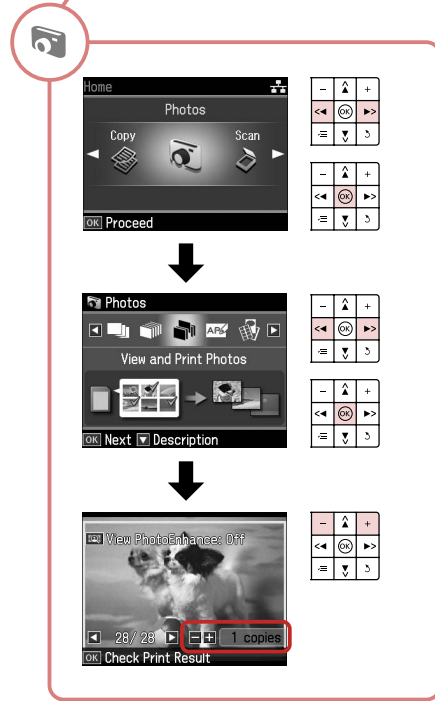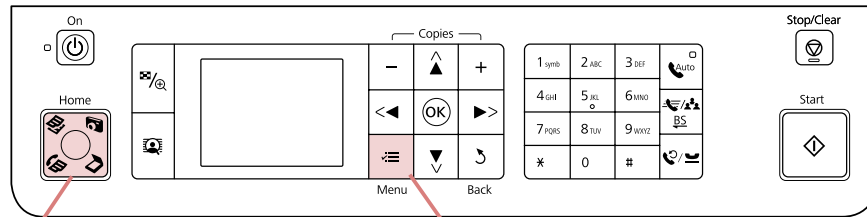

Photos Mode


Print All Photos
View and Print Photos
Print Photo Greeting Card
Photo Layout Sheet
Print Index Sheet
Print Proof Sheet
Slide Show

Print settings


Select Photos	Select All Photos
	Select by Date
	Cancel Photo Selection
Print Settings	Paper Size
	Paper Type
	Borderless
	Quality
	Expansion * ²
	Date
	Fit Frame * ³
Photo Adjustments * ¹	Bidirectional * ⁴
	Enhance * ⁵
	Scene Detection
	Fix Red-Eye * ⁶
	Filter * ⁷
	Brightness
Contrast	
Sharpness	
Saturation	
Maintenance	 ➔ 58
Problem Solver	

- *1 These functions only affect your printouts. They do not change your original images.
- *2 Select the amount the image is expanded when printing Borderless photos.
- *3 Select On to automatically crop your photo to fit inside the space available for the layout you selected. Select Off to turn off automatic cropping and leave white space at the edges of the photo.
- *4 Select On to increase the print speed. Select Off to improve the print quality (but your photos print more slowly).
- *5 Select PhotoEnhance to adjust the brightness, contrast, and saturation of your photos automatically. Select P.I.M. to use your camera's PRINT Image Matching or Exif Print settings.
- *6 Depending on the type of photo, parts of the image other than the eyes may be corrected.
- *7 Select **On** to print in black and white.

Other Mode

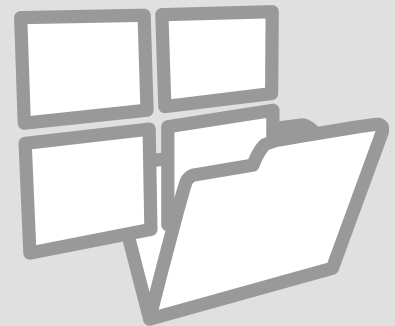


Printing Ruled Paper

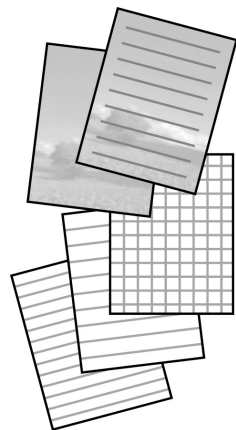


You can print school paper with ruled lines or graph paper with or without a photo set as the background.

1 → 11

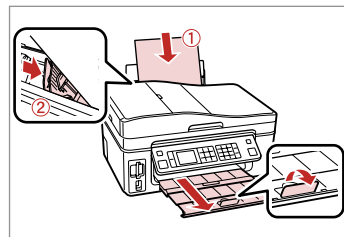


Load A4-size plain paper.

2

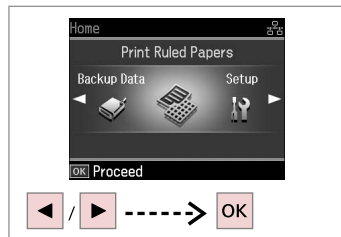

Select **Print Ruled Papers**.

3 → 47

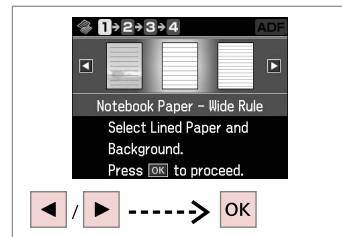

Select a type of format.

If you select a format without a background image, go to 6.


4



OK

Proceed.

5

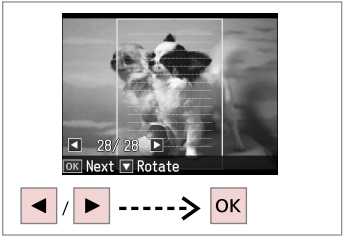


← / → -----> OK

Select the photo to print.




6

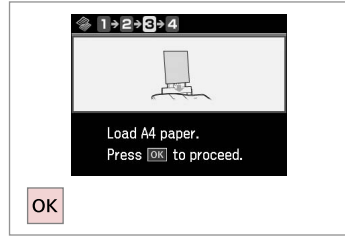

OK

Proceed.

7

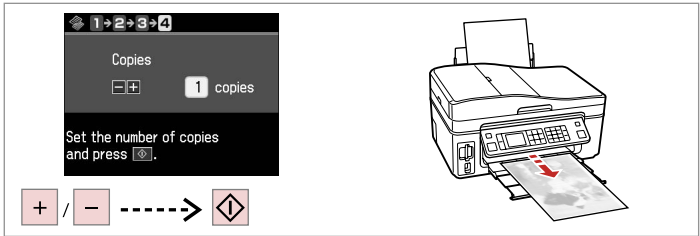


+ / - -----> OK

Set the number of copies and print.




Scanning to a Memory Card

1  → 16

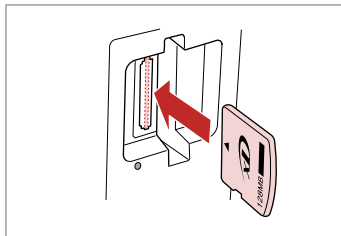


Insert a memory card.

2  → 13

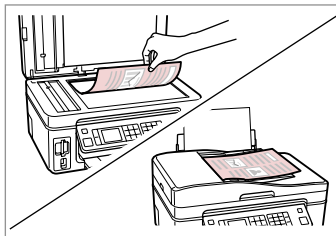


Place original horizontally.

3

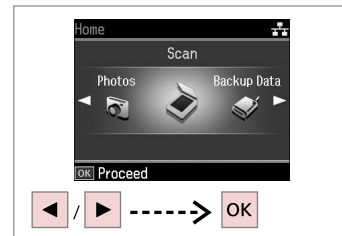


Select **Scan**.

4

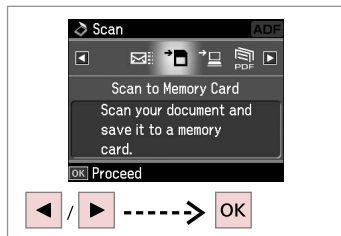

Select **Scan to Memory Card**.

5  → 47

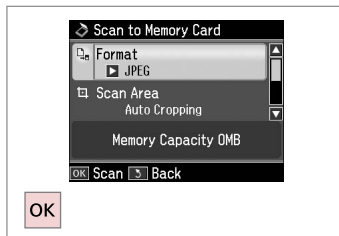

Select settings and scan.

6



Check the message on the screen.




If the edges of the photo are faint, change the **Scan Area**.


Scanning to a Computer



Make sure you have installed software for this printer on your computer and connected following the instructions on the Start Here poster.

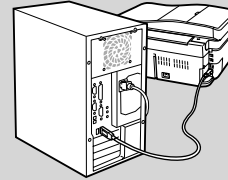


1 → 13

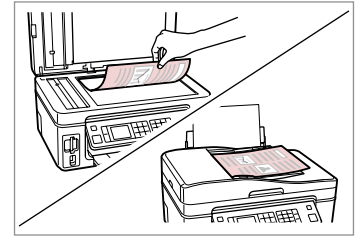


Place original horizontally.

2

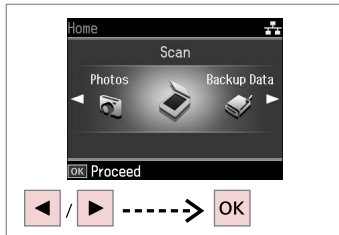


Select **Scan**.

3

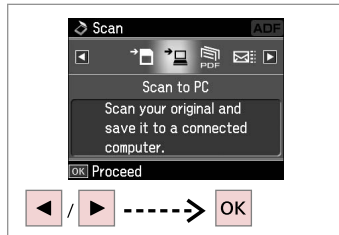

Select an item.


4

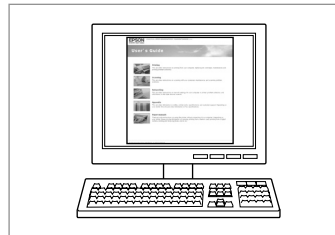

See the online User's Guide to continue.


Backup to External Storage Device

1

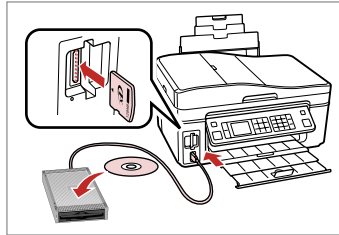


Insert and connect.

2

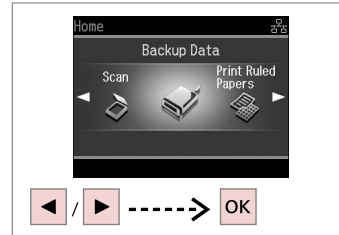

Select **Backup Data**.

3

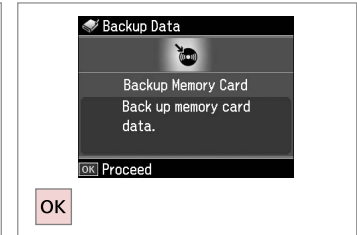


Select **Backup Memory Card**.

4



 
Follow the on-screen instructions.



To change the writing speed, press , select **Writing Speed** and set.



You can print photos from the backup storage device. Remove the memory card from the printer, connect the device, then print photos.  → 27

Other Mode Menu List

Scan Mode

Scan to Memory Card	Format	JPEG, PDF
	Scan Area	Auto Cropping, Max Area
	Size of Original *	A4
	Document	Text, Photograph
	Quality	Standard, Best
	Memory Capacity	
Scan to PC		
Scan to PDF		
Scan to Email		

* Displayed only when the document is loaded in the Auto Document Feeder.

Print Ruled Papers Mode

Notebook Paper - Wide Rule, Notebook Paper - Narrow Rule, Graph Paper, Stationery w/o Lines, Stationery w/Lines

Backup Data Mode


Backup Memory Card

Setup Mode (Maintenance)




Checking the Ink Cartridge Status

1

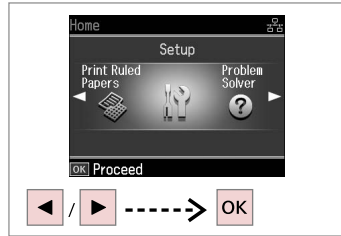


Select **Setup**.

2

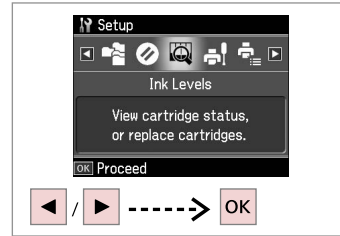


Select **Ink Levels**.

3

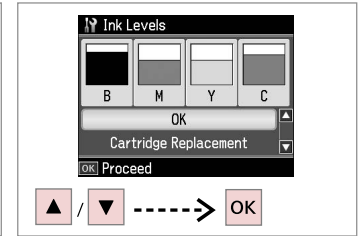



Continue or change cartridge.

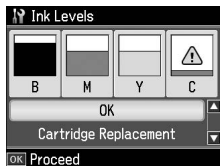B	M	Y	C	
Black	Magenta	Yellow	Cyan	Ink is low.





On the screen in step 3, you can select to replace ink cartridges even if they are not expended. You can also start this operation by selecting **Setup** mode, **Maintenance**, and then **Ink Cartridge Replacement**. For instructions on replacing the cartridge, see   61.




Epson cannot guarantee the quality or reliability of non-genuine ink. If non-genuine ink cartridges are installed, the ink cartridge status may not be displayed.




Checking/Cleaning the Print Head

1 → 11

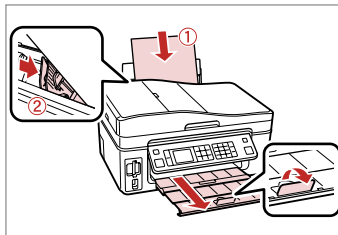


Load A4 size paper.

2

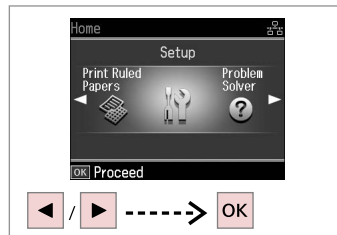


Select **Setup**.

3

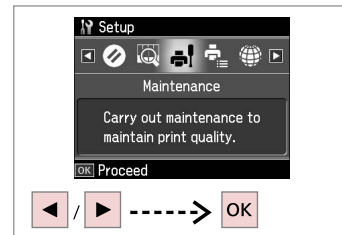


Select **Maintenance**.

4

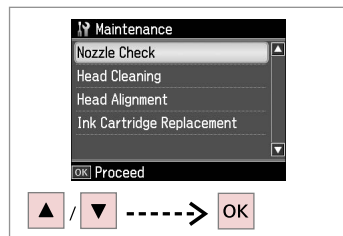


Select **Nozzle Check**.

5

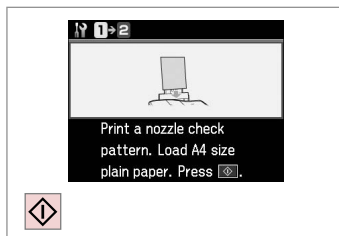


Start the nozzle check.

6

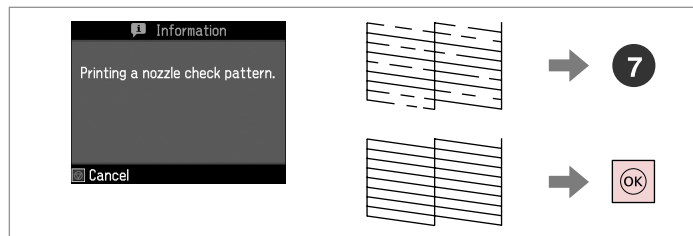


Check the pattern.

7

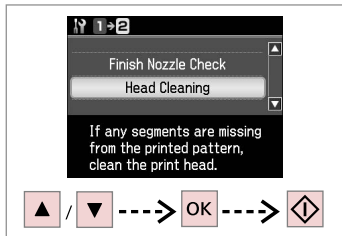



Select **Head Cleaning** and start.

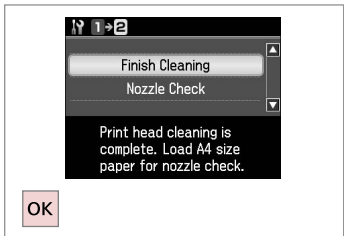8



Finish head cleaning.


 Print head cleaning uses ink from all cartridges, so clean the print head only if quality declines.

 If quality does not improve after cleaning four times, leave the printer for at least six hours. Then try cleaning the print head again. If quality still does not improve, contact Epson Support.




Aligning the Print Head

1  → 11

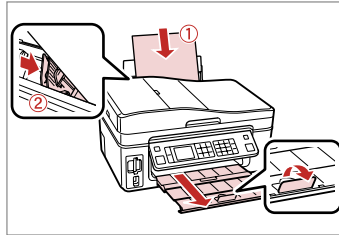


Load A4 size paper.

2

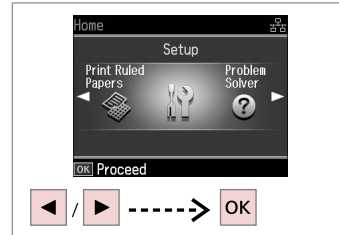


Select **Setup**.

3

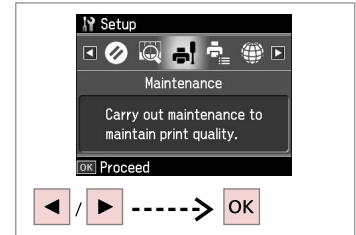


Select **Maintenance**.

4

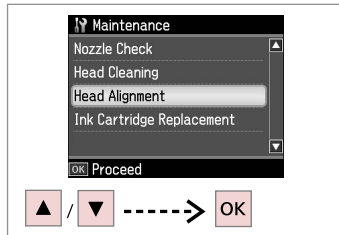


Select **Head Alignment**.

5

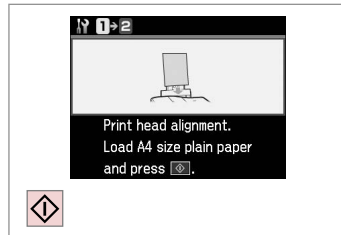


Print patterns.

6

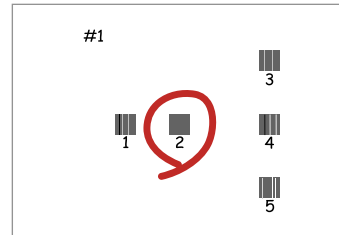


Select the most solid pattern.

7

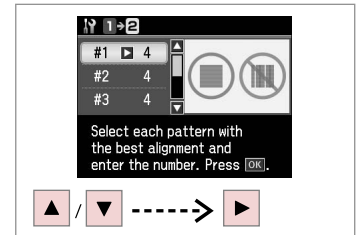


Select the pattern number.

8

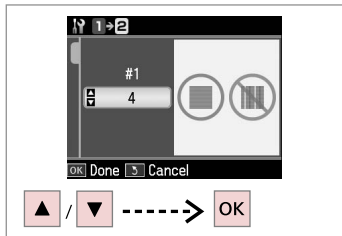


Enter the number.

9

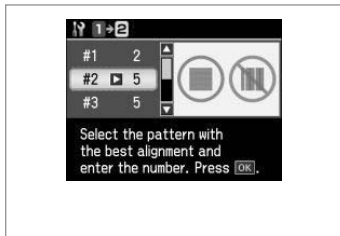

Repeat steps 7 and 8 if necessary.

10

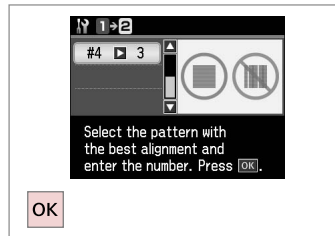


Finish aligning the print head.




PictBridge Setup

1

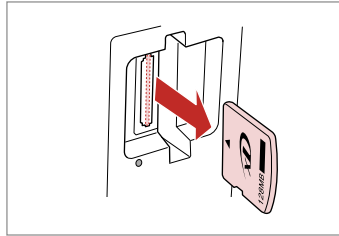


Remove.

2

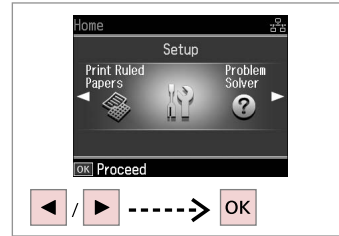


Select **Setup**.

3

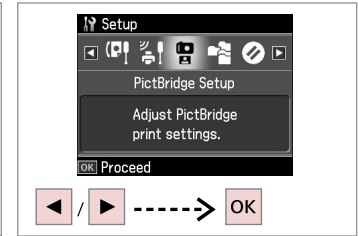


Select **PictBridge Setup**.

4  → 58

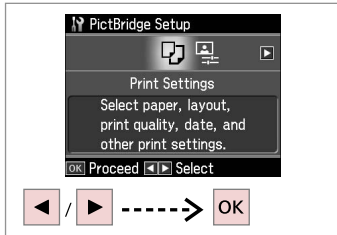


Select **Print Settings**.

5

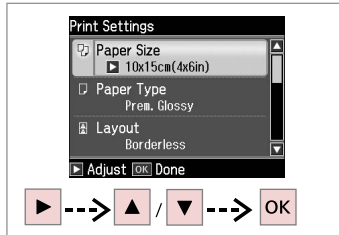


Select appropriate print settings.

6

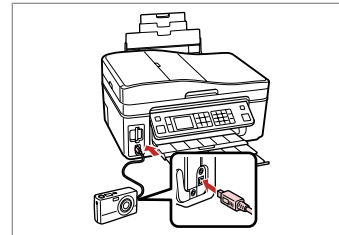

Connect and turn on.

7

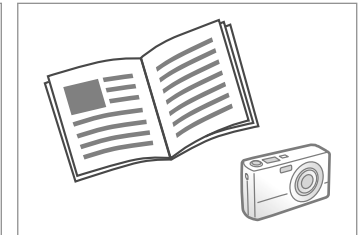

See your camera's guide to print.

Compatibility	PictBridge
File Format	JPEG
Image size	80 × 80 pixels to 9200 × 9200 pixels





Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported.



Some of the settings on your digital camera may not be reflected in the output.

Setup Mode Menu List

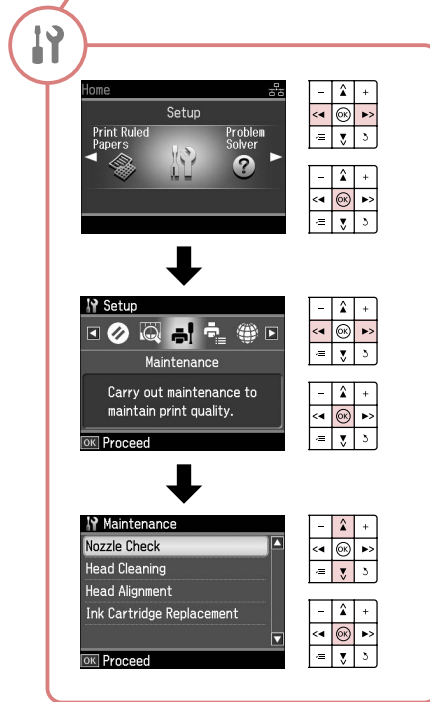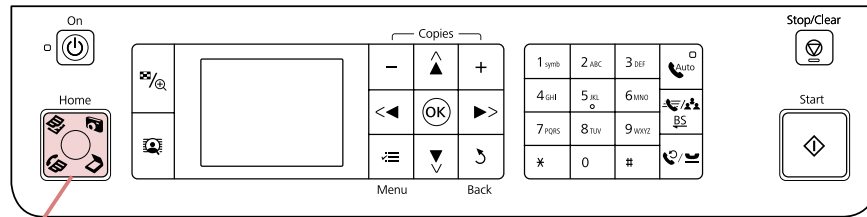

Setup Mode

Ink Levels					
Maintenance	<ul style="list-style-type: none"> Nozzle Check Head Cleaning Head Alignment Ink Cartridge Replacement 				
Printer Setup	<ul style="list-style-type: none"> Sound Screen Saver Settings Display Format * Date/Time Daylight Saving Time Country/Region Language 				
Network Settings	For details on the setting items, see the online User's Guide.				
Fax Setting	For details on the setting items, see the Fax Guide.				
Bluetooth Settings	For details on the setting items, see the online User's Guide.				
PictBridge Setup	<table border="1"> <tr> <td>Print Settings</td> <td>For details on the setting items, see the Print Settings for Photos Mode.</td> </tr> <tr> <td>Photo Adjustments</td> <td></td> </tr> </table>	Print Settings	For details on the setting items, see the Print Settings for Photos Mode.	Photo Adjustments	
Print Settings	For details on the setting items, see the Print Settings for Photos Mode.				
Photo Adjustments					
Select Location	Folder Select, Group Select				
Restore Default Settings	Reset Fax Send/Receive Settings, Reset Fax Data Settings, Reset Network Settings, Reset All except Network & Fax Settings, Reset All Settings				

* You can select the LCD screen display format from 1-up with Info, 1-up without Info, and View Thumbnail Images.

Solving Problems



Error Messages

Error Messages	Solution
Paper jam. Open the scanner unit and remove the jammed paper. Then close the scanner unit and press ⏏. See your documentation.	📄 ➔ 64
Paper is jammed in the printer. Turn off the printer, open the scanner unit, and remove the paper. See your documentation.	📄 ➔ 65
A printer error has occurred. Turn off the printer and turn it on again. Please see your documentation.	Turn the printer off and then back on. Make sure that no paper is still in the printer. If the error message still appears, contact your dealer.
A scanner error has occurred. See your documentation.	Turn the printer off and then back on. If the error message still appears, contact your dealer.
The printer's ink pads are nearing the end of their service life. Contact Epson Support.	Contact Epson support to replace ink pads before the end of their service life. When the ink pads are saturated, the printer stops and Epson support is required to continue printing.
The printer's ink pads are at the end of their service life. Please contact Epson Support.	Contact Epson support to replace ink pads.
The data is too complex to print with Bluetooth.	See the documentation for the device transmitting the data.
Error in the data. The document cannot be printed.	See the documentation for the device transmitting the data. (Cause: The data is not available because of a malfunction in the device.)
Error in the data. The document may not be printed correctly.	See the documentation for the device transmitting the data. (Cause: A part of the data is corrupted or cannot be buffered.)
Cannot recognize the device.	Make sure the storage disk has been inserted correctly.
Cannot recognize the memory card or disk.	Make sure the memory card or storage disk has been inserted correctly. If so, check to see if there is a problem with the card or disk and try again.
Backup Error. Error Code xxxxxxxx	A problem occurred and backup was canceled. Make a note of the error code and contact your dealer.
The combination of IP address and subnet mask is invalid. See your documentation.	Refer the online User's Guide - Networking.


Replacing Ink Cartridges

Ink Cartridge Handling Precautions

- Never move the print head by hand.
- Some ink is consumed from all cartridges during the following operations: print head cleaning and ink charging when an ink cartridge is installed.
- For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted.
- Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.
- Make sure you have a new ink cartridge before you begin replacement. Once you start replacing a cartridge, you must complete all the steps in one session.
- Leave the expended cartridge installed until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.
- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.
- Do not turn off the printer during ink charging as this will waste ink.
- When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink.




1

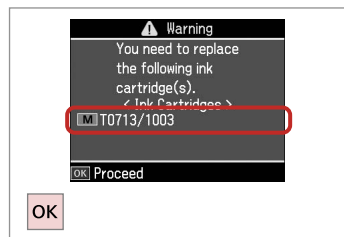


Check the color to replace.

2

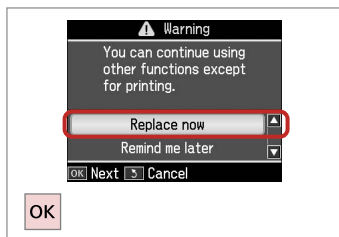

Select **Replace now**.

3

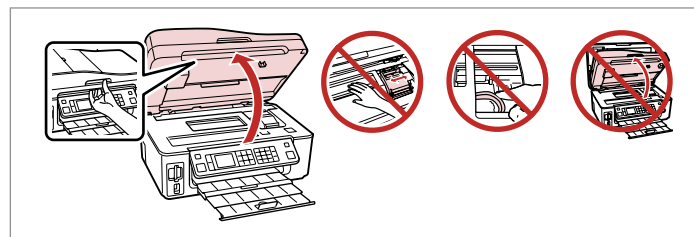


Open.




Do not lift up the scanner unit when the document cover is open.

4

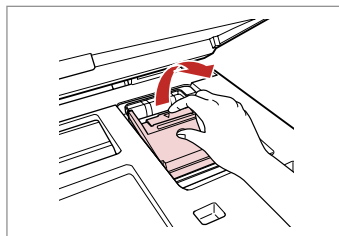


Open.

5

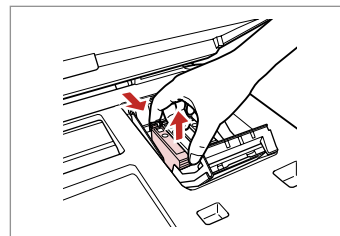

Pinch and remove.

6

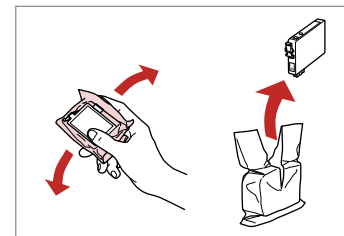


Shake new cartridge.




Be careful not to break the hooks on the side of the ink cartridge.

7

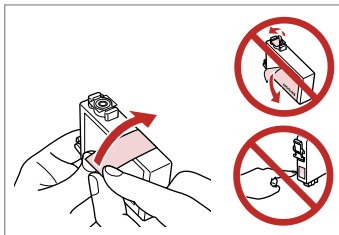


Remove the yellow tape.

8

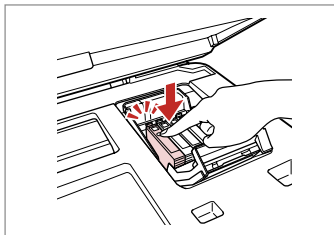

Insert and push.

9

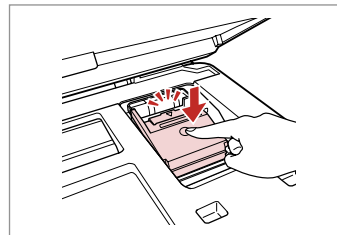


Close.



If you find it difficult to close the cover, press down on each cartridge until it clicks into place.

10

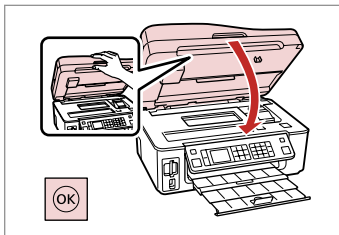

Close and start charging ink.




If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals.

Paper Jam


Paper Jam - jammed inside 1

1

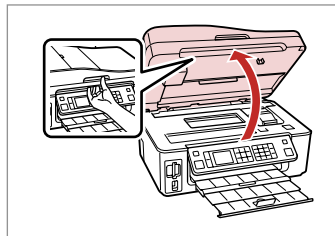


Open.

2

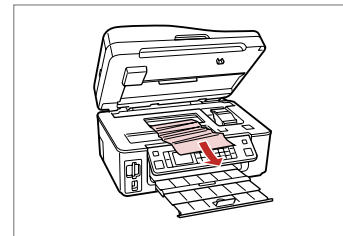


Remove.

3

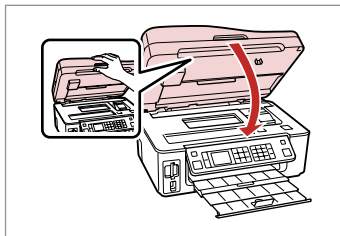

Close.


4

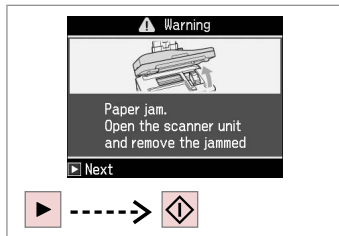

Clear the message.




If paper still remains near the rear feeder, gently pull it out.

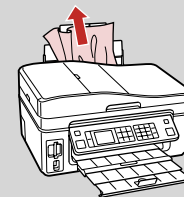


Paper Jam - jammed
inside 2

1

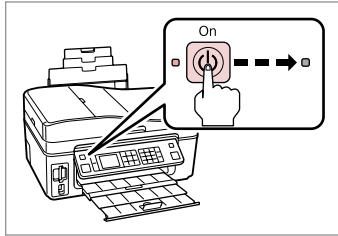


Turn off.

2

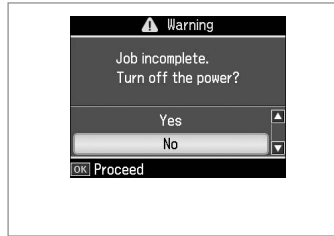


Select **Yes**.

3

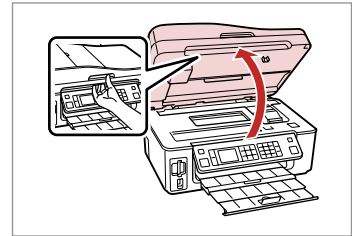


Open.

4

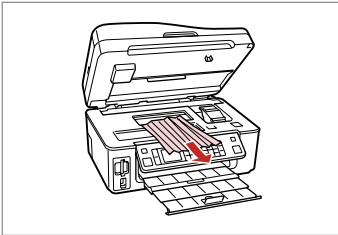

Remove.


5

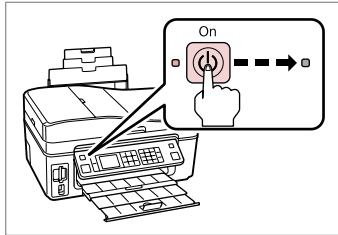

Turn on.




If paper still remains near the rear feeder, gently pull it out.

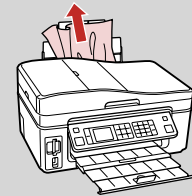

Paper Jam -Auto Document Feeder

1

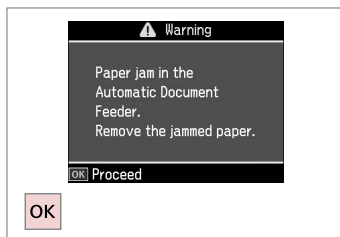


Proceed.




Make sure you open the ADF cover before removing jammed paper. If you do not open the cover, the printer may be damaged.

2

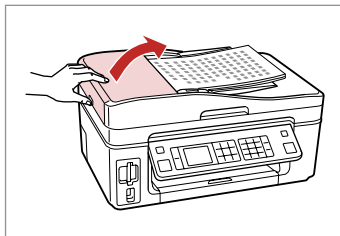


Open.

3

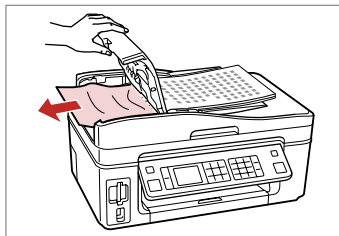


Carefully remove.

4

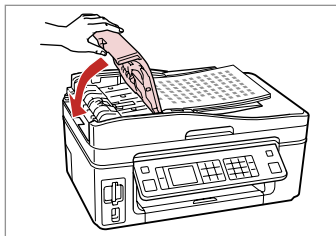

Close.

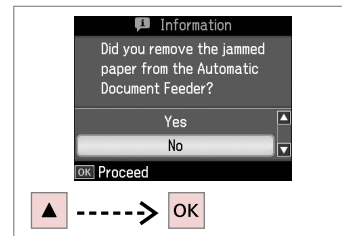


5




Select Yes.

Print Quality Problems





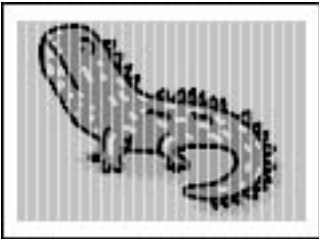

Try one or more of the following solutions in order from the top. For further information, see your online User's Guide.


- Clean the print head.  ➔ 52
- Align the print head.  ➔ 54
If quality is not improved, try aligning using the printer driver utility. See your online User's Guide to align the print head.
- To clean the inside of the printer, make a copy without placing a document on the document table.
- Use up ink cartridge within six months of opening vacuum package.  ➔ 61
- Try to use genuine Epson ink cartridges and paper recommended by Epson.



Print Layout Problems

Check the following points.

- Make sure you selected the correct **Paper Size, Layout, and Reduce/Enlarge** setting for the loaded paper.   25, 38, 47
- Make sure you loaded paper correctly.   11
- Make sure the original is placed correctly.   13
- If the edges of the copy or photo are cropped off, move the original slightly away from the corner.
- Clean the document table. See your online User's Guide.

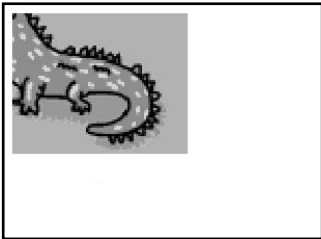

Contacting Customer Support

If you cannot solve the problem using the troubleshooting information, contact customer support services for assistance. You can get the contact information for customer support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product.

Index

A	Aligning the Print Head54	P	Panel6.7
	Auto Document Feeder14.66		Paper, jams.....64
B			Paper, loading.....11
	Backup Memory Card46.47		Paper Size.....26.39
	Bidirectional (print speed)39		Paper Type.....10.26.39
	Bluetooth Settings.....58		PhotoEnhance Preview6
	Borderless/With Border.....26		PictBridge Setup.....56.58
	Brightness.....39		Printing Photos28.35
	Buttons, Control Panel.....6.7		Print Ruled Papers.....42.47
C		Q	
	Change Ink Cartridge.....58		Quality26.39.47.67
	Clock58	R	
	Color restoration.....22		Red Eye, correction7.39
	Contrast.....39		Restore Default Settings58
	Control Panel6.7	S	
	Copying, photos or documents20		Saturation.....39
	Copying, restore faded photo.....22		Save photos (backup)46.47
	Crop photo6.29		Scan to Email.....45.47
D			Scan to Memory Card44.47
	Date/Time58		Scan to PC.....45.47
	Date stamp39		Scan to PDF45.47
	Daylight Saving Time58		Scene Detection39
	Digital Camera, printing from56		Screen Saver Settings58
	Display Format58		Sharpness.....39
E			Sound58
	Enhance.....39		Supported Paper10
	Error messages.....60	T	
	Expansion (borderless photos).....26.39		Thumbnails (Print Proof Sheet)39
F			Troubleshooting59
	Fax Setting58	V	
	Filter (Sepia, B&W printing).....26.39		Viewer.....7
	Fit Frame.....39	Z	
G			Zoom (cropping)6.29
	Greeting Card32		
I			
	Index Sheet.....35		
	ink cartridge, replacing.....61		
	Ink Cartridge Status.....50		
J			
	Jams, paper.....64		
L			
	Language (change display)58		
	Layout.....26.30		
M			
	Maintenance.....49		
	Memory Card.....16		
N			
	Network Settings.....58		

Copyright Notice

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON® is a registered trademark and EPSON STYLUS™ and Exceed Your Vision are trademarks of Seiko Epson Corporation.

PRINT Image Matching™ and the PRINT Image Matching logo are trademarks of Seiko Epson Corporation. Copyright © 2001 Seiko Epson Corporation. All rights reserved.

SDHC™ is a trademark.

Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation.

xD-Picture Card™ is a trademark of Fuji Photo Film Co., Ltd.

 
The Bluetooth® word mark is owned by the Bluetooth SIG, Inc. and licensed to Seiko Epson Corporation.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.






MEMORY STICK PRO™





Available ink cartridge sizes vary by area.

	Black	Cyan	Magenta	Yellow
Epson Stylus Office BX600FW/ SX600FW Series *1 *2	 T0711	T0712	T0713	T0714
	 T0711H	-	-	-
	 T1001	T1002	T1003	T1004
Epson Stylus Office TX600FW Series *3	73N (T0731N)/ 73HN (T0731HN)/ 103 (T1031)	73N (T0732N)/ 103 (T1032)	73N (T0733N)/ 103 (T1033)	73N (T0734N)/ 103 (T1034)


*1 For the SX600FW Series, Epson recommends the T071 ink cartridges for normal print usage.

*2 For the BX600FW Series, Epson recommends the T100 ink cartridges for high print usage.

*3 For the TX600FW Series, Epson recommends the 103 ink cartridges for high print usage.

The ink cartridge numbers between the parenthesis may be displayed depending on the area.

Getting more information.

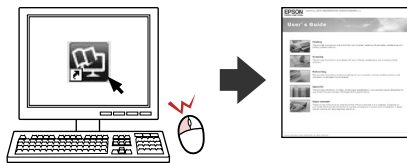

Copyright © 2008 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX



411621600