 
 
 
 
 
 
 


 
 



 
 
 
 
 
EPSON STYLUS PHOTO RX530 Icon list

Error Message

 


 
 
 
 
Display	Meaning
	Ink end. Change the empty ink cartridges.
	The ink cartridge is not installed or not installed correctly. Install the ink cartridge correctly.
	Paper out. No paper is loaded in the sheet feeder.
	Paper is jammed. Clear paper jam, then press the Start button.
	Index sheet error. Position the index sheet correctly.
	Index sheet error. Fill in the ovals correctly.

Display	Meaning
	Index sheet error. The index sheet does not match the photos on the memory card. Check the memory card.
	Pre-scanning error. Check photo placement.
	Pre-scanning error. Check film placement.
	Not enough ink to perform head cleaning. Replace with new ink cartridges.
	Mechanical error. Call for service.
	Waste ink pad saturated. Call for service.




Warning Message

Display	Meaning
	Waste ink pad almost full. Call for service.
	No photo data on the memory card. Check data on the memory card.
	Memory card error. Check the memory card.
	Cannot recognize camera. Check connection.
	Paper thickness lever position error. Set the paper thickness lever correctly.






Information

Display	Meaning
	Ink level information.
	Insert a memory card.
	PictBridge camera connected.
	USB DIRECT camera connected.
	Paper thickness lever was changed.
	
	PC connected.



Common Icons



Display	Meaning
	Ink low indicator.
	Ink low indicator (when printing).
 Printing	Copying/printing a color copy.

Copy Mode Icons









Display	Meaning
	Copies.
	Color copying.
	B & W copying.
 Printing	Copying a B & W copy.
	Fit to page.

Memory Card Mode Icons










 
Display	Meaning
	Print All.
	Print index sheet.


 





Display	Meaning
	Print from index sheet. Place the index sheet and then press the Start button.
 DPOF	DPOF data found.

Film/Photo Mode Icons

Display	Meaning
	Pre-scanning.
	Copy Photograph.
	Color negative film.
	Color positive film.
	Slides.
	Black and White negative film.
	Restoration on.
	Restoration is on for this photo.

Setup/Utilities Mode Icons

Display	Meaning	
 Check Ink Levels	Check ink levels. Press the Start button to enter this mode.	
 Clean Print Head	Clean print head. Press the Start button to enter this mode.	
 Check Ink Nozzles	Check ink nozzles. Press the Start button to enter this mode.	
 Align Print Head	 Printing	Printing nozzle check pattern.
	 Printing	Printing head alignment set pattern.
	Set head alignment.	
	 Change Cartridges	Change Cartridges. Press the Start button to enter this mode.
 Change Cartridges	1 	Press the Start button, and then open the scanner unit.

Display	Meaning	
 2	Change ink cartridges.	
	 3	Close the scanner unit, and then press the Start button.
 Auto Correct	Auto correct. Press the Start button to enter this mode.	
	OFF	Off
	P.I.M.	Print Image Matching
	PhotoEnhance	PhotoEnhance
	Exif	Exif
 Copy Quality	Copy quality. Press the Start button to enter this mode.	
		Normal
		Draft
		Photo quality



410212700