


Start Here

: Warnings must be followed carefully to avoid bodily injury.


1. Unpacking

Note:

- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Store the CD/DVD tray flat.

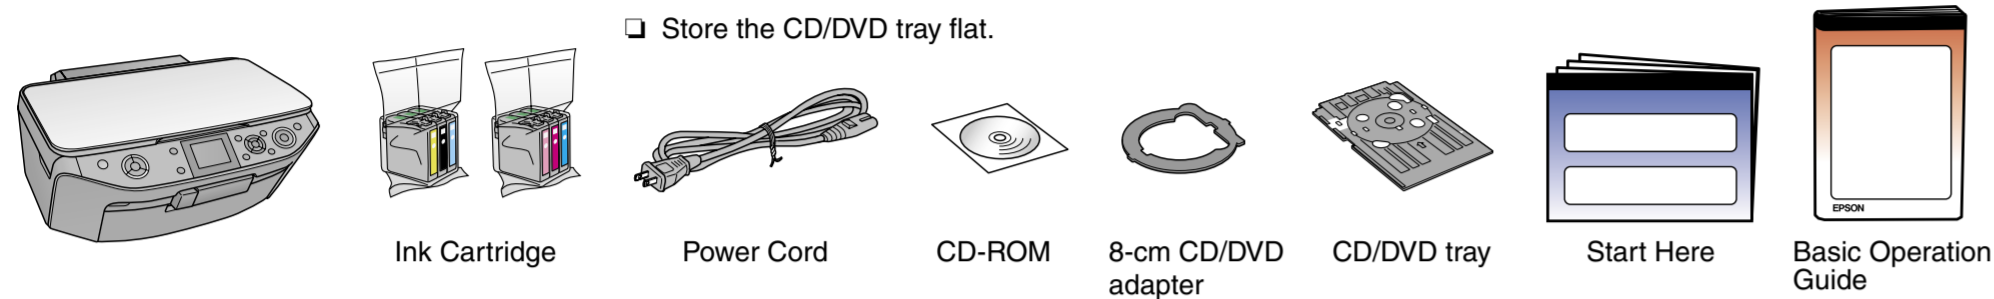


2. Removing Protective Tape

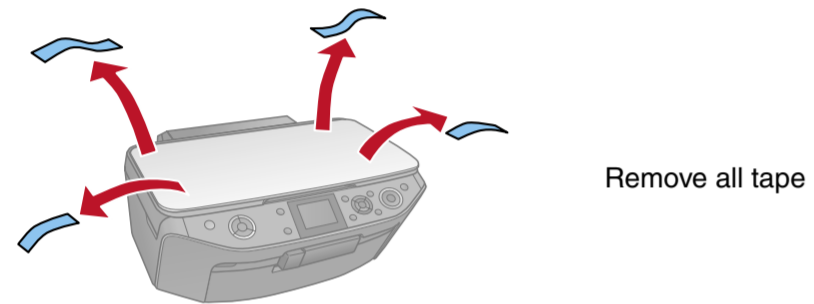


Remove all tape


3. Connecting the USB Cable

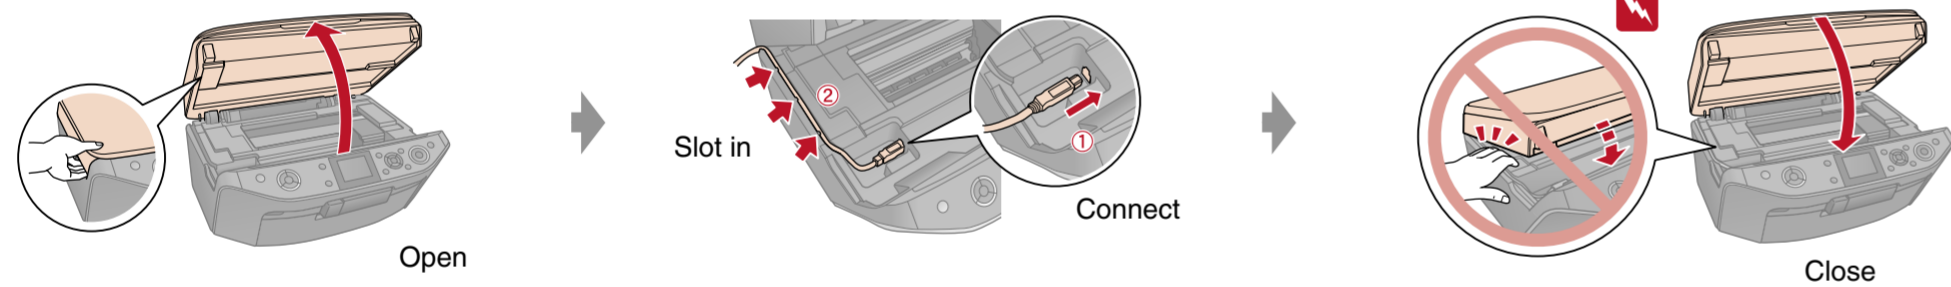

4. Turning On and Selecting a Language

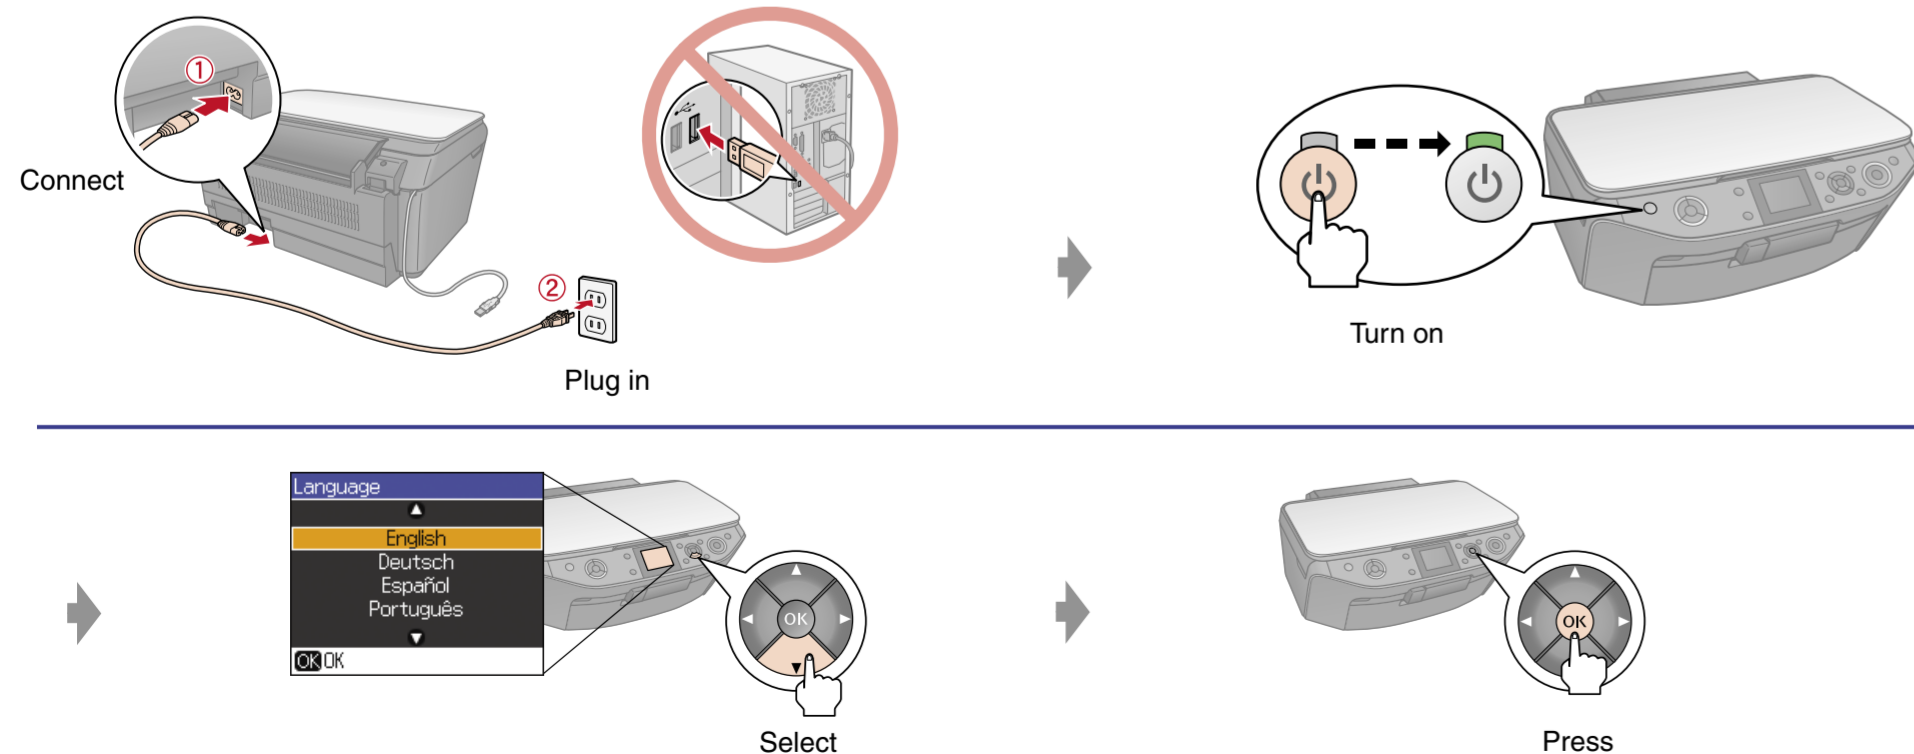

5. Installing Ink Cartridges

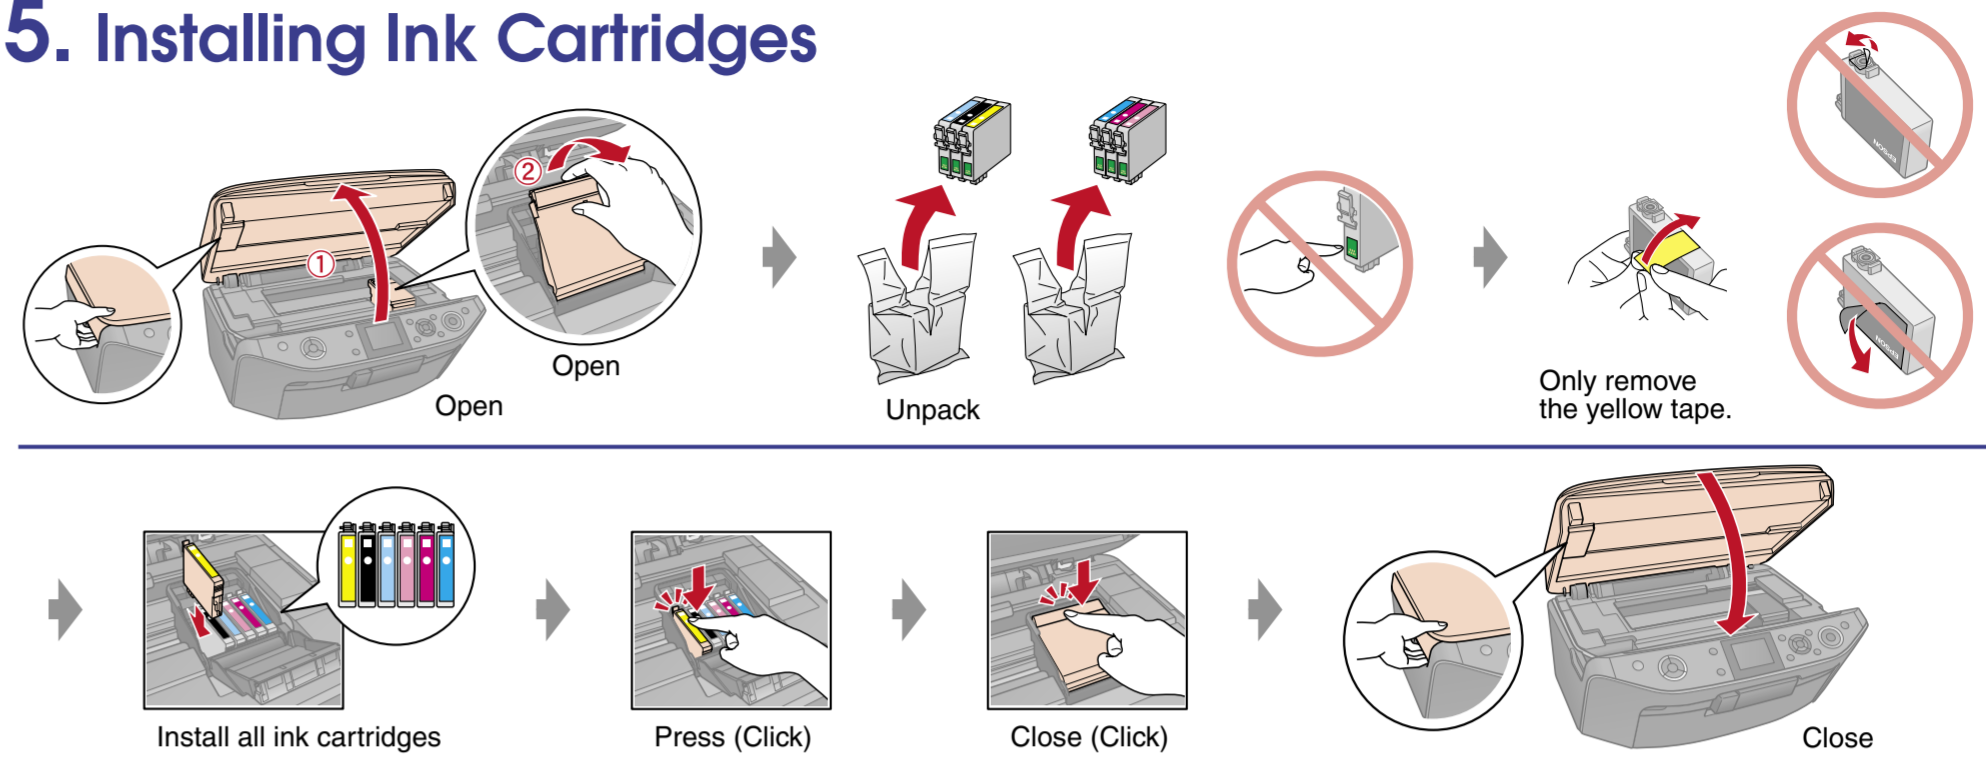

Note:


The ink cartridges first installed in your printer will be partly used to charge the print head. These cartridges print fewer pages compared to subsequent ink cartridges.

Wait about 2 min


Ready to copy

6. Installing the Software





Do not connect the USB cable until you are instructed to do so.

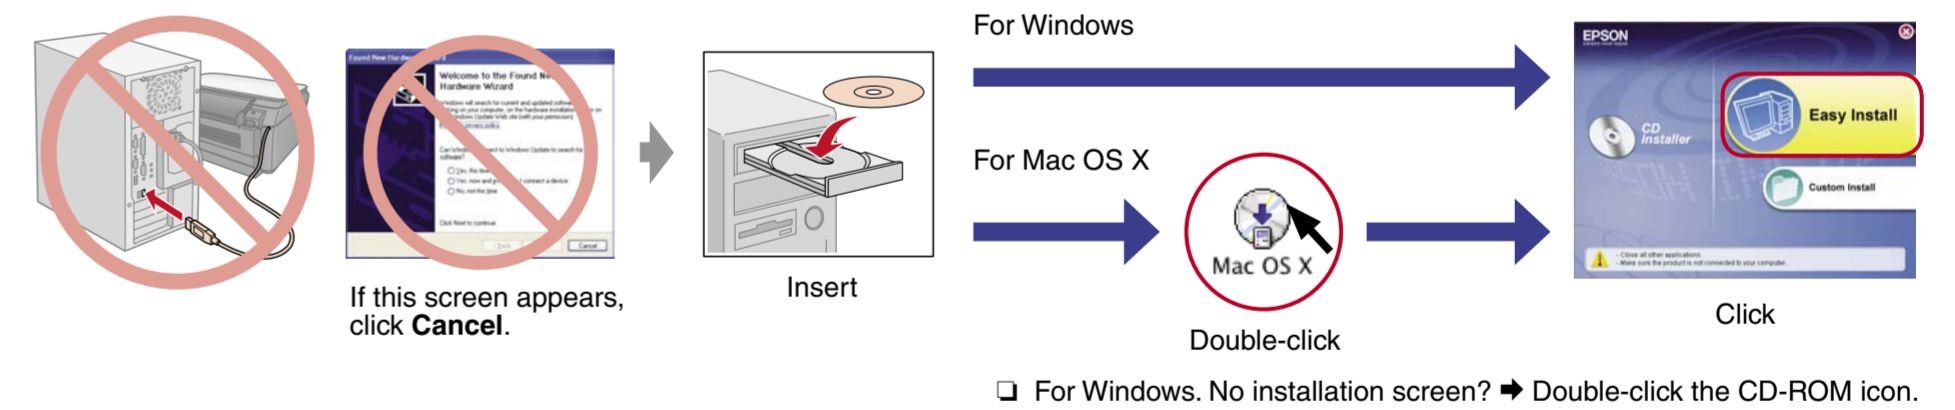




For Windows, No installation screen? → Double-click the CD-ROM icon.

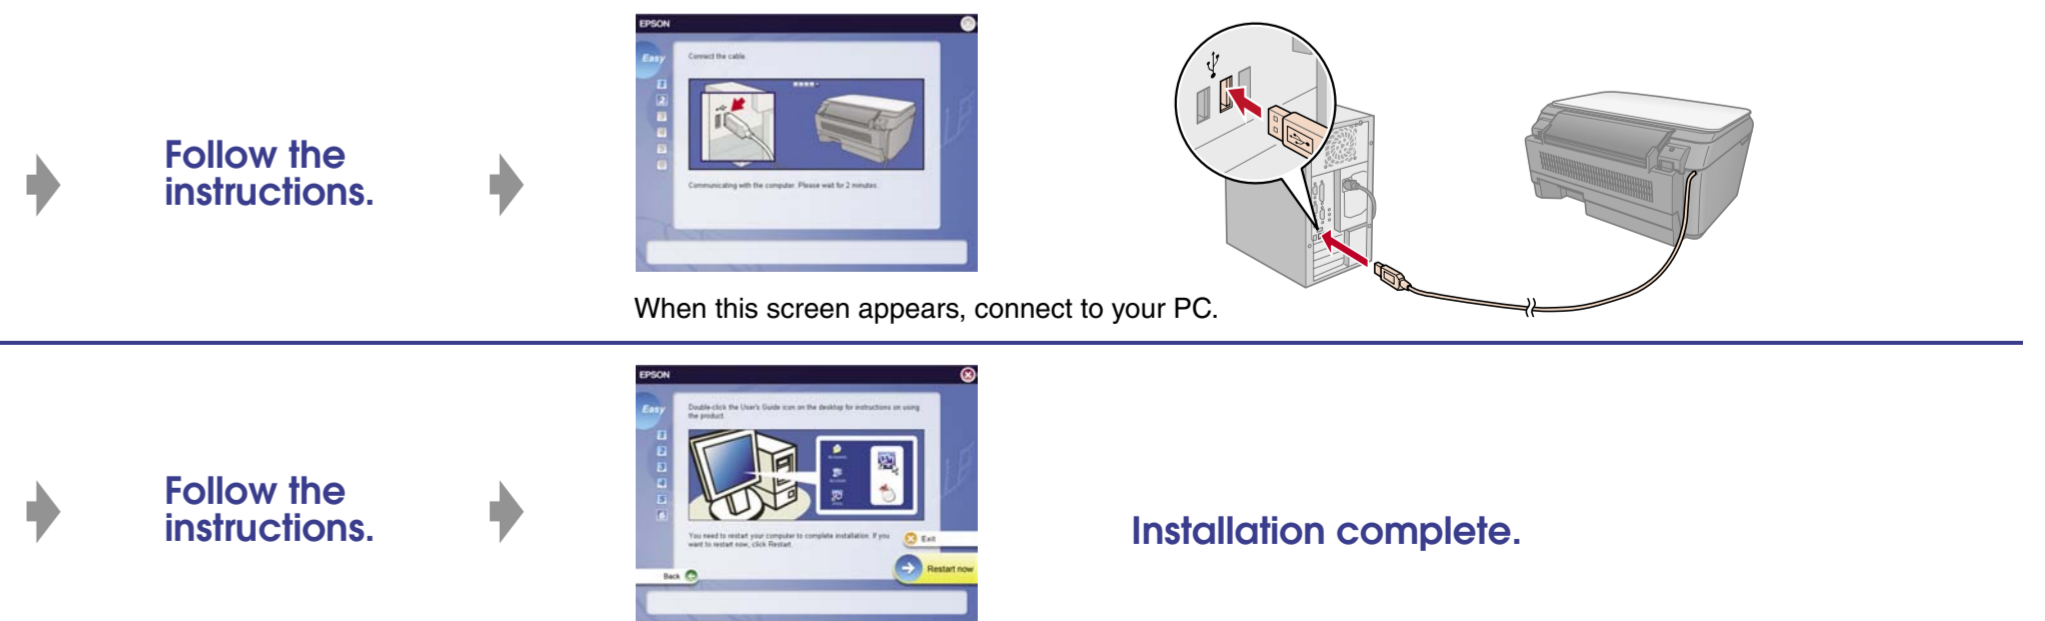




Loading Paper

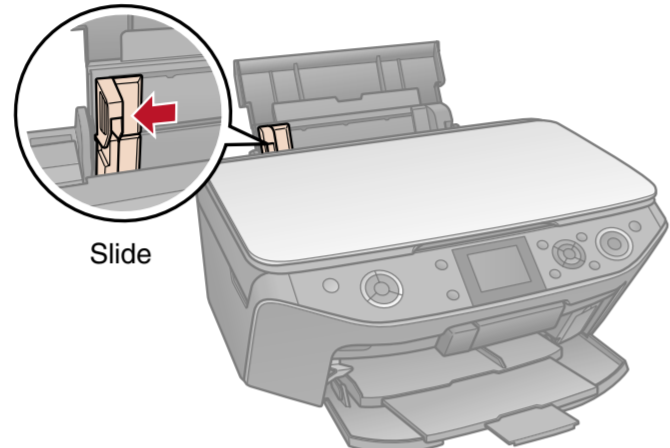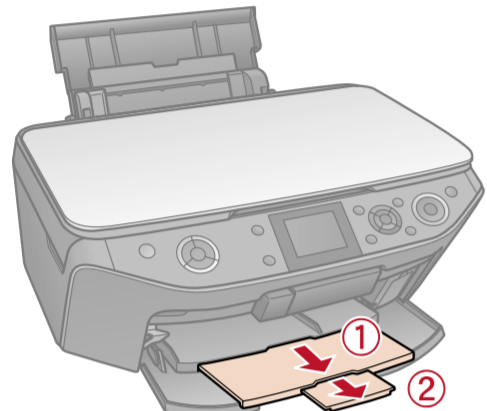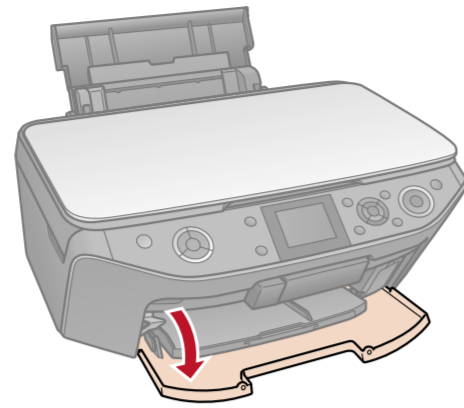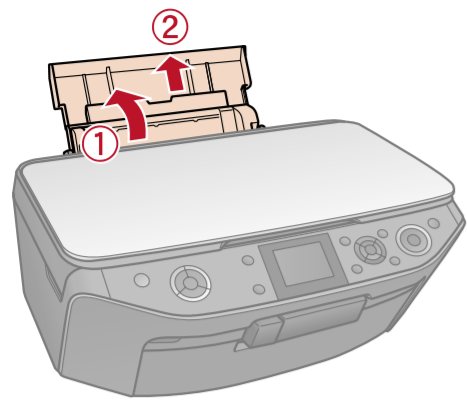


Brighter or glossier side

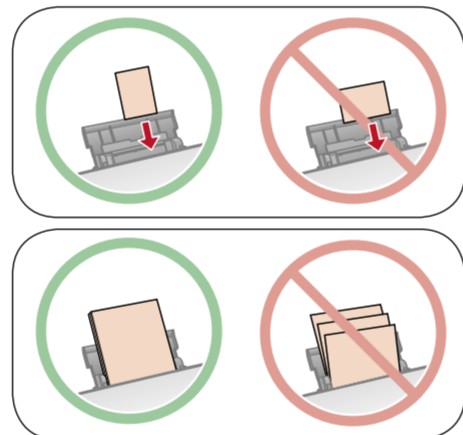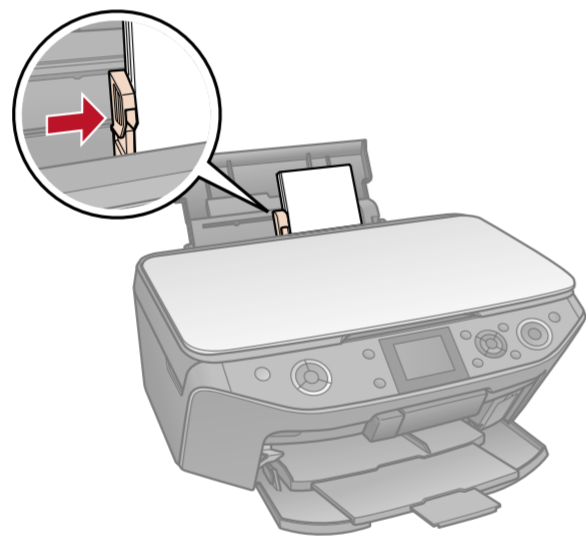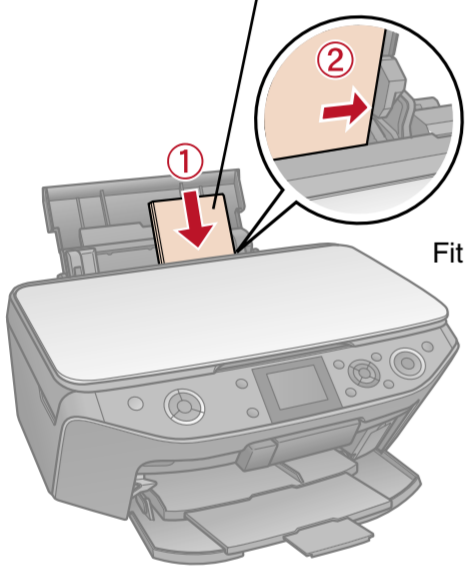


Placing an Original

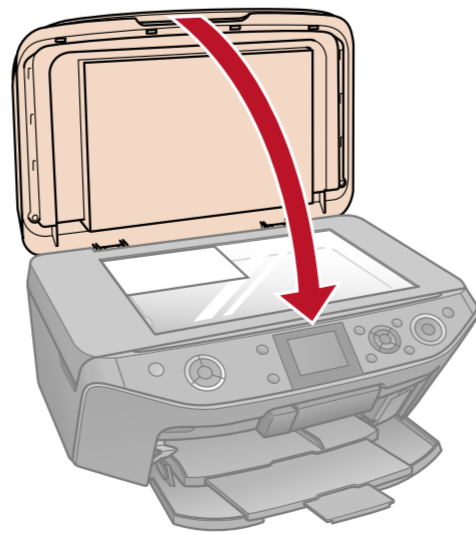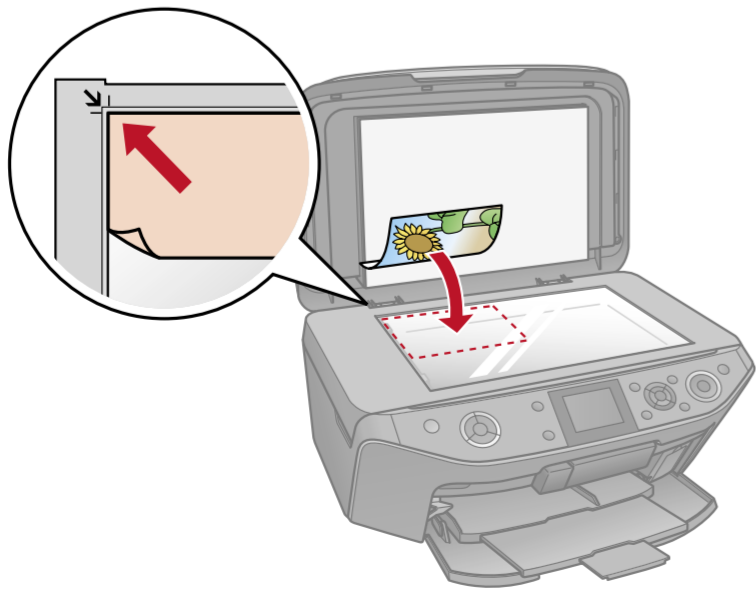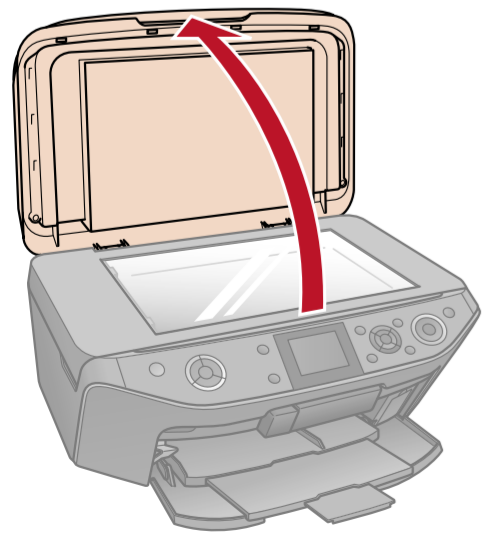


Getting More Information

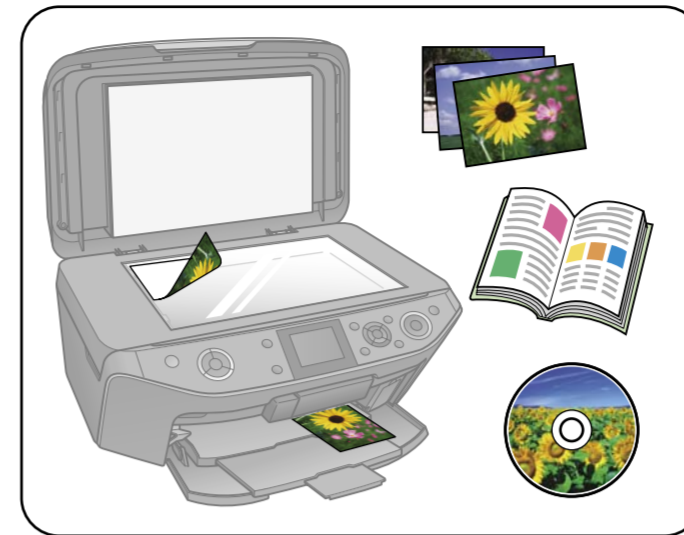


Copying

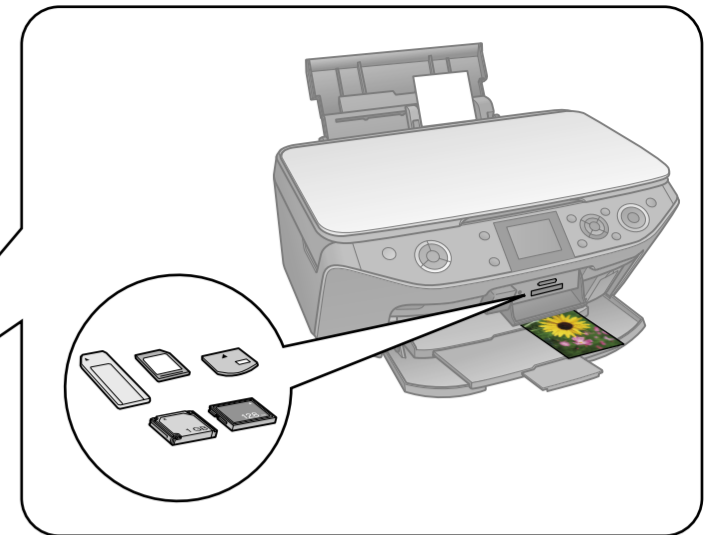


Printing from a Memory Card

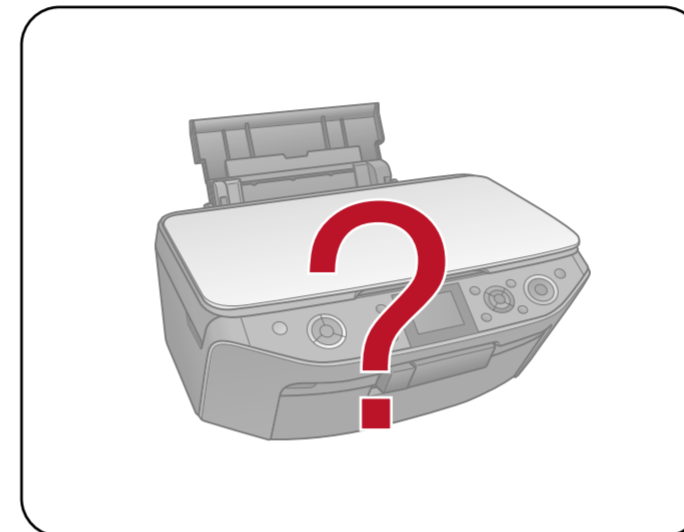




Troubleshooting

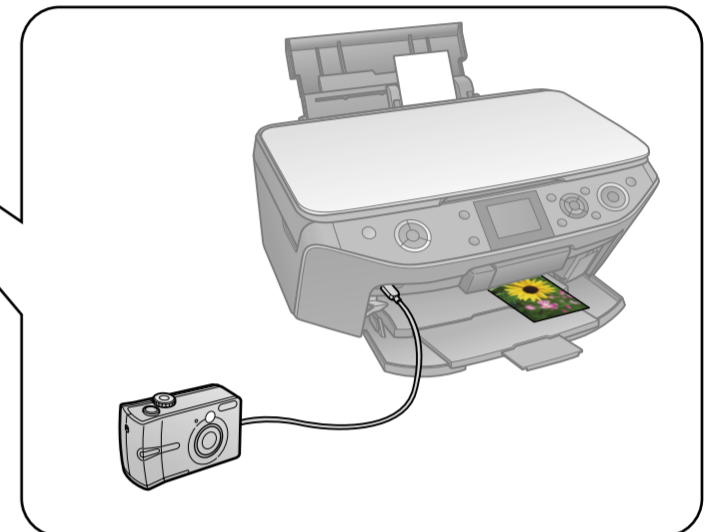


Printing from an External Device

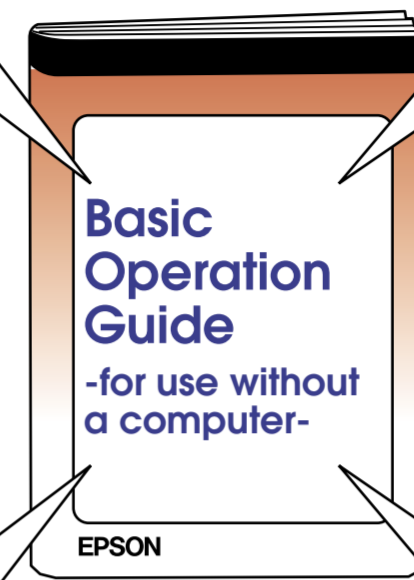


User's Guide
(for use with a computer)

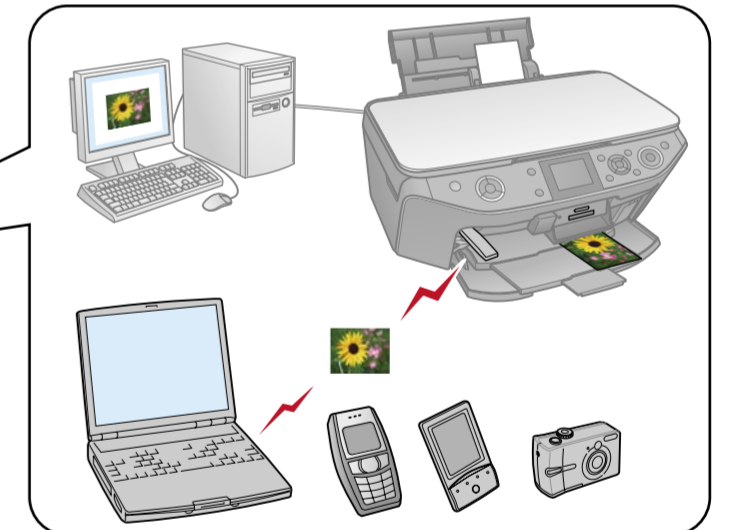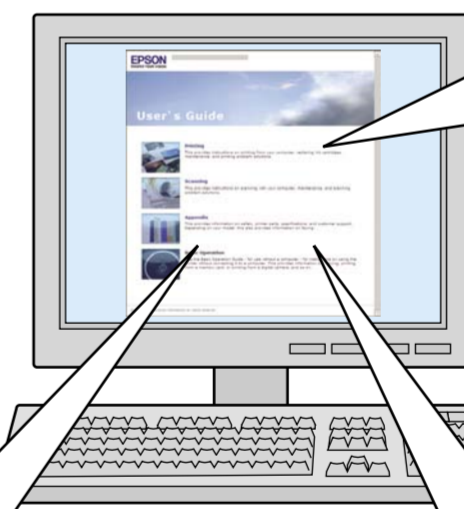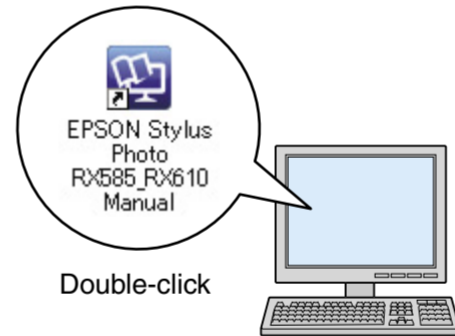

Printing with a PC/About the BLUETOOTH Photo Print Adapter

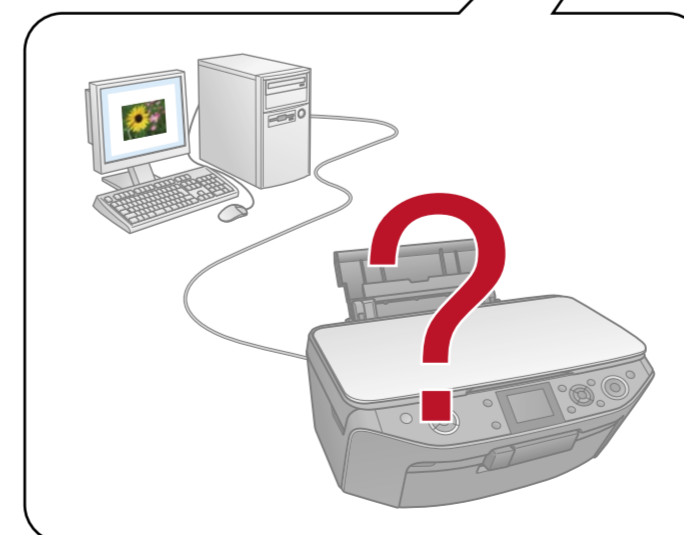

Troubleshooting

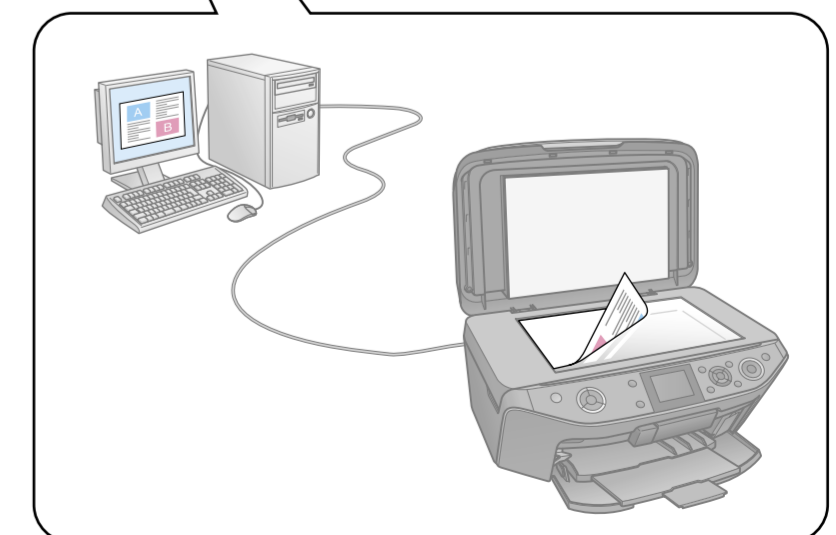

Scanning