


Epson Stylus® Photo TX720WD / Artisan™ 725

# Basic Operation Guide

- for use without a computer -

**EPSON**  
EXCEED YOUR VISION

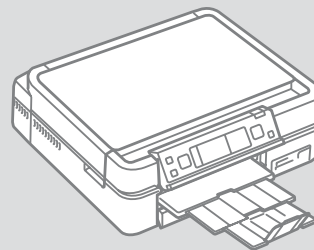






## Contents

About This Guide .....	3
Copyright Notice .....	3
Important Safety Instructions.....	4
Precautions on the Touchpad .....	5
Guide to Control Panel .....	6
Using the LCD Screen.....	7
Adjusting Angle of Control Panel.....	8
Using the optional rear cover .....	8
<b>Handling Media and Originals</b>	
Selecting Paper.....	10
Loading Paper .....	11
Loading a CD/DVD .....	15
Inserting a Memory Card .....	17
Placing Originals .....	19
<b>Copy Mode</b>	
Copying Documents.....	22
Copy/Restore Photos.....	24
Copying a CD/DVD .....	26
Copy Mode Menu List .....	28
<b>Print Photos Mode</b>	
Printing Photos.....	30
Printing in Various Layouts .....	32
Printing on a CD/DVD .....	34
Printing Photo Greeting Cards.....	37
Printing from an External USB Device.....	40
Print Photos Mode Menu List .....	41
<b>Other Mode</b>	
Printing Ruled Paper.....	44
Printing a Coloring Sheet.....	46
Scanning to a Memory Card .....	48
Scanning to a Computer .....	49
Backup to an External USB Device.....	50
Other Mode Menu List.....	51
<b>Setup Mode (Maintenance)</b>	
Checking the Ink Cartridge Status.....	54
Checking/Cleaning the Print Head.....	55
Aligning the Print Head .....	57
Printing from a Digital Camera .....	58
Setup Mode Menu List.....	60
<b>Solving Problems</b>	
Error Messages.....	62
Replacing Ink Cartridges .....	63
Paper Jam .....	66
Printer Error.....	71
Print Quality/Layout Problems.....	72
Other Problems .....	73
Contacting Epson Support.....	74
Index .....	75

## About This Guide

Follow these guidelines as you read your instructions:

				
<b>Warning:</b> Warnings must be followed carefully to avoid bodily injury.	<b>Caution:</b> Cautions must be observed to avoid damage to your equipment.	Must be observed to avoid bodily injury and damage to your equipment.	<b>Note:</b> Notes contain important information and hints for using the printer.	Indicates a page number where additional information can be found.

## Copyright Notice

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON® and EPSON STYLUS® are registered trademarks, and EPSON EXCEED YOUR VISION or EXCEED YOUR VISION and ARTISAN are trademarks of Seiko Epson Corporation.

PRINT Image Matching™ and the PRINT Image Matching logo are trademarks of Seiko Epson Corporation. Copyright © 2001 Seiko Epson Corporation. All rights reserved.

SDHC™ is a trademark.

Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, Memory Stick PRO-HG Duo, Memory Stick Micro, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation.

xD-Picture Card™ is a trademark of Fuji Photo Film Co., Ltd.

The Bluetooth® word mark is owned by the Bluetooth SIG, Inc. and licensed to Seiko Epson Corporation.

 











General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.




MEMORY STICK PRO™






## Important Safety Instructions

					
<p>Make sure the power cord meets all relevant local safety standards.</p>	<p>Place the printer near a wall outlet where the power cord can be easily unplugged.</p>	<p>Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.</p>	<p>Use only the type of power source indicated on the label.</p>	<p>Do not let the power cord become damaged or frayed.</p>	<p>Do not open the scanner unit while copying, printing, or scanning.</p>
					
<p>Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.</p>	<p>Except as specifically explained in your documentation, do not attempt to service the printer yourself.</p>	<p>Keep ink cartridges out of the reach of children and do not drink the ink.</p>	<p>Do not shake ink cartridges after opening their packages; this can cause leakage.</p>	<p>If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area.</p>	<p>If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately.</p>

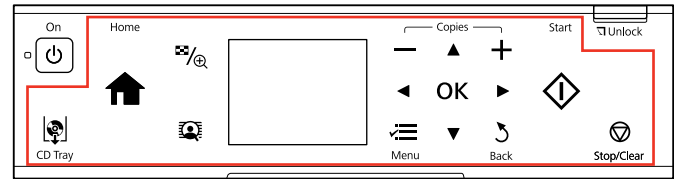
## Precautions on the Touchpad









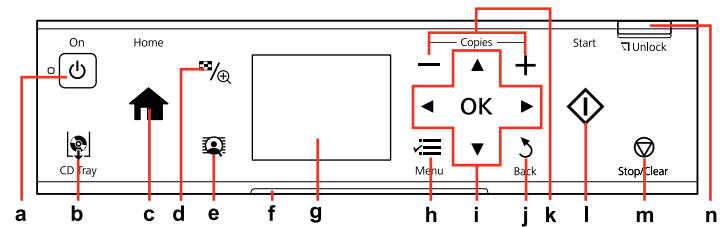


 



		
<p>Press the touchpad gently with the tip of your finger. Do not press too hard or tap it with your nails.</p>	<p>Do not operate using sharp or pointed objects such as ball point pen, sharp pencil, stylus pen, and so on.</p>	<p>The touchpad is a capacitive touch panel that only responds to direct finger touch. The touchpad may not respond to touch from wet hands, gloved hands, or over the protective sheet or stickers.</p>


# Guide to Control Panel

Control panel design varies by area.





a	b	c	d	e
				
Turns on/off printer.	Eject and close the CD/DVD tray.	Returns to the top menu. When on the top menu, switches between the modes.	Changes the view of photos or crops the photos.	Switches View PhotoEnhance On or Off.  $\rightarrow$ 7
f	g	h	i	j
-	-			
The status indicator light shows the printer status.	The LCD screen displays a preview of the selected images, or displays settings.	Displays detailed settings for each mode.	Selects photos and menus.	Cancels/returns to the previous menu.
k	l	m	n	
-, +				
Sets the number of copies.	Starts copying/printing.	Stops copying/printing or reset settings.	Lowers the control panel.  $\rightarrow$ 8	

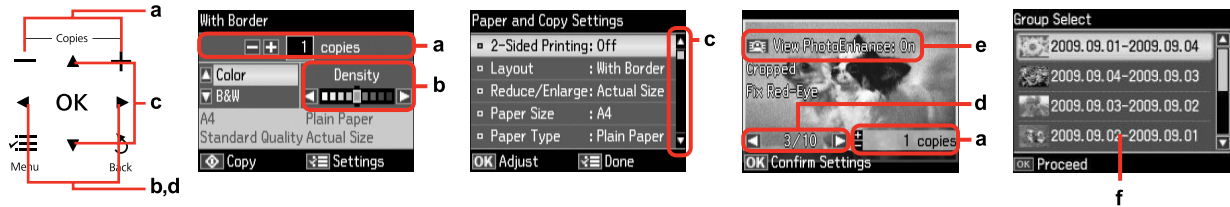
## Using the LCD Screen




The actual screen display may differ slightly from those shown in this guide.

a	b	c	d	e
Use Copies + or - to set the number of copies for the selected photo.	Press ◀ or ▶ to set the density.	Press ▲ or ▼ to select the menu item. The highlight moves up or down.	Press ◀ or ▶ to change the photo displayed on the LCD screen.	The <b>PhotoEnhance</b> function automatically corrects color and improves the quality of your images. You can preview the adjusted images by pressing the  button and changing <b>View PhotoEnhance</b> to <b>On</b> .
f				 <p>After 13 minutes of inactivity, the screen turns black to save energy. Touch the screen to return the screen to its previous state.</p>
<p>When you have more than 999 photos on your memory card, the LCD screen displays a message to let you select a group. Images are sorted by the date they were taken. To select and show images in a group, press ▲ or ▼ to select a group and then press <b>OK</b>. To re-select a group or folder, select <b>Print Photos</b>, <b>Select Location</b>, and then select <b>Select Group</b> or <b>Select Folder</b>.</p>				

## Adjusting Angle of Control Panel

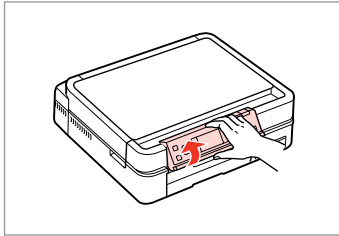


Raise manually.

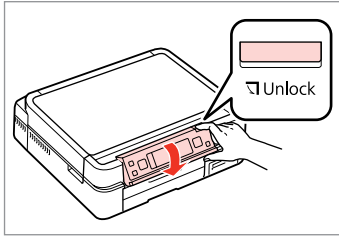

Press  Unlock to lower.

## Using the optional rear cover

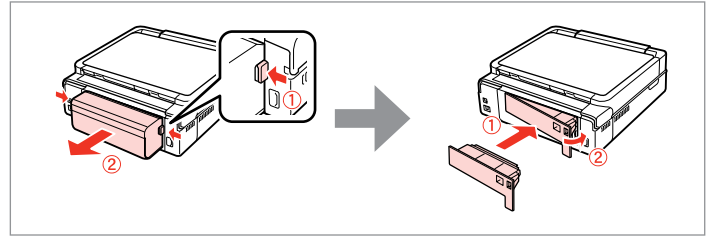

If you do not want to use 2-sided printing, remove the auto duplexer and replace with the supplied rear cover. For more details, see the online User's Guide. Depending on the area, the rear cover may not be supplied.



# Handling Media and Originals



## Selecting Paper

The availability of special paper varies by area.

	If you want to print on this paper...	Choose this Paper Type on the LCD screen	Loading capacity (sheets)	Tray
a	Plain paper * <sup>1</sup>	<b>Plain Paper</b>	[12 mm] * <sup>2</sup> * <sup>3</sup>	Main
b	Epson Premium Ink Jet Plain Paper * <sup>1</sup>	<b>Plain Paper</b>	120 * <sup>3</sup>	Main
c	Epson Bright White Ink Jet Paper * <sup>1</sup>	<b>Plain Paper</b>	100 * <sup>3</sup>	Main
d	Epson Photo Quality Ink Jet Paper	<b>Matte</b>	100	Main
e	Epson Matte Paper Heavy -weight	<b>Matte</b>	20	Main
f	Epson Premium Glossy Photo Paper	<b>Prem. Glossy</b>	20	A4: Main Other than A4: Photo
g	Epson Premium Semigloss Photo Paper	<b>Prem. Glossy</b>		
h	Epson Glossy Photo Paper	<b>Glossy</b>		
i	Epson Photo Paper	<b>Photo Paper</b>		
j	Epson Ultra Glossy Photo Paper	<b>Ultra Glossy</b>		
k	Epson Double-Sided Matte Paper	<b>Matte</b>	1	Main
l	Epson Photo Stickers	<b>Photo Stickers</b>	1	Photo


\*1 You can perform 2-sided printing with this paper.

\*2 Paper with a weight of 64 to 90 g/m<sup>2</sup>.

\*3 For manual 2-sided printing, 30 sheets.

# Loading Paper


1

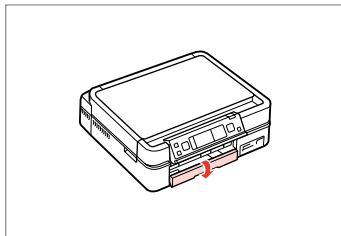


Flip down.



Close the output tray if it is ejected.

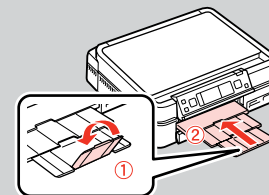



2

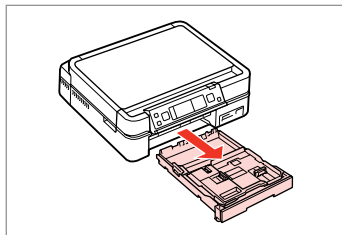

Pull out.




Make sure paper is not loaded in the photo tray.

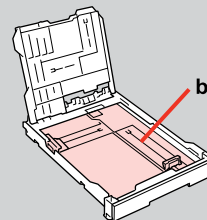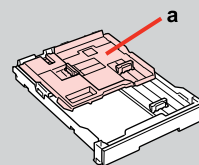

a: Photo tray


b: Main tray

3

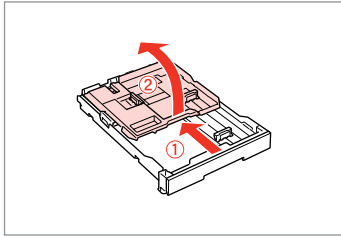


Slide and raise.

4

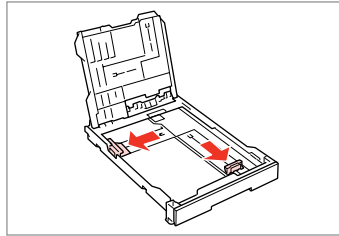


Pinch and slide to the sides.

5  → 10

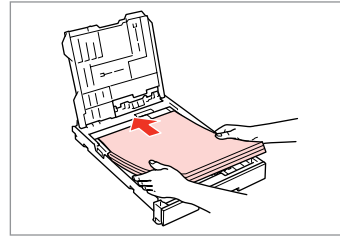


Load printable side DOWN.

6

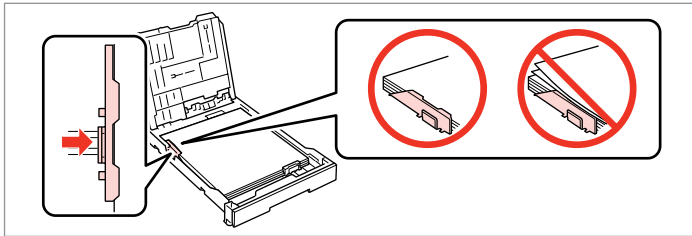


Slide to the edges of paper.

7

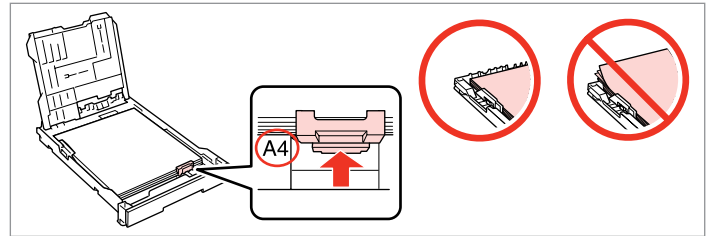


Slide to your paper size.

8

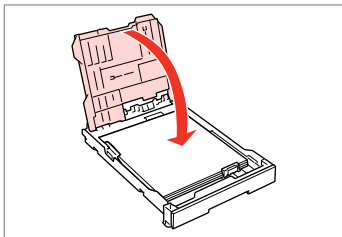


Close.

9

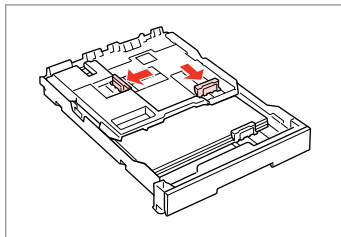


Pinch and slide to the sides.

10  10

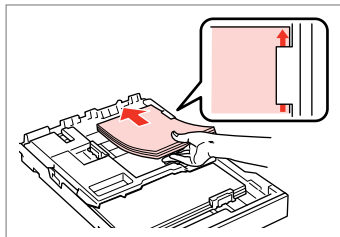


Load printable side DOWN.

11

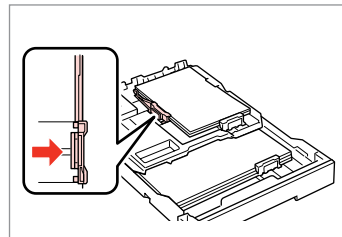


Slide to the edges of the paper.

12

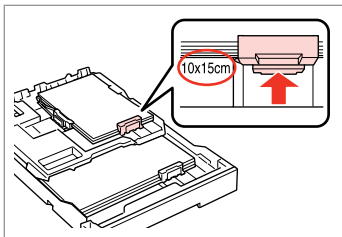


Slide to your paper size.

13

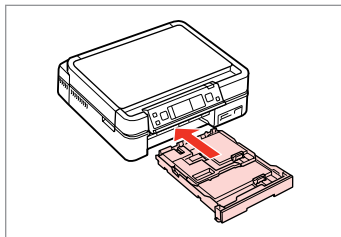

Insert keeping the cassette flat.

14

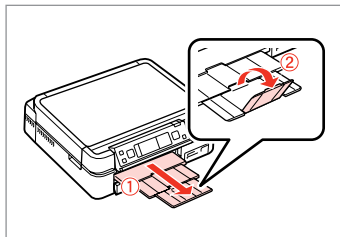


Slide out and raise.



Align the edges of the paper before loading.



Do not use paper with binder holes.

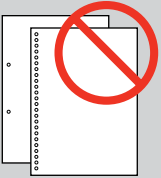


See the online **User's Guide** when using **Legal** size paper.



Do not pull out or insert the paper cassette while the printer is operating.



When loading a Photo Sticker sheet, place it face **DOWN** as shown on the right. Do not use the loading support sheet that came with the Photo Stickers.

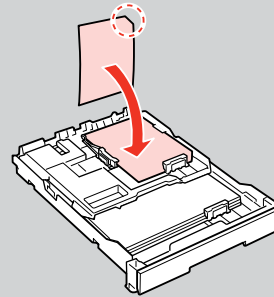


## Loading a CD/DVD




When ejecting/inserting the CD/DVD tray, make sure nothing is placed on the output tray.

1

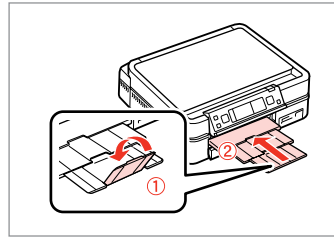


Close the output tray.

2

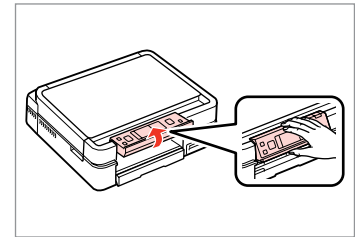

Raise as far as it will go.

3

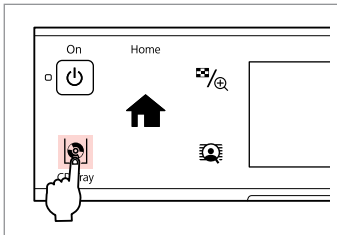

Eject the CD/DVD tray.




The CD/DVD tray cannot be ejected or extended any further.




To print on 8 cm CDs, see the online User's Guide.




The CD/DVD tray closes automatically after a certain period of time. Press  to eject again.

4

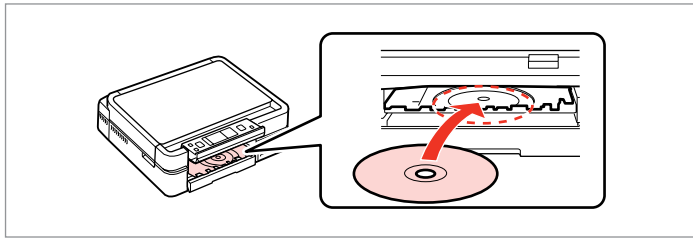


Place. Do not pull the CD/DVD tray.

5

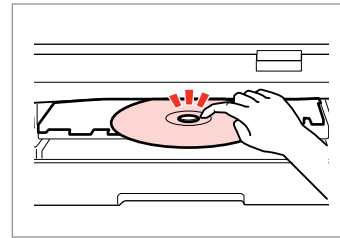

Press gently.


6

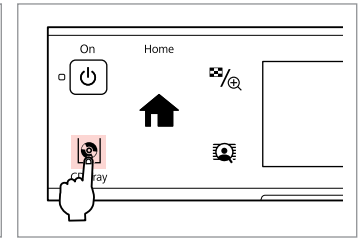

Close the CD/DVD tray.


### Removing a CD/DVD

1

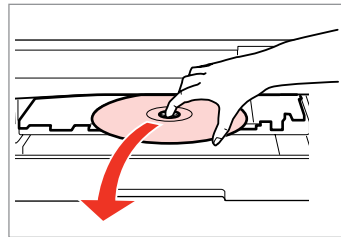


Remove horizontally.

2

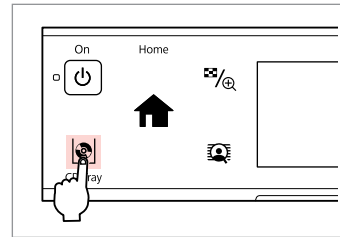

Close the CD/DVD tray.

3

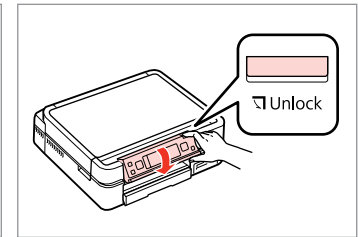


Lower.




## Inserting a Memory Card

1

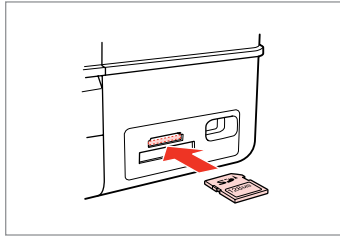

Insert one card at a time.

2

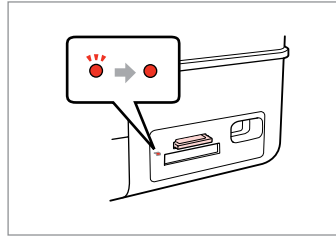


Check the light stays on.



Do not try to force the card all the way into the slot. It should not be fully inserted.


## Removing a memory card

1

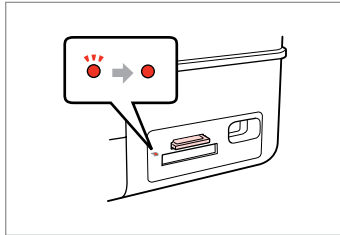



Check the light stays on.

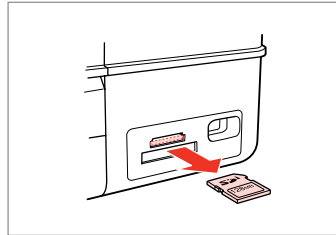2



Remove.



	
On	Flashing

		xD-Picture Card xD-Picture Card Type M xD-Picture Card Type M+ xD-Picture Card Type H
		SD SDHC MultiMediaCard MMCplus
		MMCmobile *
		MMCmicro *
		miniSD *
		miniSDHC *
		microSD *
		microSDHC *
		Memory Stick Memory Stick PRO MagicGate Memory Stick
	Memory Stick Duo *	
	Memory Stick PRO Duo *	
	Memory Stick PRO-HG Duo *	
	MagicGate Memory Stick Duo *	
	Memory Stick Micro *	

		CompactFlash
		Microdrive


\*Adapter required



If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck.


## Placing Originals

1

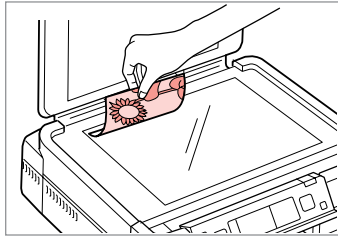


Place face-down horizontally.


2

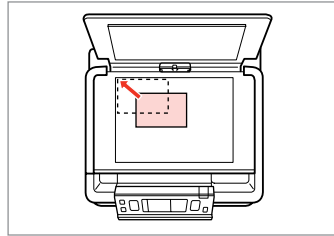

Slide to the corner.

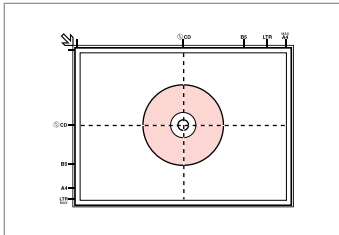

Place in the center.

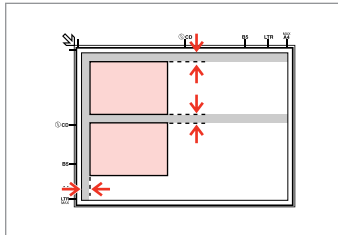


Place photos 5 mm apart.



You can copy one photo or multiple photos of different sizes at the same time, as long as they are larger than 30 × 40 mm.



You can print two pages of a book on a single side of one sheet. Select **Book/2-up** or **Book/2-Sided** as the layout and place the book as shown on the left.

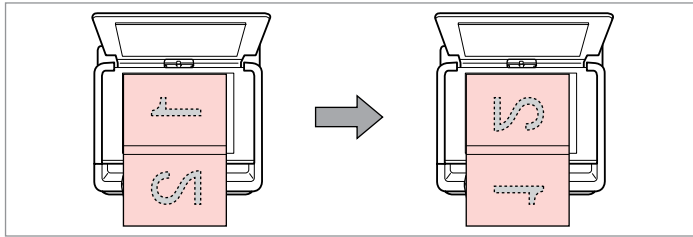

Place the first page.

Place the second page.




# Copy Mode




# Copying Documents

1  → 11

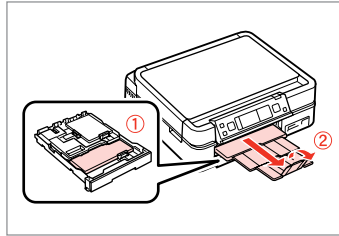


Load paper.

2  → 19

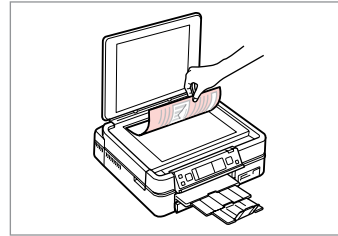


Place original horizontally.

3

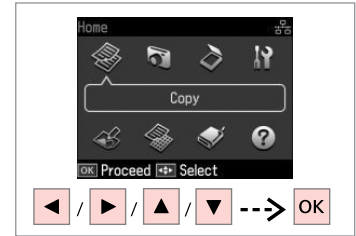


Select **Copy**.

4

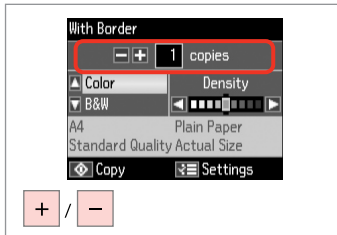


Set the number of copies.

5

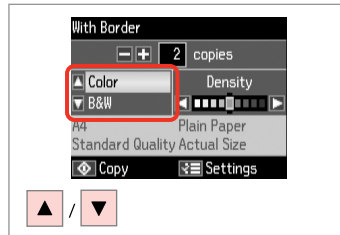


Select a color mode.

6

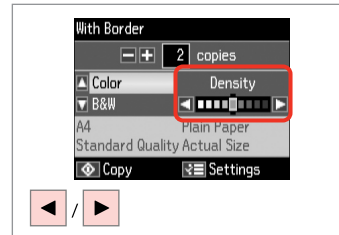


Set the density.

7

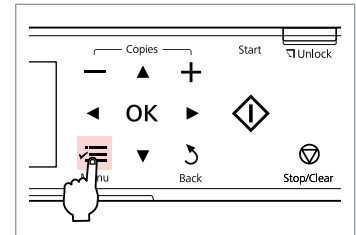

Enter the copy setting menu.

8

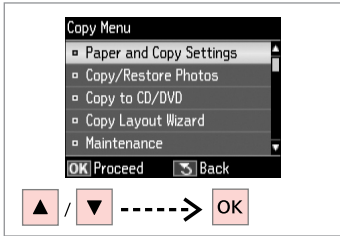


Select **Paper and Copy Settings**.


9




28

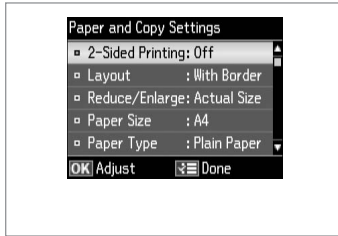

Select the appropriate copy settings.


 Make sure you set the **Paper Size** and **Paper Type**.

10

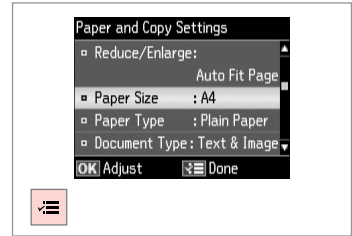


Finish the settings.

11

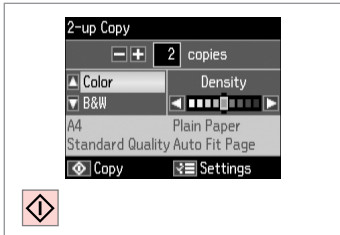


Start copying.

 When you want to copy double-sided documents using the auto duplexer, set **2-Sided Printing to On** in step **9**.


# Copy/Restore Photos

1 → 11

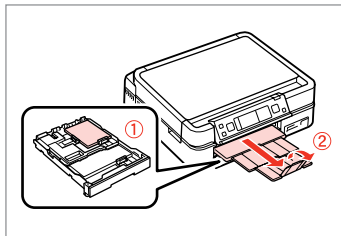


Load paper.

2 → 19

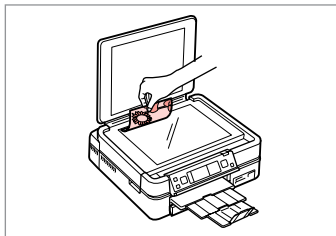


Place original horizontally.

3

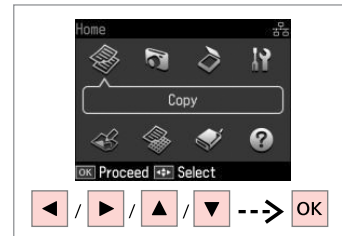


Select **Copy**.

4

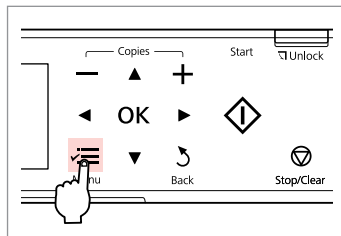


Enter the copy setting menu.

5

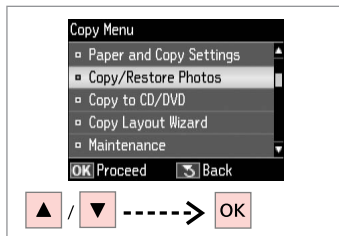


Select **Copy/Restore Photos**.

6

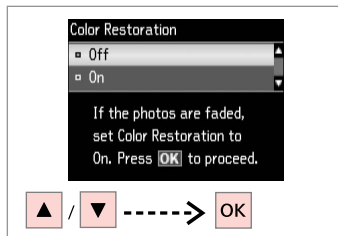

Select **On** or **Off**.


7

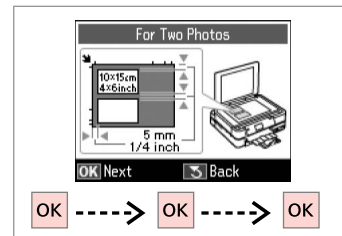

Proceed.



8

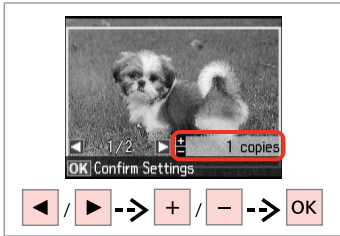


Set the number of copies.




If you scanned two photos, repeat step 8 for the second photo.

9

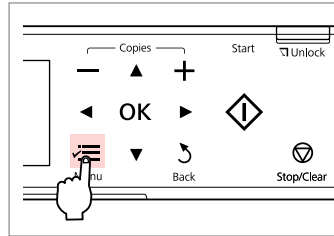


Enter the copy setting menu.

10

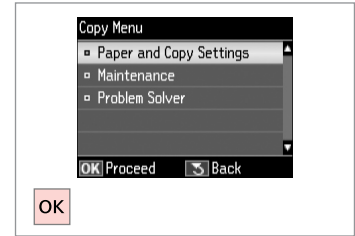

Proceed.

11 → 28

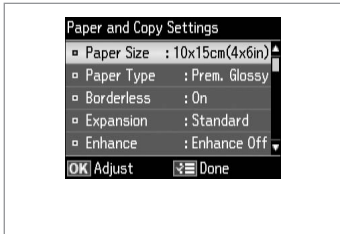


Select the appropriate print settings.




Make sure you set the **Paper Size** and **Paper Type**.

12

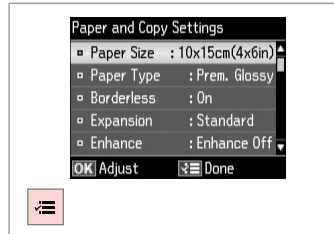

Finish the settings.


13

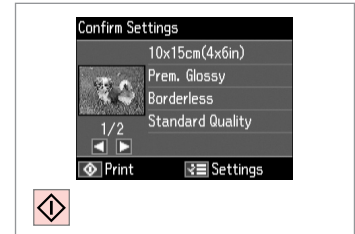

Start copying.


# Copying a CD/DVD

1  → 19

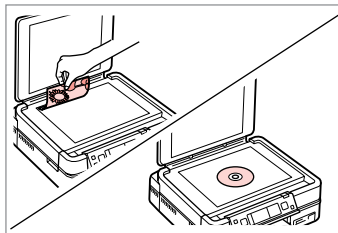


Place original.

2

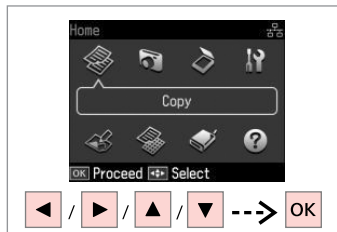


Select **Copy**.

3

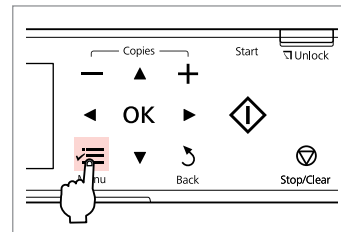


Enter copy menu.

4

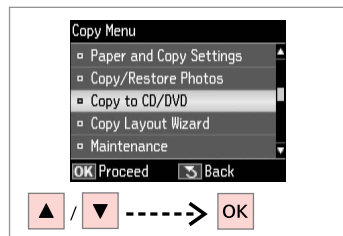


Select **Copy to CD/DVD**.

5

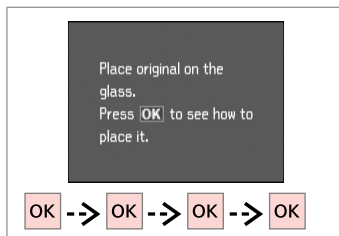

Proceed.

6

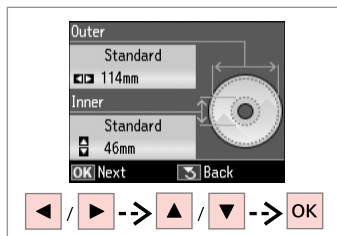

Set the printing area.



If you print on the colored areas shown on the right (the units are in mm), the disk or CD/DVD tray may be stained with ink.


117 - 120



18 - 42



7

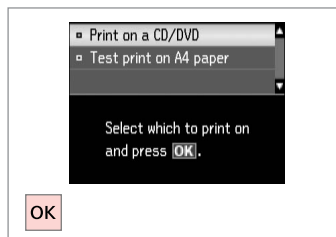


Select **Print on a CD/DVD**.




If you want to print a test sample on paper, select **Test print on A4 paper**.

8 → 15

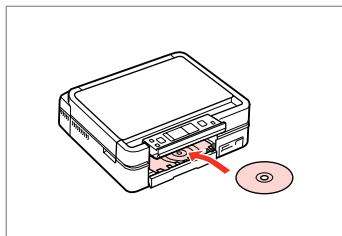

Load a CD/DVD.


9

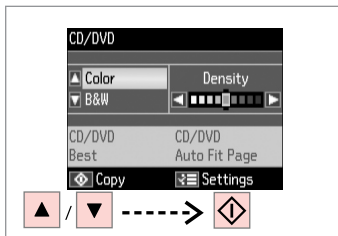

Select a color mode and proceed.




To adjust print position, select **Setup, Printer Setup**, then **CD/DVD**. → 60

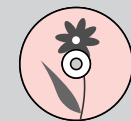

## Copy Mode Menu List

### ☰ Print settings for Copy Mode

Paper and Copy Settings	Layout	With Border, Borderless * <sup>5</sup> , 2-up Copy, Book/2-up, Book/2-Sided * <sup>2</sup>
	2-Sided Printing * <sup>2</sup>	Off, On
	Reduce/Enlarge	Custom Size, Actual Size, Auto Fit Page, 10×15cm->A4, A4->10×15cm, 13×18->10×15, 10×15->13×18, A5->A4, A4->A5
	Paper Size	A4, 13×18cm(5×7in), 10×15cm(4×6in), A5
	Paper Type	Plain Paper, Ultra Glossy, Prem. Glossy, Glossy, Matte, Photo Paper
	Document Type	Text, Text & Image, Photo
	Quality	Draft, Standard Quality, Best
	Binding Direction	Vertical-Long, Vertical-Short, Horizontal-Long, Horizontal-Short
	Dry Time * <sup>2</sup> * <sup>3</sup>	Standard, Long, Longer
	Expansion * <sup>4</sup>	Standard, Medium, Minimum
Copy/Restore Photos * <sup>1</sup>	Color Restoration	On, Off
	Paper and Copy Settings	Paper Size, Paper Type, Borderless, Expansion, Enhance * <sup>6</sup> , Filter * <sup>7</sup>
Copy to CD/DVD	Paper and Copy Settings	Document Type, Quality
Copy Layout Wizard	2-Sided Printing * <sup>2</sup> , Layout, Paper Size, Paper Type, Binding Direction	
Maintenance	 ➔ 60	
Problem Solver		

\*<sup>1</sup> You can restore the faded photo by selecting **On** in the **Color Restoration** setting in this wizard.

\*<sup>2</sup> These items are not displayed when the auto duplexer is removed.

\*<sup>3</sup> If the ink on the front of the paper is smeared, set a longer drying time.

\*<sup>4</sup> Select the amount the image is expanded when printing **Borderless** photos.

\*<sup>5</sup> Your image is slightly enlarged and cropped to fill the sheet of paper. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing.

\*<sup>6</sup> Select **PhotoEnhance** to automatically adjust the brightness, contrast, and saturation of your photos.


\*<sup>7</sup> You can change the color mode of images to **B&W**.

# Print Photos Mode




# Printing Photos

1  → 11

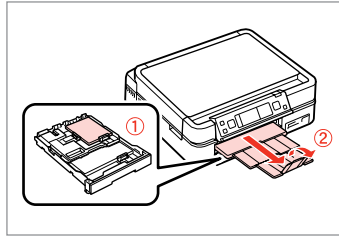


Load photo paper.

2  → 17

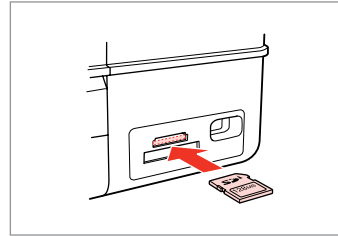


Insert a memory card.

3

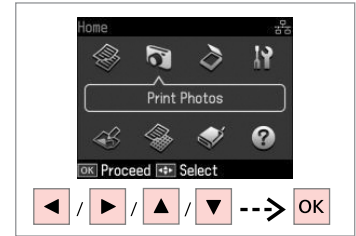

Select **Print Photos**.

4

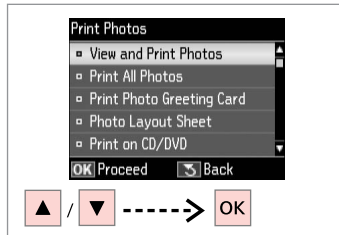


Select **View and Print Photos**.

5



Select a photo.

6

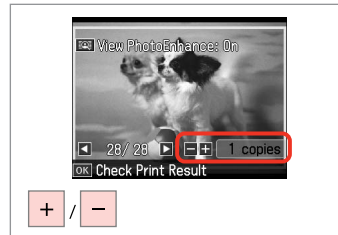


Set the number of copies.




To select more photos, repeat steps 5 and 6.



After step 6, you can crop and enlarge your photo. Press and make the settings.

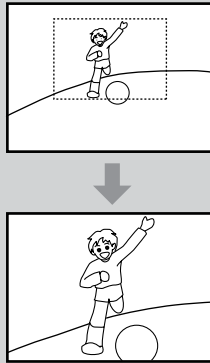


7

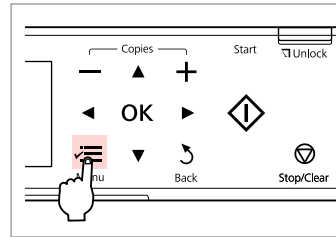


Enter the print setting menu.

8

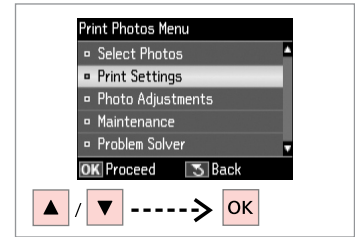

Select **Print Settings**.

9 41

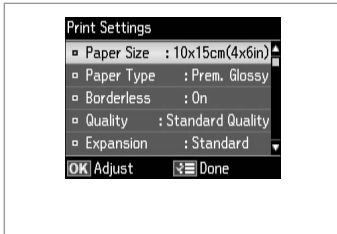

Select appropriate print settings.




Make sure you set the **Paper Size** and **Paper Type**.



To adjust photos, select **Photo Adjustments** and make the settings. 41


10

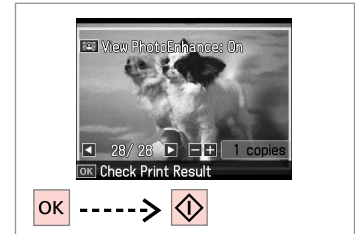

Start printing.


## Printing in Various Layouts

1  → 11

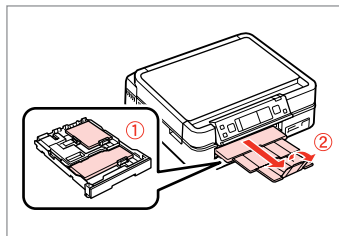


Load paper.

2  → 17

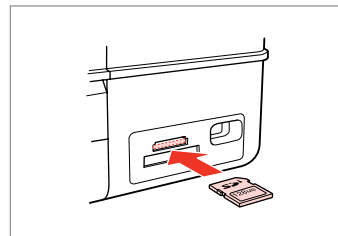


Insert a memory card.

3

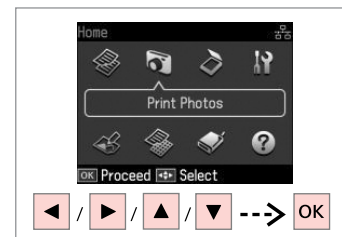


Select **Print Photos**.

4

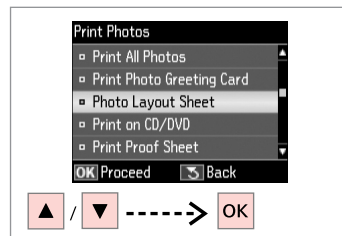


Select **Photo Layout Sheet**.

5

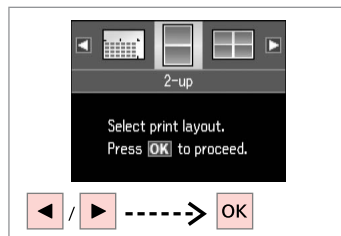


Select a layout.

6

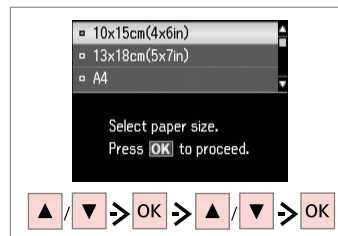

Select paper type and size.

7

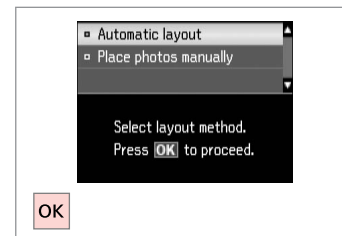

Select **Automatic layout**.





If you select **Place photos manually**, place photos as shown in (1) or leave a blank as shown in (2).

(1) ◀ / ▶ ---> OK



(2) OK



8



Select a photo.




To select more photos, repeat step 8.

9




Finish selecting photos.

10

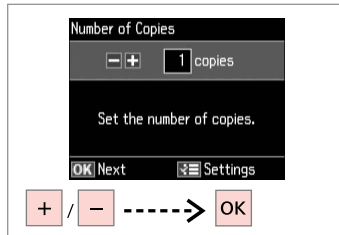

Set the number of copies.


11

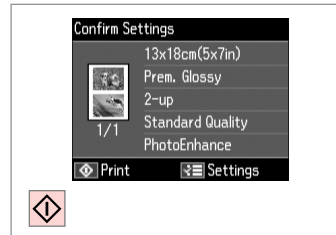

Print.


# Printing on a CD/ DVD

1  → 17

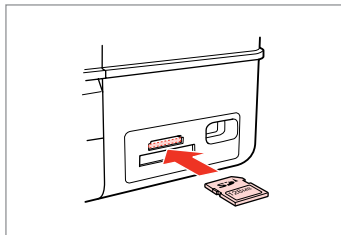


Insert a memory card.

2

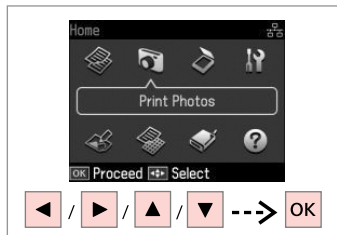


Select **Print Photos**.

3

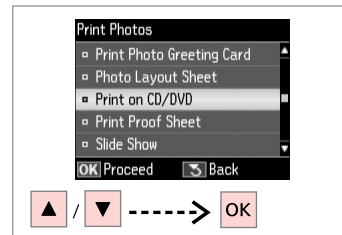


Select **Print on CD/DVD**.

4

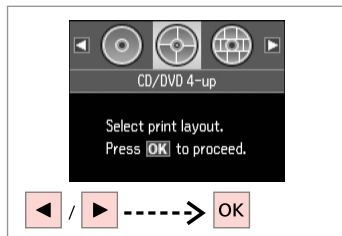

Select a layout.

5

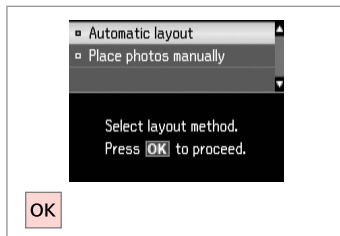


Select **Automatic layout**.



If you select **Place photos manually**, place photos as shown in (1) or leave a blank as shown in (2).


(1)  /  ---> 

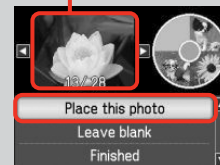

(2) 



6

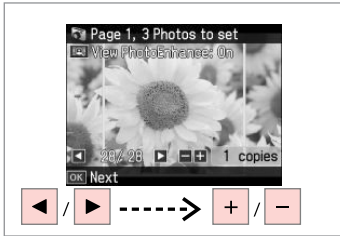



Select a photo.




To select more photos, repeat step 6.



After step 6, you can crop and enlarge your photo. Press  $\frac{\square}{\square}$  and make the settings.

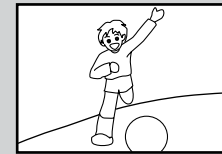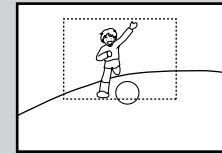


7

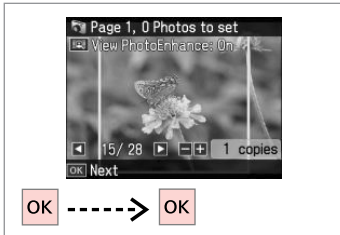


Finish selecting photos.

8

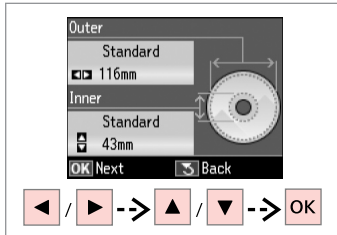

Set the printing area and proceed.

9

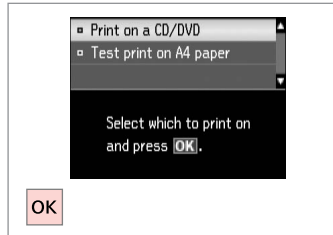


Select **Print on a CD/DVD**.




 If you want to print a test sample on paper, select **Test print on A4 paper**.




To make optional print settings, press .

10   15

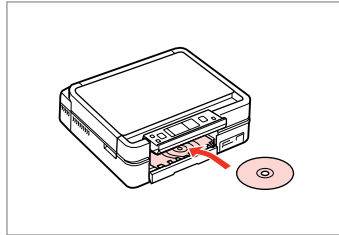

Load a CD/DVD.

11

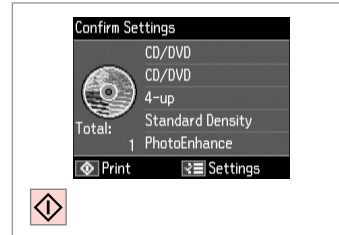

Start printing.




To print a CD/DVD jacket, select in the **Home** menu, **Print Photos, Photo Layout Sheet**, then **Jewel Upper** or **Jewel Index**, as the layout.




To adjust the print position, see "Copying a CD/DVD":   27

## Printing Photo Greeting Cards

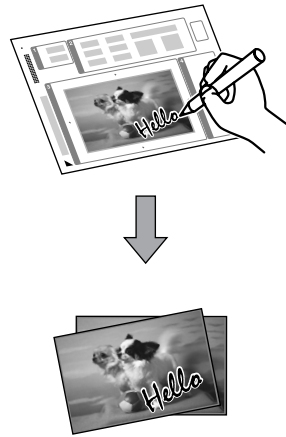


You can create custom cards with handwritten messages by using an A4 template. First print a template, write your message, and then scan the template to print your cards.

1  → 11

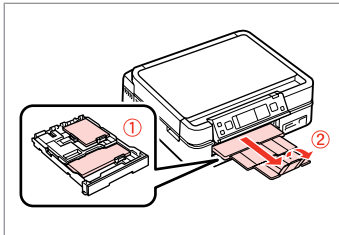


Load photo/A4 plain paper.

2  → 17

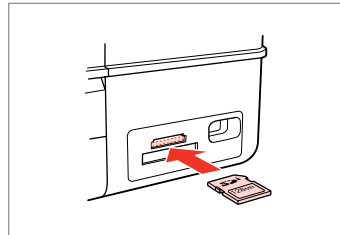


Insert a memory card.

3

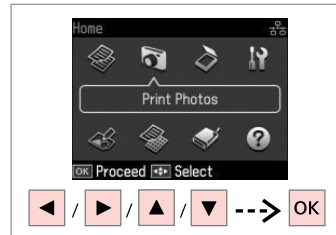


Select **Print Photos**.

4

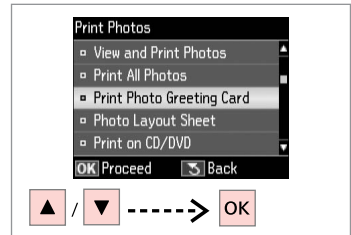


Select **Print Photo Greeting Card**.

5

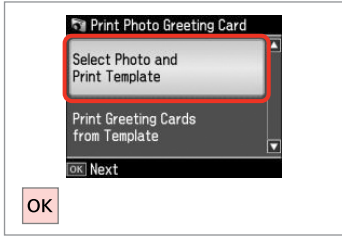


Proceed.

6

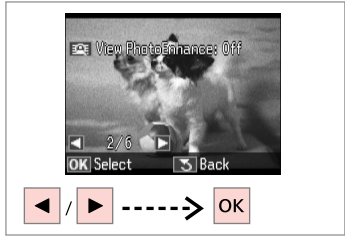


Select the photo to print.

7

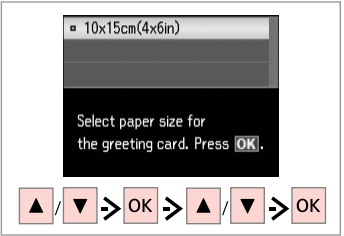


Select a paper type and size.

8

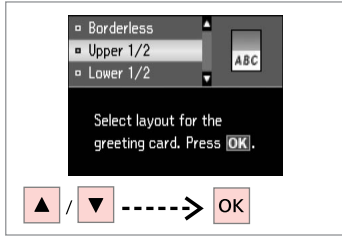


Select a layout.

9

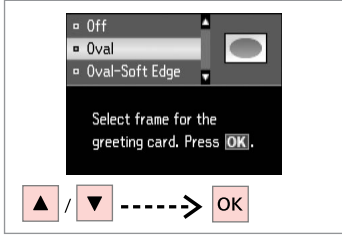


Select a frame.

10

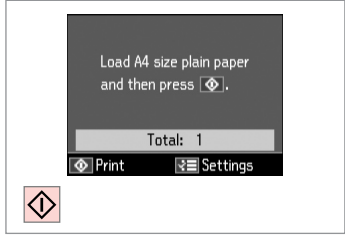


Print.

11

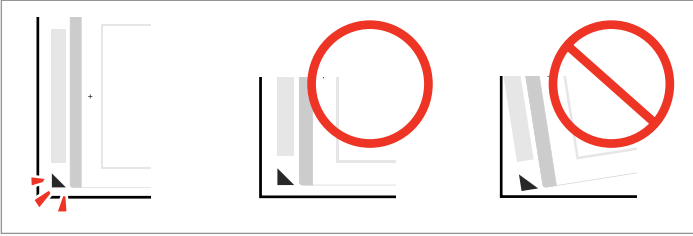


Check ▲ aligns with the corner of the sheet.

12

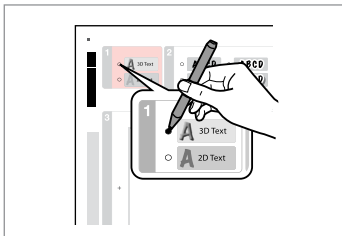


Select the style of the text.

13

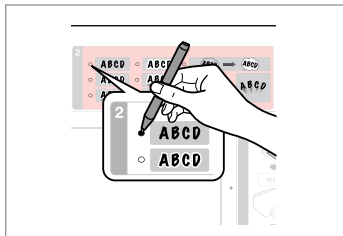


Select the type.

14

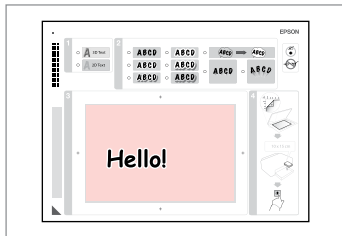


Write a message or drawing.

15   19

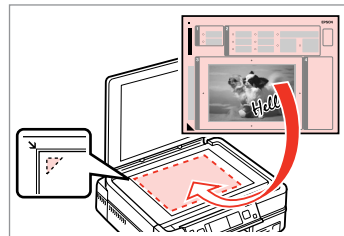


Place the template face-down.

16

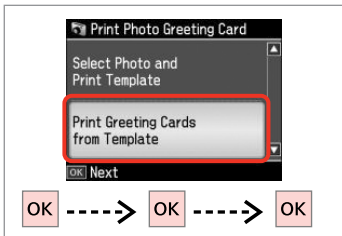


Select and proceed.

17

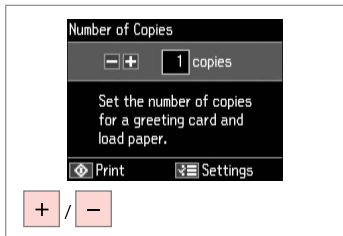

Set the number of copies.


18

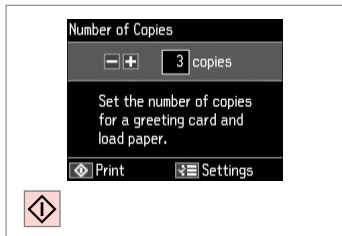

Start printing.


## Printing from an External USB Device

1  → 11

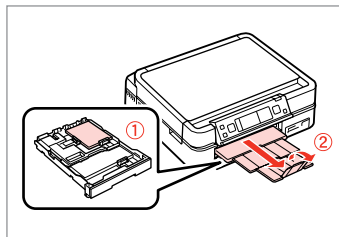


Load photo paper.

2  → 17

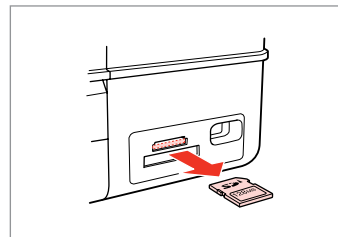


Remove.

3

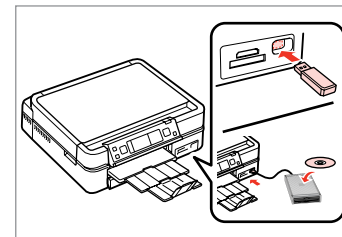


Connect an external USB device.

4

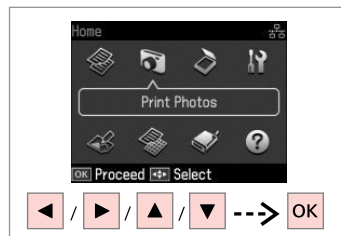

Select **Print Photos**.



After step 4, follow the steps for memory card printing.  → 30



The supported photo file format is JPEG. For external USB device specifications, see the online User's Guide.




# Print Photos Mode Menu List

## Print Photos

View and Print Photos, Print All Photos, Print Photo Greeting Card, Photo Layout Sheet, Print on CD/DVD, Print Proof Sheet, Slide Show, Copy/Restore Photos, Select Location \*10

## Photos Menu

Select Photos	Select All Photos, Select by Date, Cancel Photo Selection
Print Settings	Paper Size, Paper Type, Borderless *2, Quality, Expansion *3, Date, Print Info. On Photos *4, Fit Frame *5, Bidirectional *6, CD Density
Photo Adjustments *1	Enhance *7, Scene Detection, Fix Red-Eye *8, Filter *9, Brightness, Contrast, Sharpness, Saturation
Maintenance	 → 60
Problem Solver	

\*1 These functions only affect your printouts. They do not change your original images.

\*2 When **Borderless** is selected, the image is slightly enlarged and cropped to fill the paper. Print quality may decline in the top and bottom areas, or the area may be smeared when printing.

\*3 Select the amount the image is expanded when printing **Borderless** photos.

\*4 Select **Camera Text** to print text that you added to your photo using your digital camera.

\*5 Select **On** to automatically crop your photo to fit inside the space available for the layout you selected. Select **Off** to turn off automatic cropping and leave white space at the edges of the photo.

\*6 Select **On** to increase the print speed. Select **Off** to improve the print quality.

\*7 Select **PhotoEnhance** to adjust the brightness, contrast, and saturation of your photos automatically. Select P.I.M. to use your camera's PRINT Image Matching or Exif Print settings.


\*8 Depending on the type of photo, parts of the image other than the eyes may be corrected.

\*9 You can change the image color mode to **Sepia** or **B&W**.


\*10 You can reselect a folder or group from the memory card or external USB device.



# Other Mode

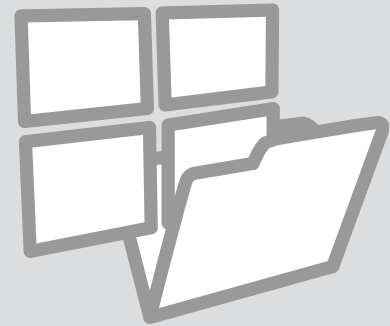


# Printing Ruled Paper

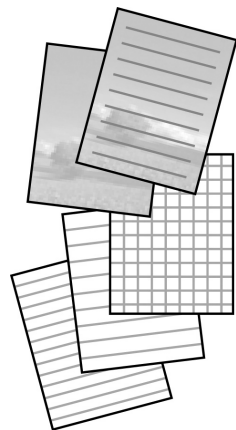


You can print ruled paper or graph paper with or without a photo set as the background.

1 → 11

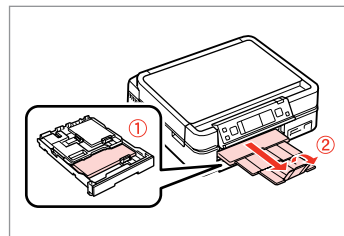


Load A4-size plain paper.

2 → 17

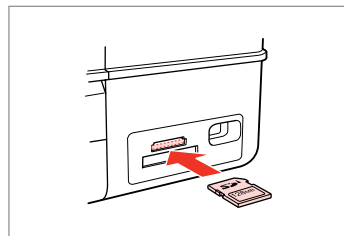


Insert a memory card.

3

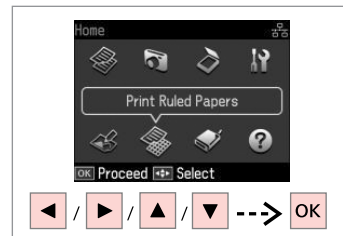

Select **Print Ruled Papers**.

4 → 51

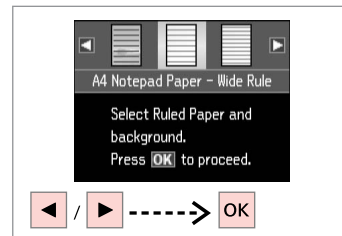


Select a type of format.



If you select a format without a background image, go to **7**.

**5**

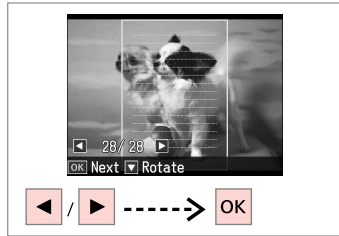


Select the photo to print.




To rotate the frame, press ▼.

**6**

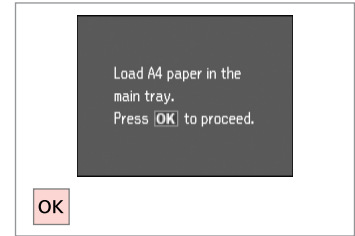

Proceed.

**7**

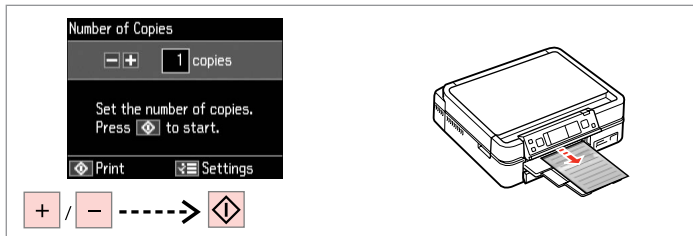

Set the number of copies and print.

## Printing a Coloring Sheet




You can create a coloring sheet from your photos or line drawings.




Only use the **Coloring Book** function for drawings and pictures that you created yourself. When using copyrighted materials, make sure you stay within the range of laws governing printing for personal use.

1  → 11

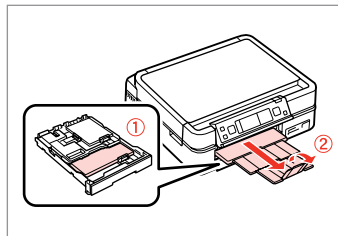


Load A4-size plain or Matte paper.

2  → 17, 19

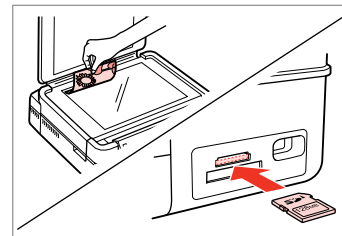


Place or insert.

3

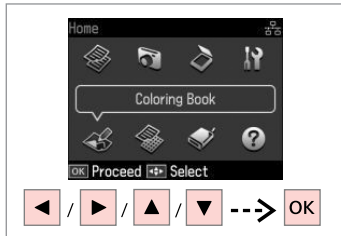


Select **Coloring Book**.


4

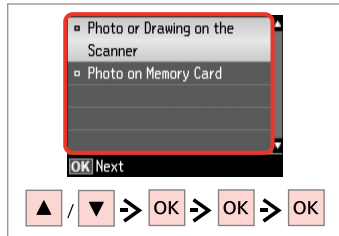

Select the type of input.

 If you are printing from a memory card, press ◀▶ to select the photo you want to print, then press **OK**.

5

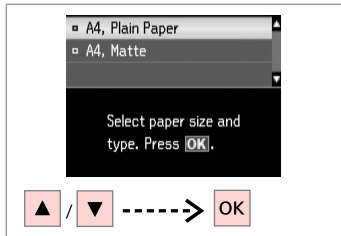


Select the paper type.

6




Start printing.

 If you want to change the density of the outline, or the density of the whole image, press ≡, then press **Print Settings** and select the appropriate settings after step 6.


## Scanning to a Memory Card

1  → 17

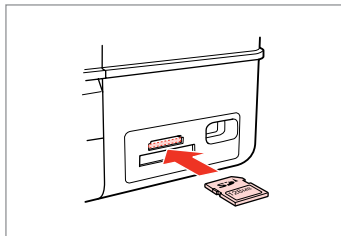


Insert a memory card.

2  → 19

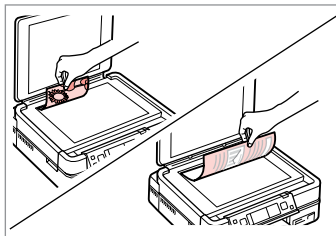


Place original horizontally.

3

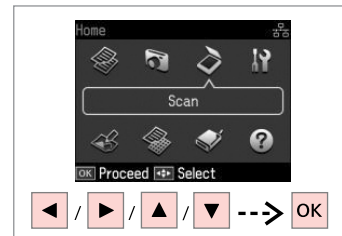


Select **Scan**.

4

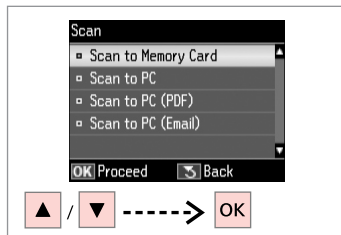

Select **Scan to Memory Card**.

5  → 51

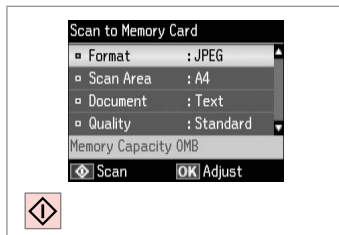

Select settings and scan.

6



Check the message on the screen.



If the edges of the photo are faint, change the **Scan Area**  → 51




## Scanning to a Computer




Make sure you have installed software for this printer on your computer and connected following the instructions on the Start Here poster.

1 → 19

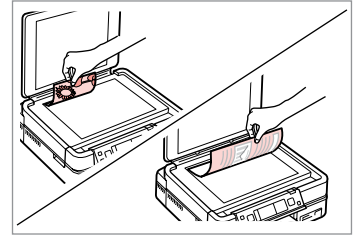


Place original horizontally.

2

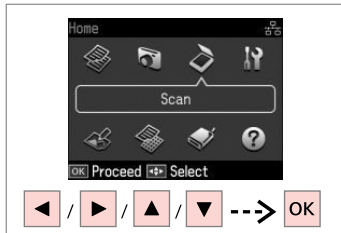

Select **Scan**.

3

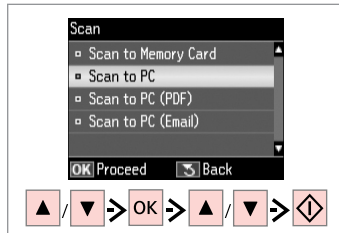


Select an item and then a PC.



After selecting a PC, your computer's scanning software automatically starts scanning. For details, see the online **User's Guide**.


## Backup to an External USB Device

1

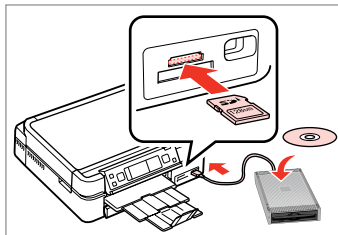


Insert and connect.

2

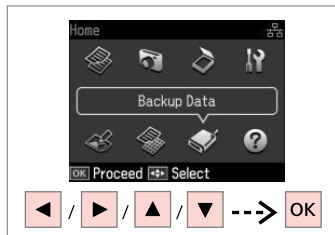


Select **Back Up Data**.

3

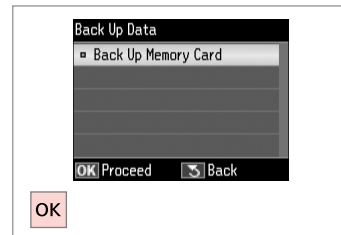


Select **Back Up Memory Card**.

4

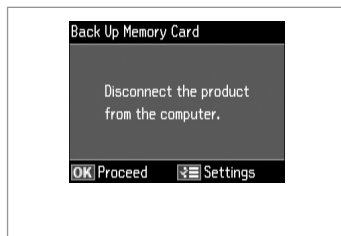


Follow the on-screen instructions.

 

To change the writing speed, press , select **Writing Speed** and set.



A folder is automatically created for each backup. You can print photos from the backup external USB device.  ➔ 40

## Other Mode Menu List

### Scan Mode

Scan to Memory Card	Format	JPEG, PDF
	Scan Area	A4, Auto Cropping, Max Area
	Document	Text, Photograph
	Quality	Standard, Best
	Binding Direction *1	Vertical-Long, Vertical-Short, Horizontal-Long, Horizontal-Short
Scan to PC		
Scan to PC (PDF)		
Scan to PC (Email)		

\*1 This item is only displayed when **PDF** is selected as the Format.

### Back Up Data Mode

Back Up Memory Card

### Coloring Book Mode

Photo or Drawing on the Scanner, Photo on Memory Card

A4 Plain Paper, A4 Matte

Print Settings    Density, Line Detection

### Print Ruled Papers Mode

A4 Notepad Paper - Wide Rule, A4 Notepad Paper - Narrow Rule, A4 Graph Paper, A4 Stationery w/o Lines, A4 Stationery w/Lines




# Setup Mode (Maintenance)




# Checking the Ink Cartridge Status

1

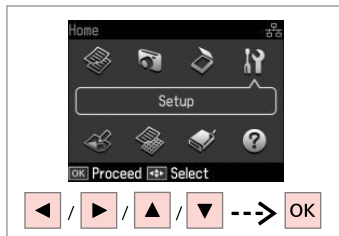


Select **Setup**.

2

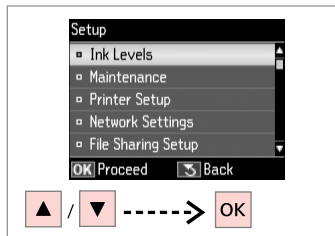

Select **Ink Levels**.

3

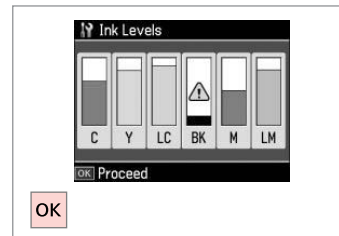

Finish.

C	Y	LC	BK	M	LM	
Cyan	Yellow	Light Cyan	Black	Magenta	Light Magenta	Ink is low.



Epson cannot guarantee the quality or reliability of non-genuine ink. If non-genuine ink cartridges are installed, the ink cartridge status may not be displayed.




If an ink cartridge is running low, prepare a new ink cartridge.

## Checking/Cleaning the Print Head




Print head cleaning uses some ink from all cartridges, so clean the print head only if quality declines.

1 → 11

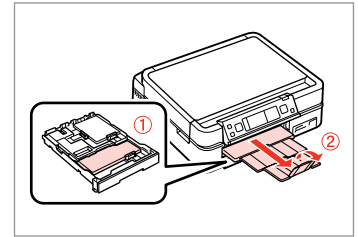


Load A4 size paper.

2

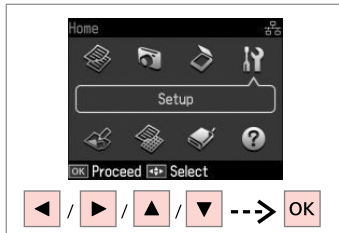


Select **Setup**.

3

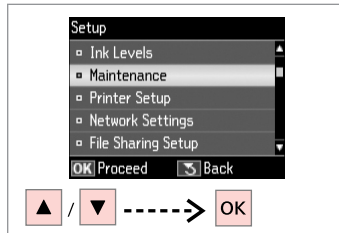


Select **Maintenance**.

4

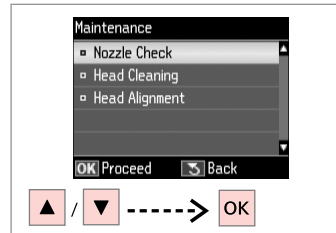


Select **Nozzle Check**.

5

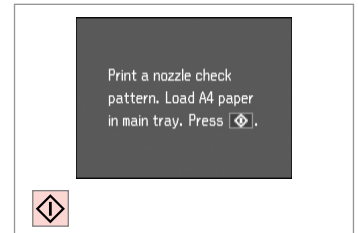


Start the nozzle check.

6

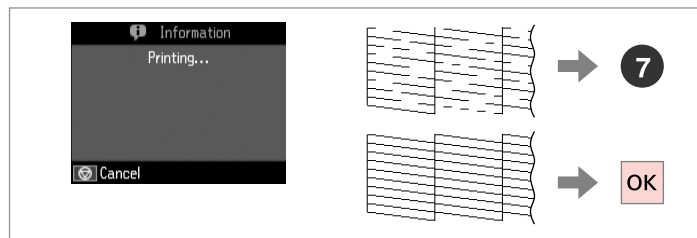


Check the pattern.

7

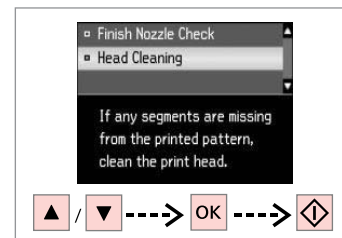

Select **Head Cleaning** and start.

8

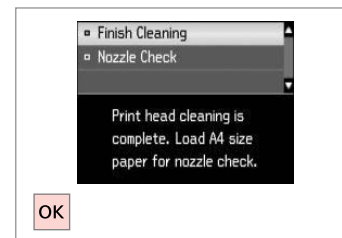

Finish head cleaning.




If quality does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. If quality still does not improve, contact Epson support.




# Aligning the Print Head

1  → 11

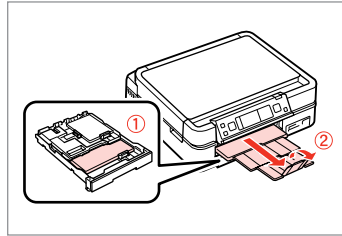


Load A4 size paper.

2

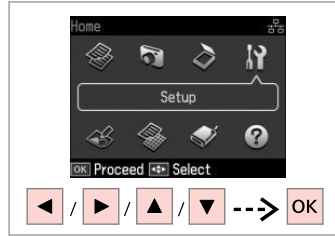


Select **Setup**.

3

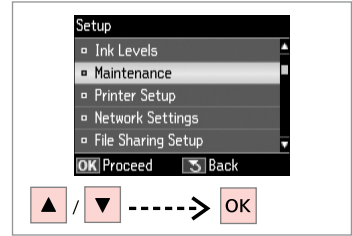


Select **Maintenance**.

4

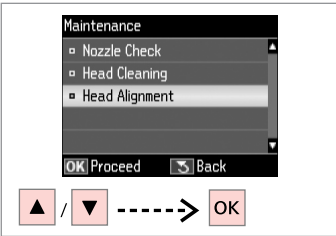


Select **Head Alignment**.

5

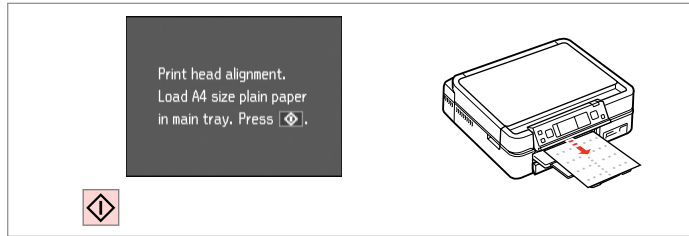


Print patterns.

6

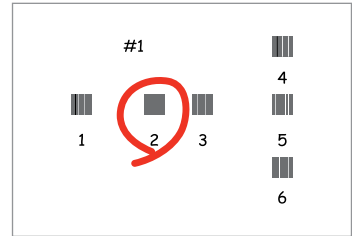


Select the most solid pattern.

7

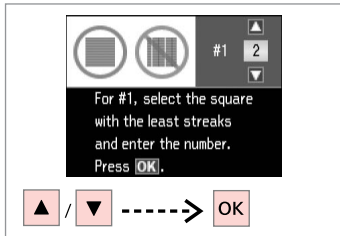

Select the pattern number.


8

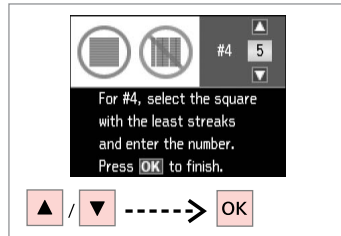

Repeat 7 for all patterns.


## Printing from a Digital Camera

1

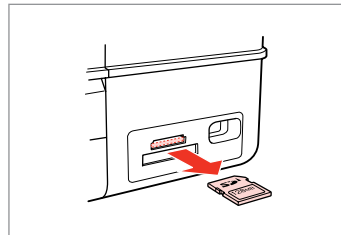


Remove.

2

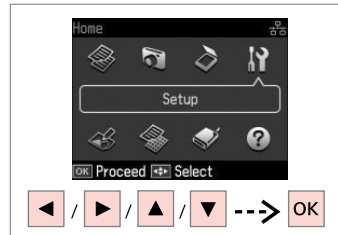


Select **Setup**.

3

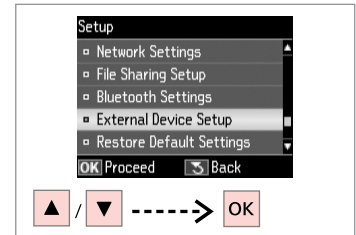


Select **External Device Setup**.

4  → 60

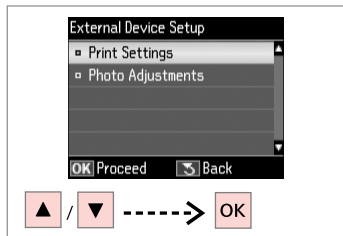


Select **Print Settings**.

5

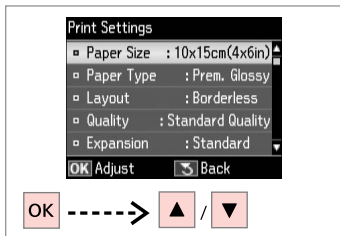


Select appropriate print settings.

6

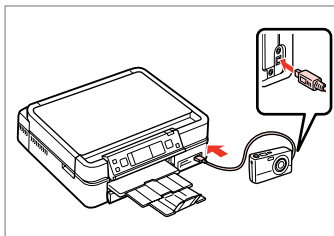

Connect and turn on the camera.

7

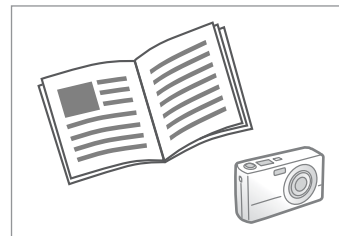

See your camera's guide to print.

---

Compatibility	PictBridge
File Format	JPEG
Image size	80 × 80 pixels to 9200 × 9200 pixels




Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported.



Some of the settings on your digital camera may not be reflected in the output.

## Setup Mode Menu List

### Setup Mode

Ink Levels		
Maintenance	Nozzle Check, Head Cleaning, Head Alignment	
Printer Setup	CD/DVD, Stickers, Thick Paper * <sup>1</sup> , Sound, Screen Saver, Display Format * <sup>2</sup> , Language	
Network Settings	See your online Network Guide for details.	
File Sharing Setup		
Bluetooth Settings	See your online User's Guide for details.	
External Device Setup	Print Settings	For details on the setting items, see the Print Photos Mode Menu list.  ➔ 41
	Photo Adjustments	
Restore Default Settings	Reset Network Settings, Reset All except Network Settings, Reset All Settings	




\*1 If the printout is smeared, set this function to **On**.

\*2 You can select the LCD screen display format from 1-up with Info, 1-up without Info, and View Thumbnail Images.

# Solving Problems



## Error Messages

Error Messages	Solution
Paper jam	 ➔ 66
Printer error. Turn power off and then on again. For details, see your documentation.	 ➔ 71
Cannot recognize photos. Make sure photos are placed correctly. See your documentation.	 ➔ 19
Communication error. Make sure the computer is connected, then try again.	Make sure the computer is connected correctly. If the error message still appears, make sure that scanning software is installed on your computer and that the software settings are correct.
The printer's ink pads are nearing the end of their service life. Please contact Epson Support.	Contact Epson support to replace ink pads before the end of their service life. When the ink pads are saturated, the printer stops and Epson support is required to continue printing.
The printer's ink pads are at the end of their service life. Please contact Epson Support.	Contact Epson support to replace ink pads.
Error in the data. The document cannot be printed. The data is not available because of a malfunction in the sending device.	See the documentation for the device transmitting the data.
Error in the data. The document may not be printed correctly. A part of the data is corrupted or cannot be buffered.	See the documentation for the device transmitting the data.
Backup Error. Error Code xxxxxxxx	A problem occurred and backup was canceled. Make a note of the error code and contact Epson support.
The combination of IP address and subnet mask is invalid. See your documentation.	Refer the online Network Guide.


## Replacing Ink Cartridges

### Ink Cartridge Handling Precautions

- Never move the print head by hand.
- For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted.
- Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.
- Make sure you have a new ink cartridge before you begin replacement. Once you start replacing a cartridge, you must complete all the steps in one session.
- Leave the expended cartridge installed until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.
- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.
- When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink.




1

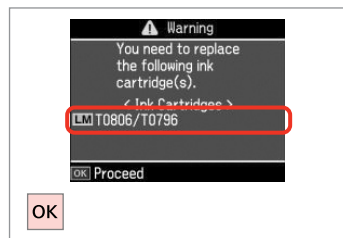


Check the color to replace.

2

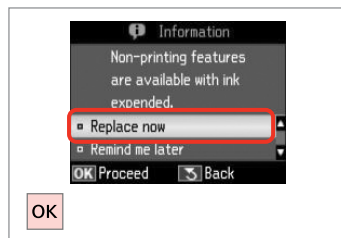


Select **Replace now**.

3

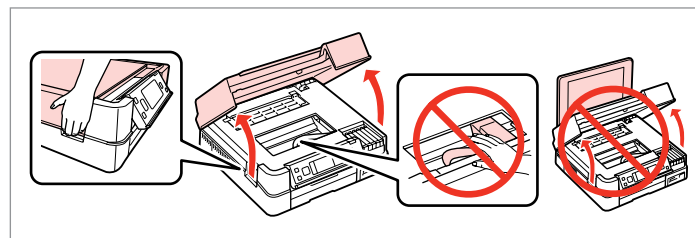


Open.

4

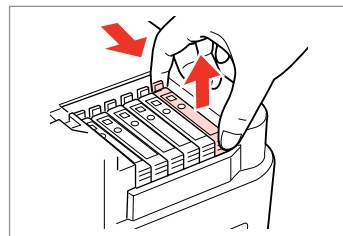

Pinch and remove.

5

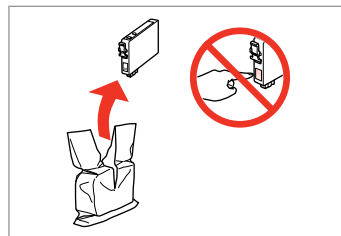


Unpack new cartridge.



Be careful not to break the hooks on the side of the ink cartridge.




6

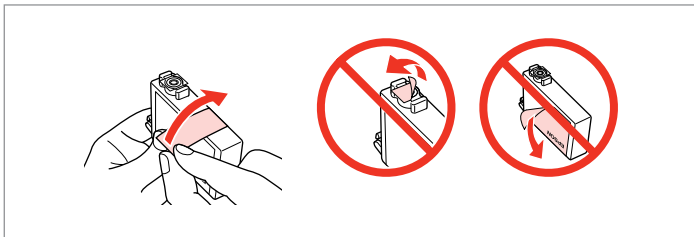


Remove the yellow tape.

7

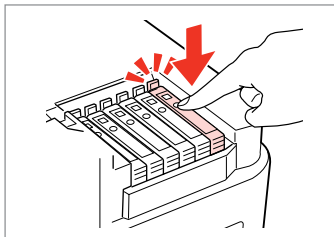

Insert and push.

8

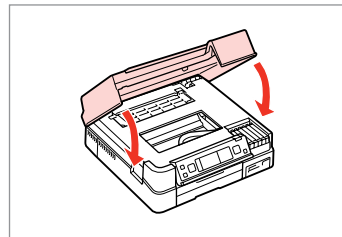

Close. Ink charging starts.



If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals.



To replace an ink cartridge before it is expended, follow the instructions from step 3 with the printer turned on.

## Paper Jam



Never touch the buttons on the control panel while your hand is inside the printer.

### Paper Jam Messages

Paper jam inside the product. Press OK to see how to remove the paper.

 → 67

A

Paper out or paper jam in the main tray, or paper size is incorrect. Check paper size settings or clear the jam.

 → 68




B

Paper jam. Remove the Auto Duplexer. Press OK to see how to remove it.


 → 70

C











A

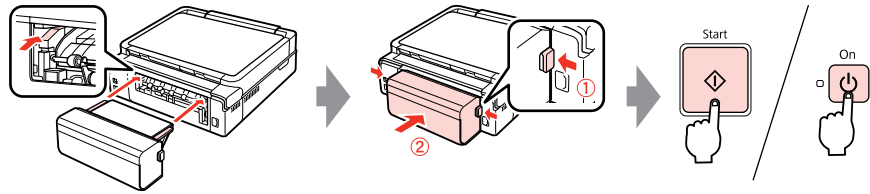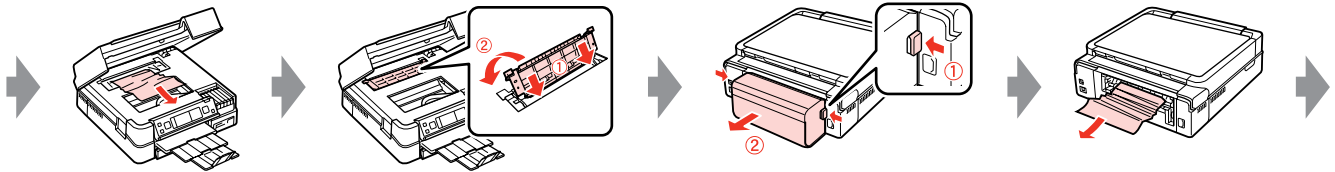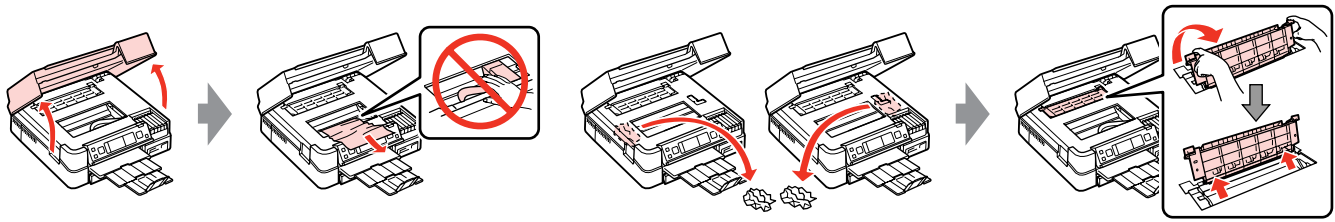


Operate the button as instructed on the LCD screen.


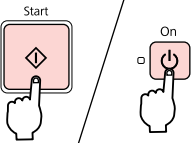


B

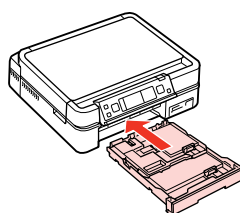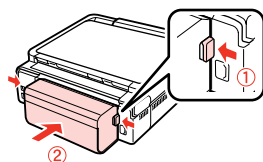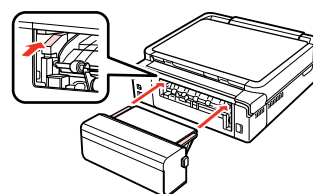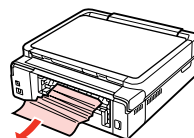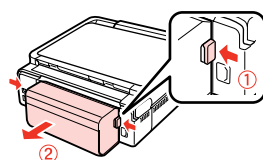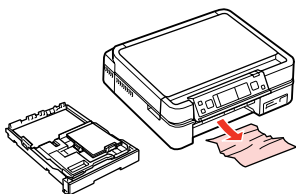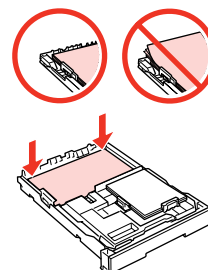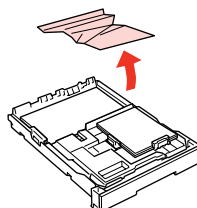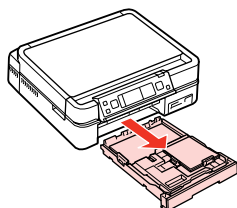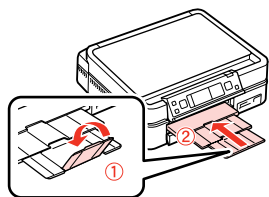

  
If an error message cannot be cleared, try the following steps.




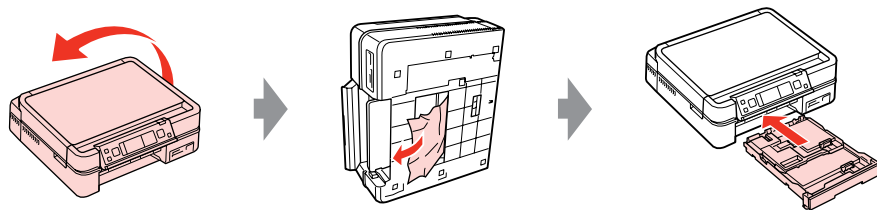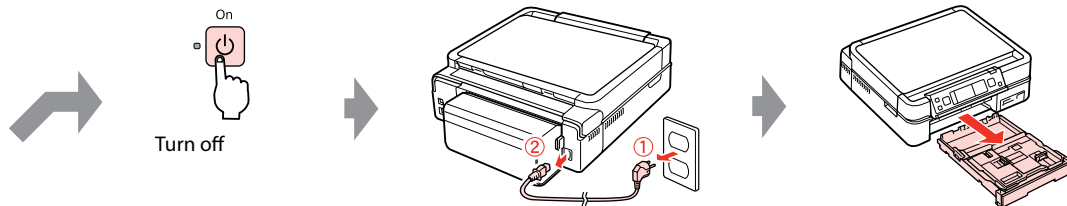


C



Do not turn off the printer.

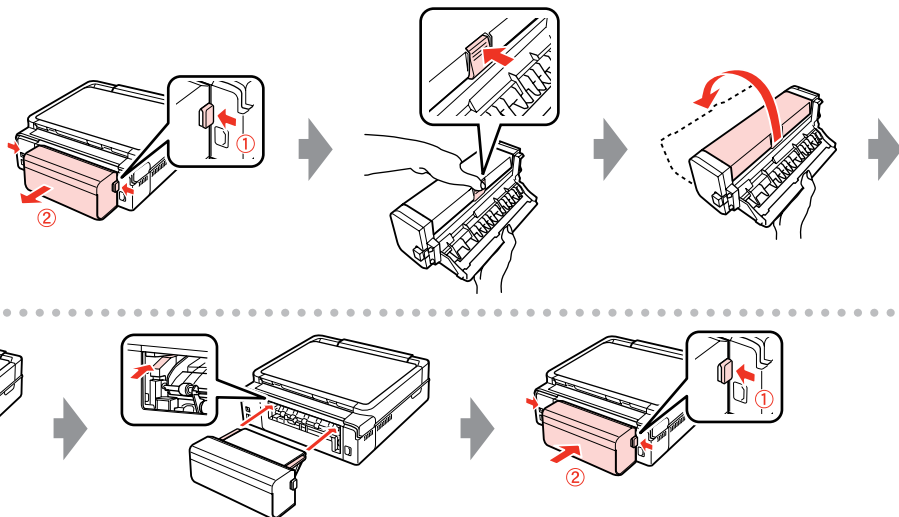


## Printer Error

Turn off the printer and then make sure that no paper remains in the printer.  → 66

.....



If the protective material is in its original position, remove it and install it as shown on the right. Finally, turn the printer back on. If the error message still appears, contact Epson support.

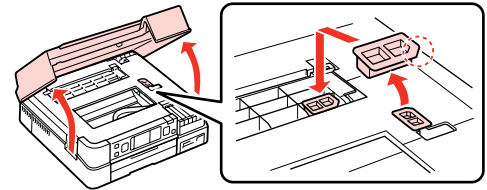

## Print Quality/Layout Problems

Try the following solutions in order from the Top. For further information, see your online **User's Guide**.

Problems	Solution No.
You see banding (light lines) in your printouts or copies.	<b>1 2 4 5 7 9</b>
Your printout is blurry or smeared.	<b>1 2 4 5 6 8</b>
Your printout is faint or has gaps.	<b>1 2 3 4 7</b>
Your printout is grainy.	<b>5</b>
You see incorrect or missing colors.	<b>4 7</b>
The image size or position is incorrect.	<b>10 11 12 13 14</b>
Solutions	
<b>1</b> Make sure you select the correct paper type. ☞ ➔ 10	
<b>2</b> Make sure the printable side (the whiter or glossier side) of the paper is facing to the correct direction. ☞ ➔ 11	
<b>3</b> When you select <b>Standard Quality</b> or <b>Best</b> as the <b>Quality</b> setting, set the <b>Bidirectional</b> setting to <b>Off</b> . Bidirectional printing decreases print quality. ☞ ➔ 41	
<b>4</b> Clean the print head. ☞ ➔ 55	
<b>5</b> Align the print head. ☞ ➔ 57 If quality is not improved, try aligning using the printer driver utility. See your online User's Guide to align the print head.	
<b>6</b> To clean the inside of the printer, make a copy without placing a document on the document table. For further information, see your online <b>User's Guide</b> .	
<b>7</b> For best results, use up ink cartridge within six months of opening the package. ☞ ➔ 63	
<b>8</b> Try to use genuine Epson ink cartridges and paper recommended by Epson.	
<b>9</b> If a moiré (cross-hatch) pattern appears on your copy, change the <b>Reduce/Enlarge</b> setting or shift the position of your original.	
<b>10</b> Make sure you selected the correct <b>Paper Size</b> , <b>Layout</b> , <b>Expansion</b> , and <b>Reduce/Enlarge</b> setting for the loaded paper. ☞ ➔ 28, 41	
<b>11</b> Make sure you loaded paper and placed the original correctly. ☞ ➔ 11, 19	
<b>12</b> Adjust the CD/DVD print position if it is misaligned. ☞ ➔ 27	
<b>13</b> If the edges of the copy or photo are cropped off, move the original slightly away from the corner.	
<b>14</b> Clean the document table. See your online <b>User's Guide</b> .	

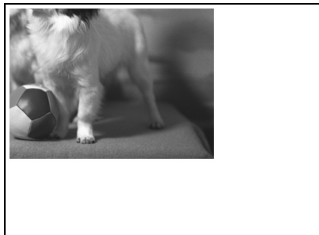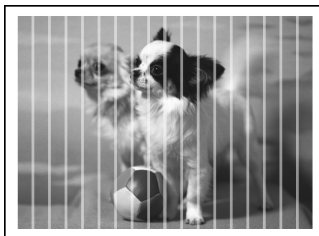



## Other Problems


In some cases, such as when the scanner unit is left open for a certain period of time, the printer may stop printing halfway and the paper or CD/DVD may be ejected. If the scanner unit is open, close it. The printer may resume printing, but if it does not, try printing again.

## Contacting Epson Support

If you cannot solve the problem using the troubleshooting information, contact Epson support services for assistance. You can get the contact information for Epson support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product.


# Index

<b>A</b>	2-Sided Printing.....	23.28	<b>J</b>	Jams, paper.....	66	thumbnail index, printings.....	41	
	Aligning the Print Head.....	57	<b>L</b>	Language, change.....	60	thumbnail view.....	60	
	auto duplexer.....	8	<b>M</b>	Main tray.....	11	trimming (crop).....	31.35	
<b>B</b>	B&W print.....	28.41	<b>N</b>	Memory Card.....	17	Troubleshooting.....	61	
	Back up memory card.....	50.51	<b>P</b>	Nozzle check.....	60	<b>U</b>	USB external device.....	40
	Bidirectional (print speed).....	41		P.I.M.....	28.41	USB flash drive.....	40	
	Binding direction.....	28		Panel.....	6.7.8	<b>V</b>	viewer.....	7
	Book/2-Sided.....	20.28		Paper, jams.....	66	View PhotoEnhance.....	7	
	Book/2-up.....	20.28		PhotoEnhance.....	7.28.41	<b>Z</b>	zoom (crop).....	31.35
	Borderless/With Border.....	28.41		PhotoEnhance Preview.....	6	zoom (Reduce/Enlarge).....	28	
	Brightness.....	41		Photo Sticker.....	14			
<b>C</b>	Buttons, Control Panel.....	6.7		Photo tray.....	11			
	Camera Text.....	41		Print All Photos.....	41			
	CD/DVD jacket, printing.....	36		Print Ruled Papers.....	51			
	CD/DVD print position, adjusting.....	27	<b>Q</b>	Proof sheet (Thumbnail).....	41			
	CD Density.....	41		Quality.....	72			
	cleaning, inside of the printer.....	72	<b>R</b>	rear cover.....	8			
	Coloring Book.....	46		red eye, correction.....	41			
	Color restoration.....	24		Restore Default Settings.....	60			
	Contrast.....	41	<b>S</b>	Safety Instructions.....	4			
	Control Panel.....	6.7		Saturation.....	41			
	copying, restore faded photo.....	24		Save photos (backup).....	50.51			
	copying document.....	22		Scan (document copy).....	22			
	copying photos.....	24		Scan (photo copy).....	24			
	crop photo.....	31		Scan Area.....	51			
<b>D</b>	Date print.....	41		Scan to Memory Card.....	48.51			
	Digital Camera, printing from.....	58		Scan to PC.....	49.51			
	Display.....	7		Scan to PC (Email).....	49.51			
	Display Format.....	60		Scan to PC (PDF).....	49.51			
	double-sided copy.....	23		Scene Detection.....	41			
	Dry time.....	28		Screen Saver.....	60			
<b>E</b>	Enhance.....	28.41		Select by Date (photo).....	41			
	Error messages.....	62		Select Folder.....	7			
	Expansion (Borderless photos).....	28.41		Select Group.....	7			
	external device.....	40		Select Location.....	7.41			
	External Device Setup.....	58.60		sepia print.....	28.41			
<b>F</b>	Filter (Sepia, B&W).....	28.41		Sharpness.....	41			
	Fit Frame.....	41		Slide Show.....	41			
<b>G</b>	Greeting Card.....	37		support paper.....	10			
<b>I</b>	ink cartridge, replacing.....	63	<b>T</b>	Thick Paper.....	60			
	ink cartridge status.....	54						
	Ink levels.....	60						

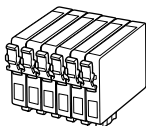

	Black	Cyan	Magenta	Yellow	Light Cyan	Light Magenta
Epson Stylus Photo TX720WD/ Artisan 725	82N 81N	82N 81N	82N 81N	82N 81N	82N 81N	82N 81N

Getting more information.

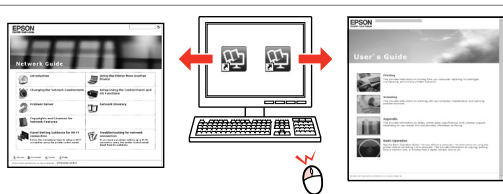

Copyright © 2010 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX



\*411899200\*