


**EN** Basic Operation Guide

- for use without a computer -

**ID** Panduan Dasar Pemakaian

- untuk penggunaan tanpa komputer -

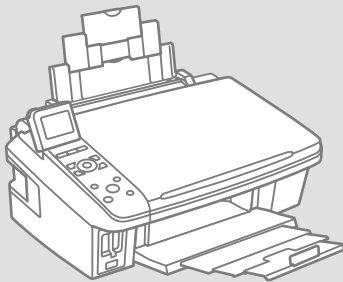




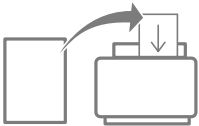
## About This Guide

### Tentang Panduan Ini

Follow these guidelines as you read your instructions:


Ikuti pedoman berikut saat Anda membaca instruksi yang ada:

				
<p><b>Warning:</b> Warnings must be followed carefully to avoid bodily injury.</p>	<p><b>Caution:</b> Cautions must be observed to avoid damage to your equipment.</p>	<p>Must be observed to avoid bodily injury and damage to your equipment.</p>	<p><b>Note:</b> Notes contain important information and hints for using the printer.</p>	<p>Indicates a page number where additional information can be found.</p>
<p><b>Peringatan:</b> Peringatan harus diikuti dengan hati-hati untuk menghindari cacat fisik.</p>	<p><b>Perhatian:</b> Perhatian harus dipatuhi untuk menghindari kerusakan pada peralatan Anda.</p>	<p>Harus dipatuhi untuk menghindari cacat fisik dan kerusakan peralatan.</p>	<p><b>Catatan:</b> Catatan berisi informasi penting dan petunjuk untuk menggunakan printer ini.</p>	<p>Menunjukkan nomor halaman di mana informasi tambahan dapat ditemukan.</p>






📖 ➔ 13

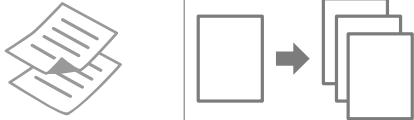Handling
Penanganan





📖 ➔ 19

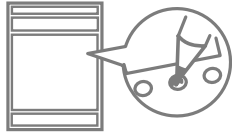Copy Mode	Photos/Documents
Mode Salin	Foto/Dokumen

📖 ➔ 25

Memory Card Mode	Photos	Index Sheet
Mode Kartu Memori	Foto	Lembar Indeks

📖 ➔ 33

Photo Print Mode	Reprint
Mode Cetak Foto	Cetak ulang

## EN Contents

Important Safety Instructions.....	6
Guide to Control Panel.....	8
Using the LCD Screen.....	10
<b>Handling Media</b>	
Selecting Paper.....	14
Loading Paper.....	15
Placing Originals.....	16
Inserting a Memory Card.....	17
<b>Copying</b>	
Copying Photos or Documents.....	20
Copy Mode Menu List.....	22
<b>Printing from a Memory Card</b>	
Printing Photos.....	26
Printing From an Index Sheet.....	28
Memory Card Mode Menu List.....	31
<b>Photo Print Mode</b>	
Reprint / Restore Photos.....	34
Photo Print Mode Menu List.....	36
<b>Setup Mode (Maintenance)</b>	
Checking the Ink Cartridge Status.....	40
Checking/Cleaning the Print Head.....	42
Aligning the Print Head.....	44
PictBridge Setup.....	46
Setup Mode Menu List.....	48
<b>Solving Problems</b>	
Error Messages.....	52
Replacing Ink Cartridges.....	54
Paper Jam.....	57
Print Quality Problems.....	58
Print Layout Problems.....	59
Contacting Customer Support.....	60
Index.....	61


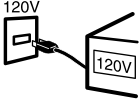




## ID Daftar Isi







Instruksi Keamanan Penting.....	6
Panduan untuk Panel Kontrol.....	8
Menggunakan Layar LCD.....	10
<b>Penanganan Media</b>	
Memilih Kertas.....	14
Memuatkan Kertas.....	15
Menempatkan Dokumen Asli.....	16
Memasukkan Kartu Memori.....	17
<b>Menyalin</b>	
Menyalin Foto atau Dokumen.....	20
Daftar Menu Mode Copy.....	22
<b>Mencetak dari Kartu Memori</b>	
Mencetak Foto.....	26
Mencetak Dari Lembar Indeks.....	28
Daftar Menu Mode Memory Card.....	31
<b>Mode Cetak Foto</b>	
Mencetak kembali/ Memulihkan Foto.....	34
Daftar Menu Mode Photo Print.....	36
<b>Mode Setup (Pemeliharaan)</b>	
Memeriksa Status Cartridge Tinta.....	40
Memeriksa/Membersihkan Print Head.....	42
Meratakan Print Head.....	44
PictBridge Setup.....	46
Daftar Menu Mode Setup.....	48
<b>Menyelesaikan Masalah</b>	
Pesan Kesalahan.....	52
Mengganti Cartridge Tinta.....	54
Kertas Tersangkut.....	57
Masalah Kualitas Cetakan.....	58
Masalah Penataan Cetakan.....	59
Menghubungi Dukungan Pelanggan.....	60
Indeks.....	62



# Important Safety Instructions


## Instruksi Keamanan Penting

					
Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.	Make sure the power cord meets all relevant local safety standards.	Place the printer near a wall outlet where the power cord can be easily unplugged.	Use only the type of power source indicated on the label.	Do not let the power cord become damaged or frayed.	Do not open the scanner unit while copying, printing, or scanning.
Gunakan hanya kabel daya yang disertakan dengan printer. Penggunaan kabel lain dapat menyebabkan kebakaran atau sengatan listrik. Jangan gunakan kabel dengan peralatan lain.	Pastikan kabel daya memenuhi semua standar keamanan lokal yang relevan.	Tempatkan printer di dekat stopkontak dinding di mana kabel daya dapat dicabut dengan mudah.	Gunakan hanya jenis sumber daya yang disebutkan pada label.	Jangan biarkan kabel daya rusak atau terkoyak.	Jangan buka unit pemindai sampai penyalinan, pencetakan, atau pemindaian selesai.

					
<p>Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.</p>	<p>Except as specifically explained in your documentation, do not attempt to service the printer yourself.</p>	<p>Keep ink cartridges out of the reach of children and do not drink the ink.</p>	<p>If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately.</p>	<p>Do not shake ink cartridges after opening their packages; this can cause leakage.</p>	<p>If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the printer. Do not touch the ink supply port or surrounding area.</p>
<p>Jangan gunakan produk-produk aerosol yang mengandung gas yang mudah terbakar di dalam atau di sekitar printer. Ini dapat menyebabkan kebakaran.</p>	<p>Kecuali secara khusus dijelaskan di dalam dokumentasi Anda, jangan pernah mencoba untuk memperbaiki printer Anda sendiri.</p>	<p>Jauhkan cartridge tinta dari jangkauan anak-anak dan jangan minum tinta.</p>	<p>Jika tinta mengenai kulit Anda, cuci bersih dengan sabun dan air. Jika tinta mengenai mata Anda, siram segera dengan air. Jika Anda masih merasa tidak nyaman atau mengalami masalah pengelihatatan, kunjungi dokter segera.</p>	<p>Jangan kocok cartridge tinta setelah membuka bungkusnya; ini dapat menyebabkan kebocoran.</p>	<p>Jika Anda melepaskan cartridge tinta untuk digunakan lain waktu, lindungi wilayah persediaan tinta dari kotoran dan debu dan simpan di lingkungan yang sama dengan printer Anda. Jangan sentuh port persediaan tinta atau wilayah sekitarnya.</p>

# Guide to Control Panel

## Panduan untuk Panel Kontrol

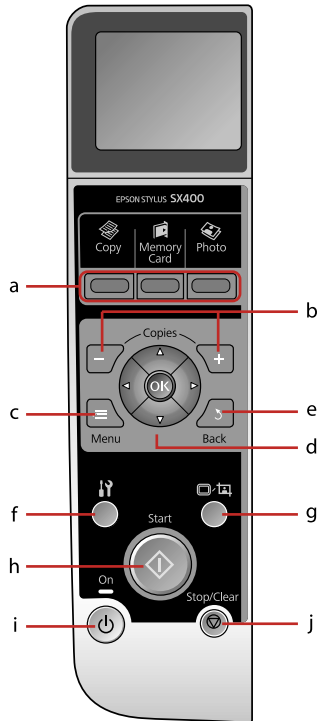


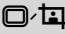





a			b	c
Mode			+, -	☑☰
[Copy]	[Memory Card]	[Photo]		
Enters Copy mode.	Enters Memory Card mode.	Enters Photo Print mode.	Sets the number of copies.	Displays detailed settings for each mode.
Masuk mode Copy.	Masuk mode Memory Card.	Masuk mode Photo Print.	Menetapkan jumlah salinan.	Menampilkan pengaturan rinci untuk tiap mode.






Control panel design varies by area.

Desain panel kontrol tergantung pada wilayah.

d	e	f	g	h	i	j
		 [Setup]	 [Display/ Crop]		 On	
Selects photos and menu items.	Cancels/returns to the previous menu.	Runs maintenance programs.	Changes the view of photos or crops the photos.	Starts copying/printing.	Turns on/off printer.	Stops copying/printing or resets settings.
Memilih foto dan item menu.	Membatalkan/kembali ke menu sebelumnya.	Menjalankan program pemeliharaan.	Mengubah tampilan foto atau memotong foto.	Mulai menyalin/mencetak.	Menghidupkan/Mematikan printer.	Berhenti menyalin/mencetak atau mengembalikan pengaturan.


# Using the LCD Screen


## Menggunakan Layar LCD

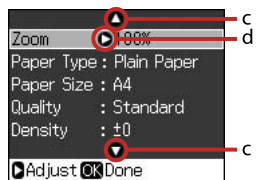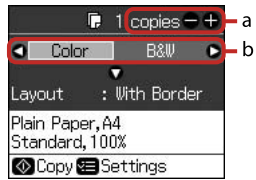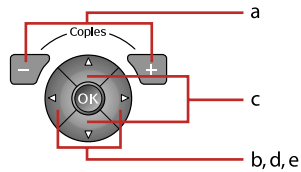

a	b	c	d	e
Use Copies + or - to set the number of copies for the selected photo.	Press ◀ or ▶ to select the setting item.	Press ▲ or ▼ to select the menu item. The highlight moves up or down.	Press ▶ to open the setting item list.	Press ◀ or ▶ to change the photo displayed on the LCD screen.
Gunakan Copies + atau - untuk menentukan jumlah salinan foto yang dipilih.	Tekan ◀ atau ▶ untuk memilih item pengaturan.	Tekan ▲ atau ▼ untuk memilih item pengaturan. Sorotan bergeser ke atas atau ke bawah.	Tekan ▶ untuk membuka daftar item pengaturan.	Tekan ◀ atau ▶ untuk mengganti foto yang ditampilkan pada layar LCD.



The  icon is displayed on a cropped image.

Ikon  ditampilkan pada gambar yang dipotong.



# Handling Media

## Penanganan Media



## Selecting Paper Memilih Kertas

The availability of special paper varies by area.

Ketersediaan kertas khusus tergantung pada wilayah.

If you want to print on this paper...	Choose this Paper Type on the LCD screen	Loading capacity (sheets)
(a) Plain paper	<b>Plain Paper</b>	[12 mm] *1
(b) Epson Bright White Paper	<b>Plain Paper</b>	80
(c) Epson Premium Ink Jet Plain Paper	<b>Plain Paper</b>	80
(d) Epson Matte Paper Heavyweight	<b>Matte</b>	20
(e) Epson Photo Quality Ink Jet Paper	<b>Matte</b>	80
(f) Epson Premium Glossy Photo Paper	<b>Prem.Glossy</b>	20
(g) Epson Premium Semigloss Photo Paper	<b>Prem.Glossy</b>	20
(h) Epson Ultra Glossy Photo Paper	<b>Ultra Glossy</b>	20
(i) Epson Glossy Photo Paper	<b>Photo Paper</b>	20


\*1 Paper with a weight of 64 to 90 g/m<sup>2</sup>.

Jika Anda ingin mencetak pada kertas ini...	Pilih Jenis Kertas ini pada layar LCD	Kapasitas muatan (lembar)
(a) Kertas biasa	<b>Plain Paper</b>	[12 mm] *1
(b) Kertas Putih Terang Epson	<b>Plain Paper</b>	80
(c) Kertas Biasa Tinta Jet Premium Epson	<b>Plain Paper</b>	80
(d) Kertas Matte Epson Heavyweight	<b>Matte</b>	20
(e) Kertas Ink Jet Kualitas Foto Epson	<b>Matte</b>	80
(f) Kertas Foto Glossy Premium Epson	<b>Prem.Glossy</b>	20
(g) Kertas Foto Semigloss Premium Epson	<b>Prem.Glossy</b>	20
(h) Kertas Foto Glossy Ultra Epson	<b>Ultra Glossy</b>	20
(i) Kertas Foto Glossy Epson	<b>Photo Paper</b>	20

\*1 Kertas dengan berat 64 sampai 90 g/m<sup>2</sup>.

## Loading Paper Memuatkan Kertas

1

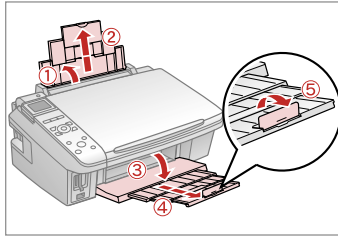


Open and slide out.  
Buka dan geser keluar.



See the online User's Guide when using Legal size paper.


Lihat Panduan Pengguna online saat menggunakan kertas ukuran Legal.

2

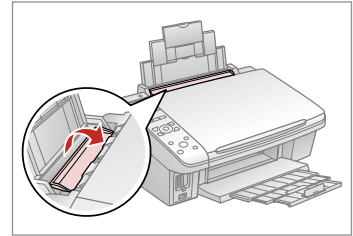


Flip forward.  
Balikkan ke depan.

3

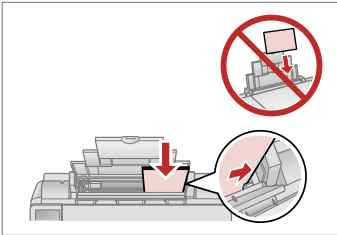

Load printable side up.  
Muatkan sisi yang untuk dicetak menghadap ke atas.

4

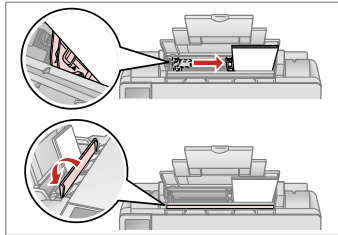

Fit.  
Pas kan.




Do not use paper with binder holes.

Jangan gunakan kertas dengan lubang jilidan.




Align the edges of the paper before loading.

Ratakan tepi kertas sebelum memuatkan.

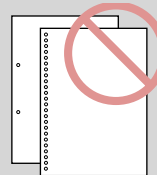


## Placing Originals Menempatkan Dokumen Asli

1

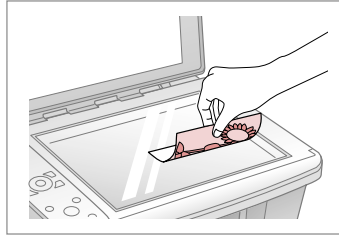


Place face-down horizontally.  
Tempatkan menghadap ke bawah  
secara horizontal.

2

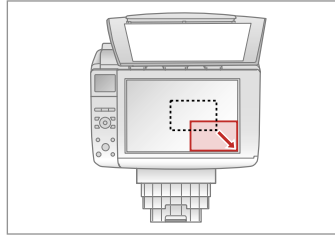

Place image in the corner.  
Tempatkan gambar pada ujung.

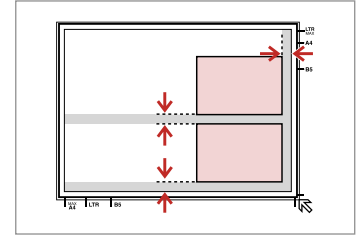

Place photos 5 mm apart.  
Tempatkan foto-foto 5 mm secara  
terpisah.



You can reprint photos from  
 $30 \times 40$  mm to  $127 \times 178$  mm.

Anda dapat mencetak foto dari  
ukuran  $30 \times 40$  mm sampai  
 $127 \times 178$  mm.



You can copy photos of different  
sizes at the same time if they are  
larger than  $30 \times 40$  mm.


Anda dapat menyalin berbagai  
ukuran foto pada saat yang sama  
jika ukurannya lebih dari  $30 \times 40$   
mm.



## Inserting a Memory Card


### Memasukkan Kartu Memori

1

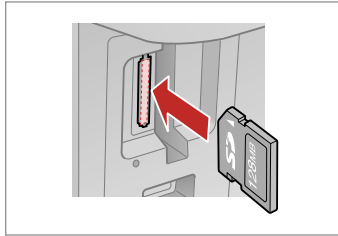

Insert one card at a time.  
Masukkan kartu satu per satu.

2

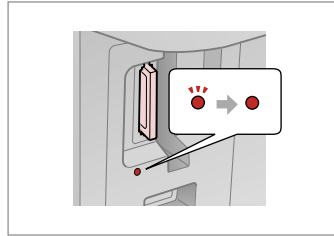

Check the light.  
Periksa lampunya.




Do not try to force the card all the way into the slot. It should not be fully inserted.

Jangan coba memaksakan kartu masuk sepenuhnya ke dalam slot. Kartu tidak boleh dimasukkan sepenuhnya.

## Removing a Memory Card


### Mengeluarkan Kartu Memori

1

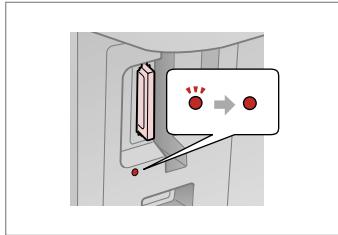

Check the light.  
Periksa lampunya.

2

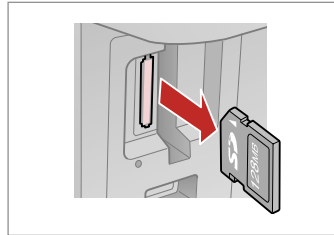

Remove.  
Keluarkan.



On	Flashing
Menyala	Berkedip

<p>xD-Picture Card xD-Picture Card Type M xD-Picture Card Type H</p>	<p>SD Memory Card SDHC Memory Card MultiMediaCard</p>	<p>miniSD * miniSDHC *</p>	<p>microSD * microSDHC *</p>	<p>Memory Stick Memory Stick Pro MagicGate Memory Stick</p>	<p>Memory Stick Duo * Memory Stick Pro Duo * MagicGate Memory Stick Duo *</p>	<p>Memory Stick Micro *</p>	

<p>Compact Flash</p>	<p>Microdrive</p>	

\*Adapter required

\*Adaptor diperlukan



If the memory card needs an adapter then attach it before inserting the card into the slot, otherwise the card may get stuck.

Jika kartu memori memerlukan adaptor, pasang adaptor sebelum memasukkan kartu ke dalam slot, jika tidak kartu dapat macet.


# Copying Menyalin



## Copying Photos or Documents


### Menyalin Foto atau Dokumen

**1**  → 15

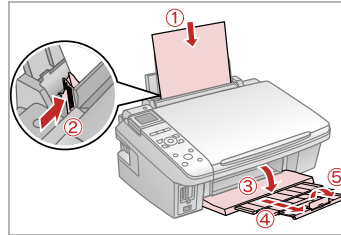


Load paper.  
Muatkan kertas.

**2**  → 16

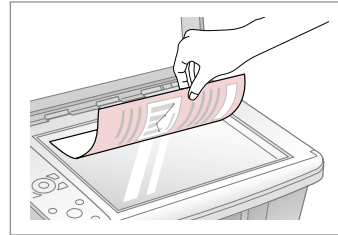


Place original horizontally.  
Tempatkan dokumen asli secara horizontal.

**3**

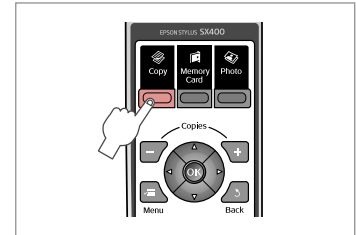


Enter the Copy mode.  
Masukkan mode Copy.

**4**

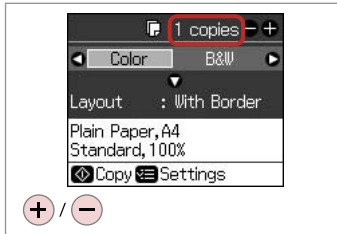


Set the number of copies.  
Tentukan jumlah salinan.

**5**

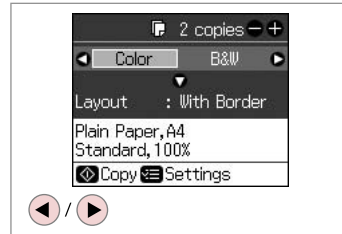


Select a color mode.  
Pilih mode warna.

**6**

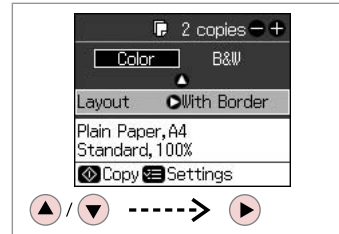


Select document layout.  
Pilih penataan dokumen.

**7**

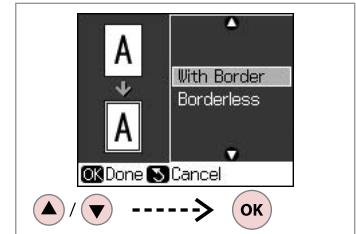


Select setting item.  
Pilih item pengaturan.

8

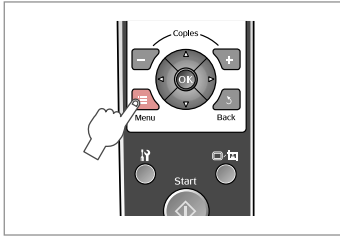


Enter the copy setting menu.  
Masukkan menu pengaturan salinan.

9 22

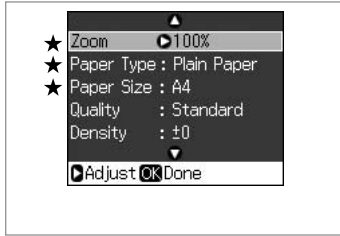


Select copy settings. (★ essential)  
Pilih pengaturan salinan. (★ penting)

10

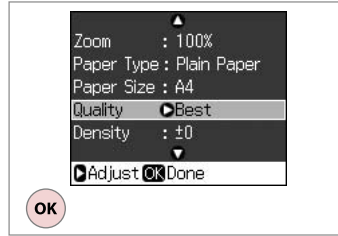

Finish the settings.  
Selesai pengaturan.

11

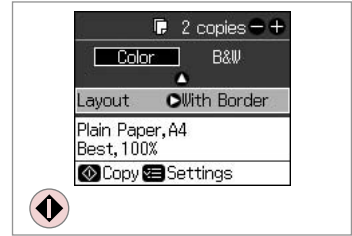

Start copying.  
Mulai menyalin.





# Copy Mode Menu List

## Daftar Menu Mode Copy

EN  → 23

ID  → 23

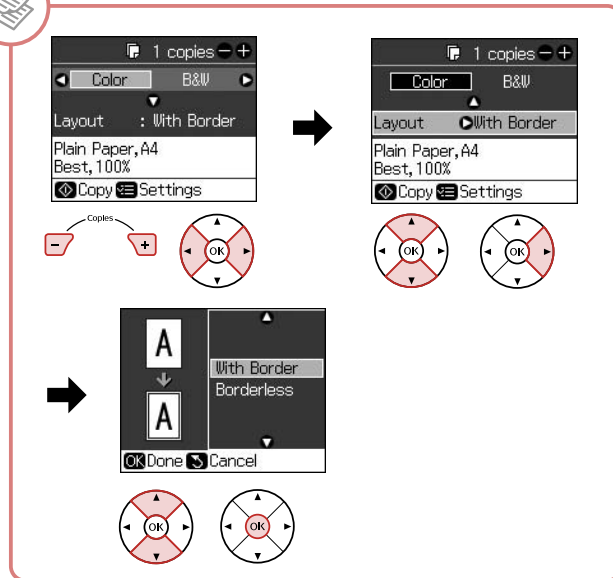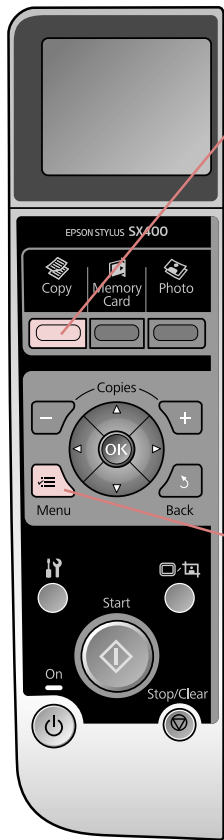

1 copies - +

Color B&W

Layout : With Border

Plain Paper, A4

Best, 100%

Copy Settings

Copies

With Border

Plain Paper, A4

Best, 100%

Copy Settings


A

With Border

A

Borderless

Done Cancel

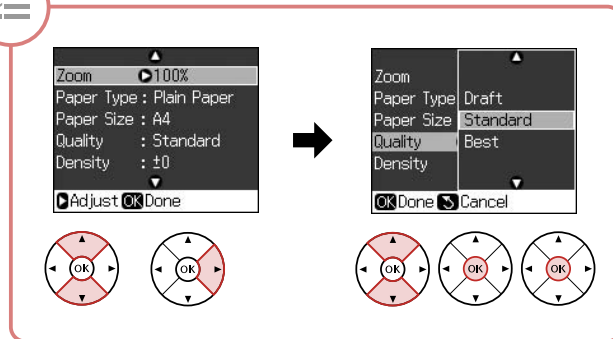

Zoom 100%

Paper Type : Plain Paper

Paper Size : A4

Quality : Standard

Density : ±0

Adjust Done

Zoom

Paper Type Draft

Paper Size Standard


Quality Best

Density

Done Cancel

 Copy Mode

copies	1 to 99
Color/B&W	Color, B&W
Layout	With Border, Borderless *1

 Print settings


Zoom	Actual, Auto Fit Page
Paper Type	Plain Paper, Matte, Prem.Glossy, Ultra Glossy, Photo Paper
Paper Size	A4, 10 × 15 cm, 13 × 18 cm
Quality	Draft, Standard, Best
Density	-4 to +4
Expansion *2	Standard, Mid., Min.

\*1 Your image is slightly enlarged and cropped to fill the sheet of paper. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing.

\*2 Select the amount the image is expanded when printing Borderless photos.

 Mode Copy

salinan	1 sampai 99
Color/B&W	Color, B&W
Layout	With Border, Borderless *1

 Pengaturan cetak

Zoom	Actual, Auto Fit Page
Paper Type	Plain Paper, Matte, Prem.Glossy, Ultra Glossy, Photo Paper
Paper Size	A4, 10 × 15 cm, 13 × 18 cm
Quality	Draft, Standard, Best
Density	-4 sampai +4
Expansion *2	Standard, Mid., Min.

\*1 Gambar Anda sedikit diperbesar dan dipotong untuk mengisi lembar kertas. Kualitas cetakan mungkin menurun di bagian atas dan bawah cetakan, atau bagian tersebut mungkin terdapat bercak pada saat dicetak.

\*2 Pilih nilai perbesaran gambar pada saat mencetak foto Tanpa Bingkai.






# Printing from a Memory Card Mencetak dari Kartu Memori




# Printing Photos Mencetak Foto

1  → 15

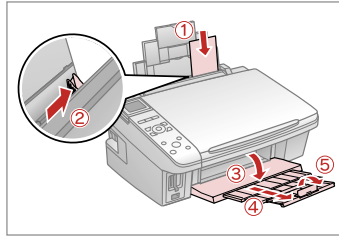


Load photo paper.  
Muatkan kertas foto.

2  → 17

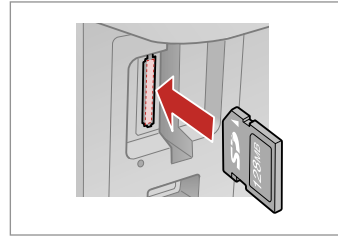


Insert a memory card.  
Masukkan kartu memori.

3

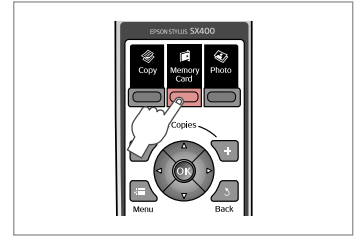


Enter the Memory Card mode.  
Masuk mode Memory Card.

4

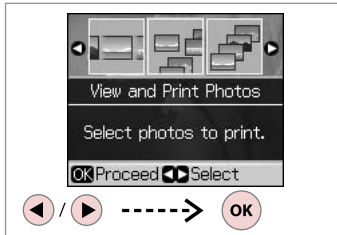


Select **View and Print Photos**.  
Pilih **View and Print Photos**.

5

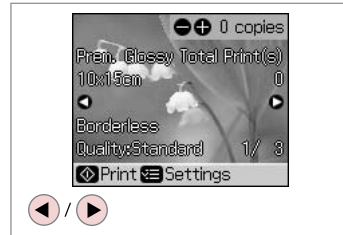


Select a photo.  
Pilih sebuah foto.

6

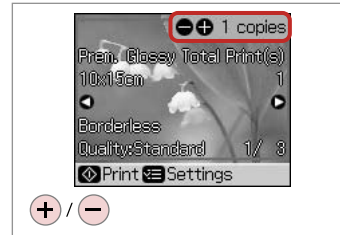


Set the number of copies.  
Tentukan jumlah salinan.

7

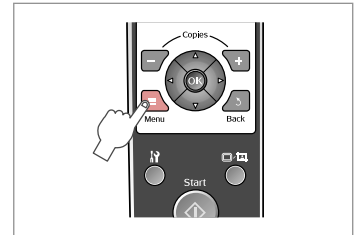


Enter the print setting menu.  
Masuk menu pengaturan cetak.

8  → 31

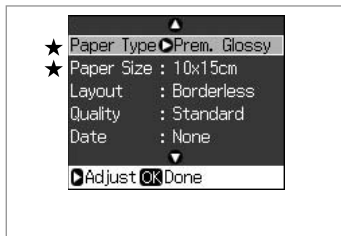


Select print settings. (★ essential)  
Pilih pengaturan cetak. (★ penting)

9

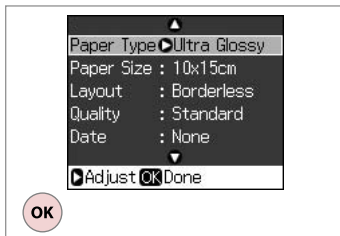


Finish the settings.  
Selesai pengaturan.


10

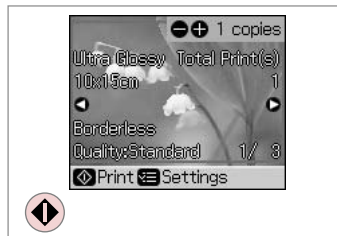


Start printing.  
Mulai mencetak.

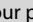

After step 5, you can crop and enlarge your photo. Press  and make the settings.

Setelah langkah 5, Anda dapat memotong dan memperbesar foto Anda. Tekan  dan lakukan pengaturan.

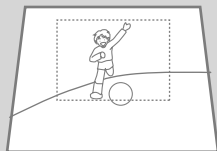


To select more photos, repeat steps 5 and 6.

Untuk memilih lebih banyak foto, ulangi langkah 5 dan 6.


# Printing From an Index Sheet

## Mencetak Dari Lembar Indeks

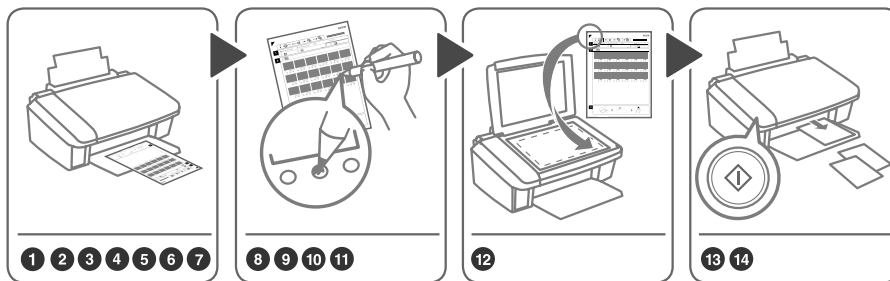


Select photos on the index sheet (A4), then scan it to print photos.  
Pilih foto pada lembar indeks (A4), lalu pindai untuk mencetak foto.

1 → 15

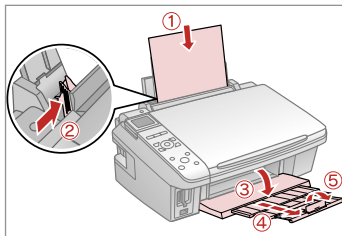


Load A4-size plain paper.  
Masukkan kertas biasa berukuran A4.

2

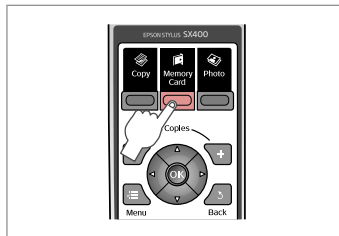


Enter the Memory Card mode.  
Masuk mode Memory Card.

3

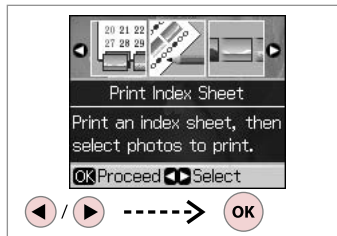


Select **Print Index Sheet**.  
Pilih **Print Index Sheet**.

4

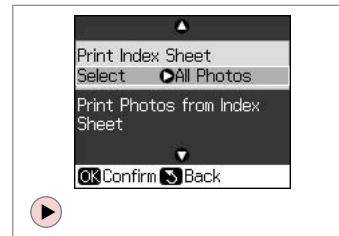


Select **Print Index Sheet / Select**.  
Pilih **Print Index Sheet / Select**.

5

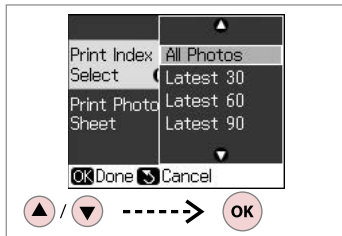


Select the range of photos.  
Pilih sejumlah foto.

6

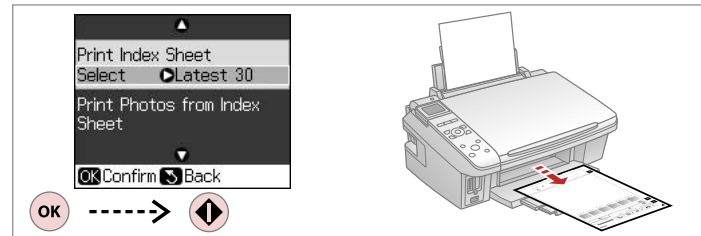


Print the index sheet.  
Cetak lembar indeks.

7

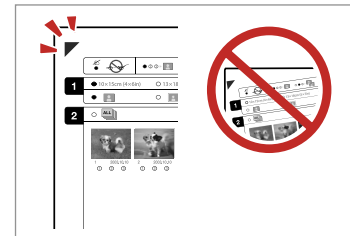


Check ▲ aligns with the corner.  
Pastikan ▲ sejajar dengan sudutnya.

8

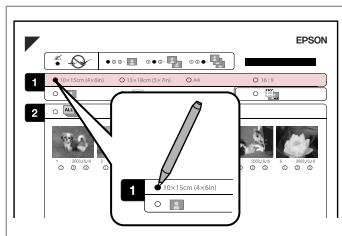


Select a paper size.  
Pilih ukuran kertas.

9

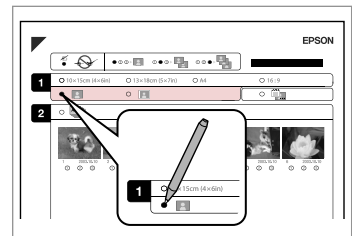


Select border or borderless.  
Pilih dengan margin atau tanpa margin.

10

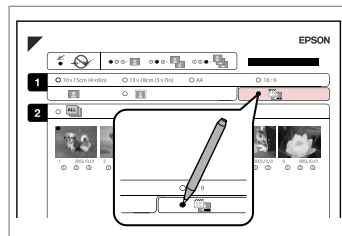


Select to print with a date stamp.  
Pilih untuk mencetak dengan tanda waktu.

11

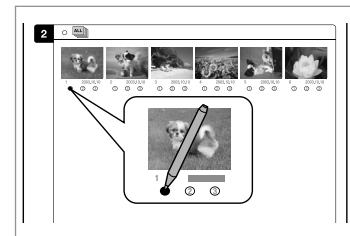

Select the number of copies.  
Pilih jumlah salinan.


12

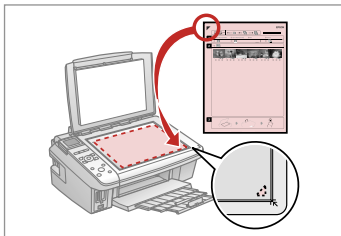

Place the index sheet face-down.  
Tempatkan lembar indeks menghadap ke bawah.


13

➡ 15

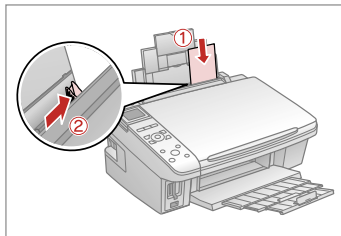

Load the photo paper.  
Muatkan kertas foto.

14

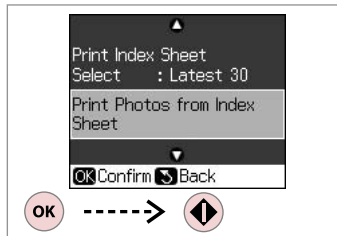

Print photos from the index sheet.  
Cetak foto dari lembar indeks.



You can print photos on Ultra Glossy Photo Paper, Premium Glossy Photo Paper, or Premium Semigloss Photo Paper.




Anda dapat mencetak foto pada Ultra Glossy Photo Paper (Kertas Foto Glossy Ultra), Premium Glossy Photo Paper (Kertas Foto Glossy Premium), atau Premium Semigloss Photo Paper (Kertas Foto Semigloss Premium).

# Memory Card Mode Menu List

## Daftar Menu Mode Memory Card


EN  → 32

ID  → 32

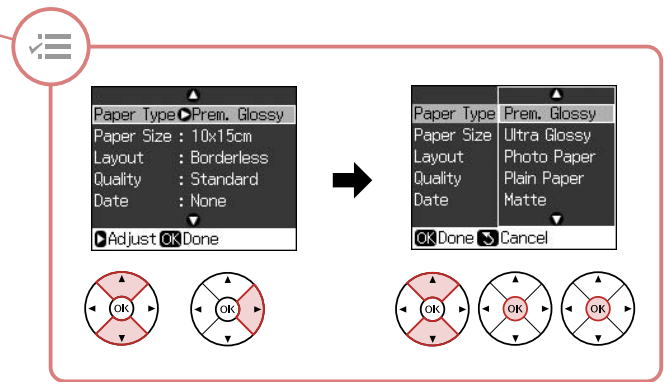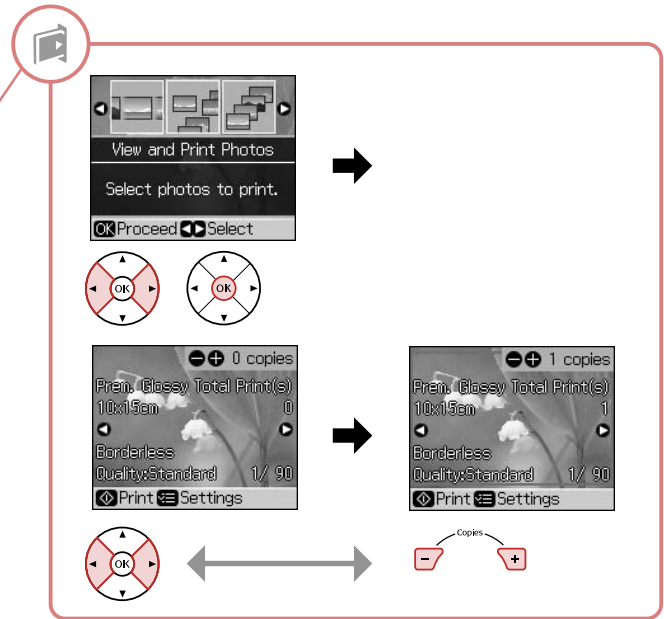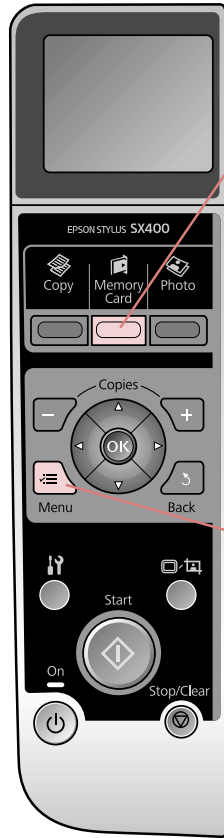

 Memory Card Mode

View and Print Photos
Print All Photos
Print by Date
Print Index Sheet
Slide Show

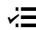
 Print settings

Paper Type	Prem.Glossy, Ultra Glossy, Photo Paper, Plain Paper, Matte
Paper Size	10 × 15 cm, 13 × 18 cm, 16:9 wide, A4
Layout	Borderless <sup>*1</sup> , With Border
Quality	Standard, Best
Date	None, yyyy.mm.dd, mmm.dd.yyyy, dd.mmm.yyyy
Bidirectional <sup>*2</sup>	On, Off
Expansion <sup>*3</sup>	Standard, Mid, Min

- <sup>\*1</sup> Your image is slightly enlarged and cropped to fill the sheet of paper. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing.
- <sup>\*2</sup> Select On to increase the print speed. Select Off to improve the print quality (but your photos print more slowly).
- <sup>\*3</sup> Select the amount the image is expanded when printing Borderless photos.

 Mode Memory Card

View and Print Photos
Print All Photos
Print by Date
Print Index Sheet
Slide Show

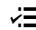 Pengaturan cetak

Paper Type	Prem.Glossy, Ultra Glossy, Photo Paper, Plain Paper, Matte
Paper Size	10 × 15 cm, 13 × 18 cm, 16:9 wide, A4
Layout	Borderless <sup>*1</sup> , With Border
Quality	Standard, Best
Date	None, yyyy.mm.dd, mmm.dd.yyyy, dd.mmm.yyyy
Bidirectional <sup>*2</sup>	On, Off
Expansion <sup>*3</sup>	Standard, Mid., Min.

- <sup>\*1</sup> Gambar Anda sedikit diperbesar dan dipotong untuk mengisi lembar kertas. Kualitas cetakan mungkin menurun di bagian atas dan bawah cetakan, atau bagian tersebut mungkin terdapat bercak pada saat dicetak.
- <sup>\*2</sup> Pilih On untuk meningkatkan kecepatan cetak. Pilih Off untuk meningkatkan kualitas cetak (tetapi pencetakan foto lebih lambat).
- <sup>\*3</sup> Pilih nilai perbesaran gambar pada saat mencetak foto Tanpa Bingkai.



# Photo Print Mode


## Mode Cetak Foto



## Reprint / Restore Photos


### Mencetak kembali/ Memulihkan Foto

**1**  15

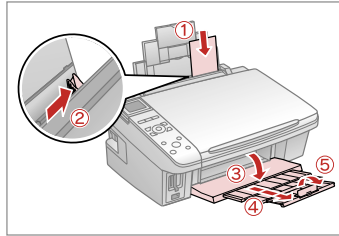


Load paper.  
Muatkan kertas.

**2**  16

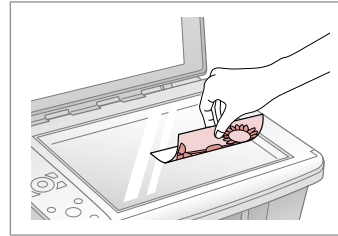


Place photo(s) horizontally.  
Tempatkan foto(-foto) secara horizontal.

**3**

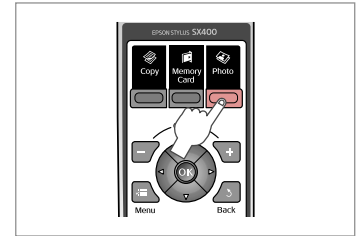

Enter the Photo Print mode.  
Masuk mode Photo Print.

**4**

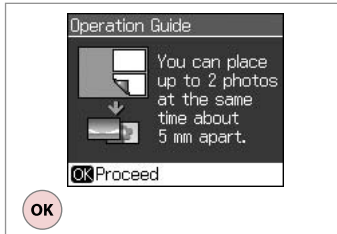


Proceed.  
Lanjutkan.

**5**




Preview your photo.  
Tinjau foto Anda.

**6**

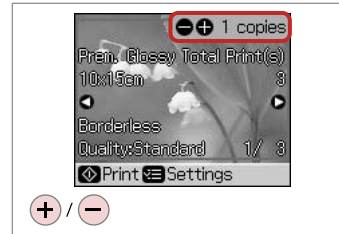


Set the number of copies.  
Tentukan jumlah salinan.

**7**

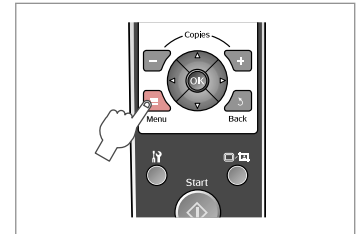


Enter the print setting menu.  
Masuk menu pengaturan cetak.

8  → 36

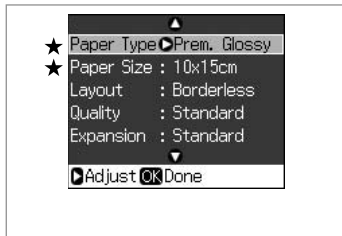

Select print settings. (★ essential)  
Pilih pengaturan cetak. (★ penting)

9

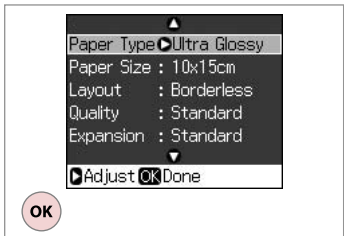


Finish the setting.  
Pengaturan selesai.


10




Start copying.  
Mulai menyalin.

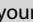

After step 6, you can crop and enlarge your photo. Press  and make the settings.

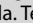Setelah langkah 6, Anda dapat memotong dan memperbesar foto Anda. Tekan  dan lakukan pengaturan.


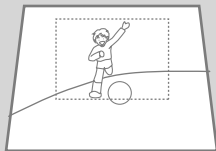


# Photo Print Mode Menu List


## Daftar Menu Mode Photo Print

EN  → 37

ID  → 37

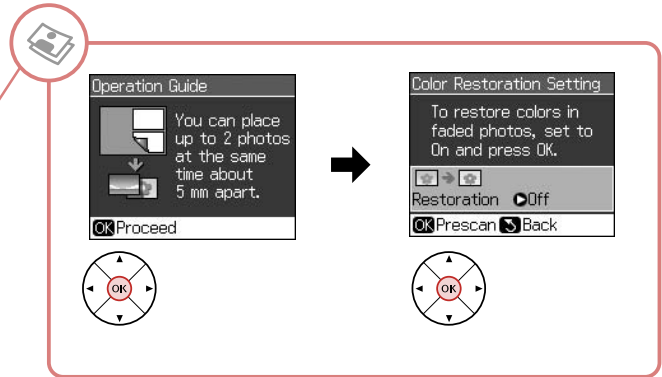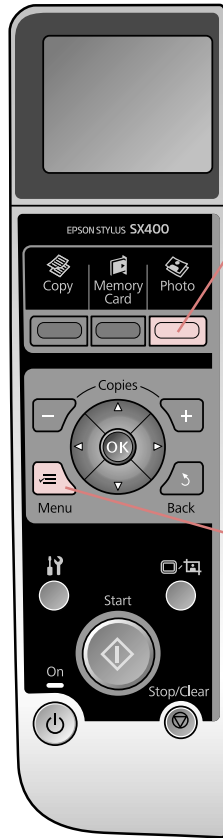


This callout box illustrates the menu flow for the Photo Print Mode. It starts with a 'Photo' icon in a circle. The first screen is 'Operation Guide' with the text: 'You can place up to 2 photos at the same time about 5 mm apart.' Below the text is an 'OK Proceed' button. An arrow points to the second screen, 'Color Restoration Setting', which says: 'To restore colors in faded photos, set to On and press OK.' Below this is a 'Restoration' option set to 'Off' and 'OK Prescan Back' buttons. Below each screen is a directional pad with an 'OK' button in the center.

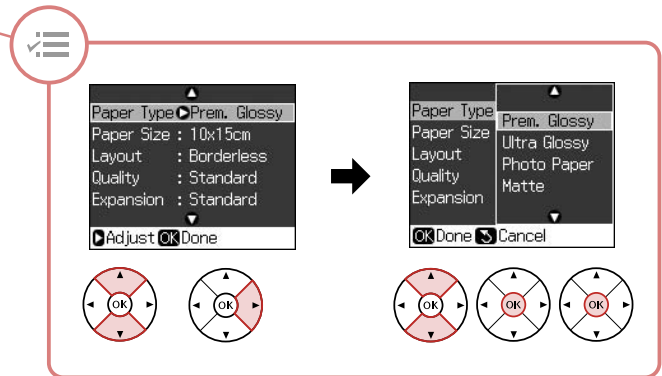

This callout box illustrates the menu flow for the Paper Type menu. It starts with a 'Menu' icon in a circle. The first screen shows 'Paper Type' set to 'Prem. Glossy', 'Paper Size' as '10x15cm', 'Layout' as 'Borderless', 'Quality' as 'Standard', and 'Expansion' as 'Standard'. Below is an 'Adjust OK Done' button. An arrow points to the second screen, which lists 'Paper Type' options: 'Prem. Glossy', 'Ultra Glossy', 'Photo Paper', and 'Matte'. Below are 'OK Done' and 'Cancel' buttons. Below each screen are three directional pads with an 'OK' button in the center.

 Photo Mode

Restoration	On, Off
-------------	---------

 Print settings


Paper Type	Prem.Glossy, Ultra Glossy, Photo Paper, Matte
Paper Size	10 × 15 cm, 13 × 18 cm, A4
Layout	Borderless *1, With Border
Quality	Standard
Expansion *2	Standard, Mid, Min

\*1 Your image is slightly enlarged and cropped to fill the sheet of paper. Print quality may decline in the top and bottom areas of the printout, or the area may be smeared when printing.

\*2 Select the amount the image is expanded when printing Borderless photos.

 Mode Photo

Restoration	On, Off
-------------	---------

 Pengaturan cetak

Paper Type	Prem.Glossy, Ultra Glossy, Photo Paper, Matte
Paper Size	10 × 15 cm, 13 × 18 cm, A4
Layout	Borderless *1, With Border
Quality	Standard
Expansion *2	Standard, Mid., Min.

\*1 Gambar Anda sedikit diperbesar dan dipotong untuk mengisi lembar kertas. Kualitas cetakan mungkin menurun di bagian atas dan bawah cetakan, atau bagian tersebut mungkin terdapat bercak pada saat dicetak.

\*2 Pilih nilai perbesaran gambar pada saat mencetak foto Tanpa Bingkai.




# Setup Mode (Maintenance) Mode Setup (Pemeliharaan)



# Checking the Ink Cartridge Status

## Memeriksa Status Cartridge Tinta

1

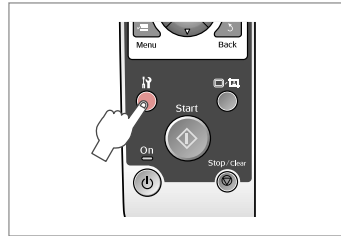


Enter the Setup mode.  
Masuk mode Setup.

2



Select **Ink Levels**.  
Pilih **Ink Levels**.

3

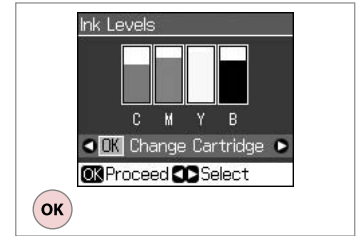

Continue or change cartridge.  
Lanjutkan atau ganti cartridge.

---

C	M	Y	B	
Cyan	Magenta	Yellow	Black	Ink is low.
Sian	Magenta	Kuning	Hitam	Tinta hampir habis.







You can replace an ink cartridge if the ink cartridge is not expended. Press **⏏** [**Setup**], select **Maintenance**, and press **OK**. Select **Change Ink Cartridge**, and press **OK**.

Anda dapat mengganti cartridge tinta jika cartridge tinta tidak habis. Tekan **⏏** [**Setup**], pilih **Maintenance**, dan tekan **OK**. Pilih **Change Ink Cartridge**, dan tekan **OK**.



Epson cannot guarantee the quality or reliability of non-genuine ink. If non-genuine ink cartridges are installed, the ink cartridge status may not be displayed.


Epson tidak menjamin kualitas atau keandalan tinta yang tidak asli. Jika yang dipasang cartridge tinta palsu, status cartridge tinta mungkin tidak ditampilkan.



## Checking/Cleaning the Print Head


### Memeriksa/ Membersihkan Print Head

1  → 15

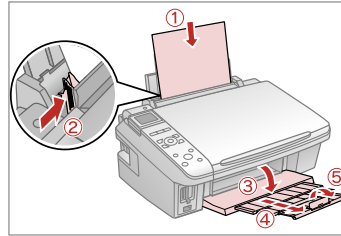


Load a A4-size paper.  
Muatkan kertas ukuran A4.

2

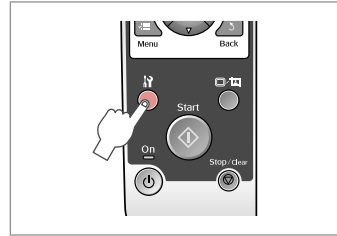


Enter the Setup mode.  
Masuk mode Setup.

3

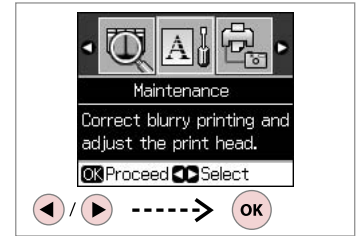


Select **Maintenance**.  
Pilih **Maintenance**.

4

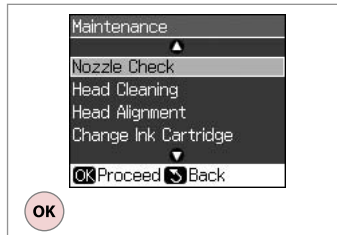


Select **Nozzle Check**.  
Pilih **Nozzle Check**.

5

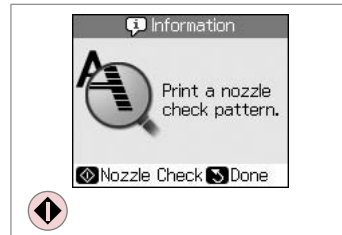


Start the nozzle check.  
Memulai pemeriksaan nozzle.

6

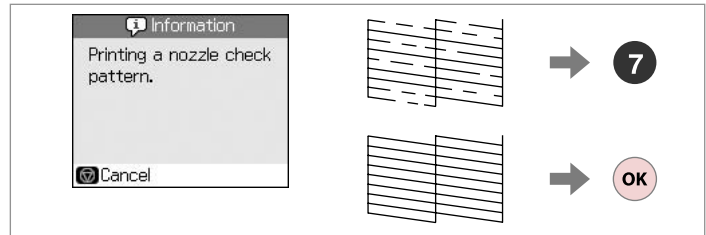


Check the pattern.  
Memeriksa pola.

7

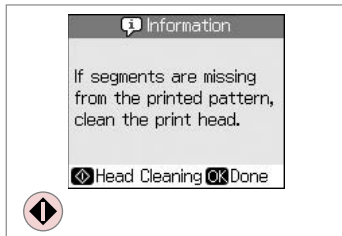


Start head cleaning.  
Memulai pembersihan Print Head.


8

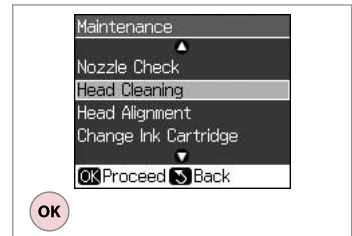

Finish head cleaning.  
Pembersihan Print Head selesai.

 Print head cleaning uses ink, so clean the print head only if quality declines.  
Untuk membersihkan Print Head diperlukan tinta, jadi bersihkan Print Head hanya jika kualitas menurun.




 If it does not improve after cleaning four times, turn off the printer for at least six hours. Then try cleaning the print head again. If quality does not improve, one of the ink cartridges may need to be replaced. If quality is a problem after replacing the cartridges, contact your dealer.  
Jika tidak menjadi lebih baik setelah membersihkan empat kali, matikan printer selama kurang lebih enam jam. Coba bersihkan Print Head sekali lagi. Jika kualitasnya tidak menjadi lebih baik, salah satu cartridge tinta mungkin perlu diganti. Jika kualitas tetap menjadi masalah setelah cartridge diganti, hubungi distributor Anda.

# Aligning the Print Head


## Meratakan Print Head

1 → 15

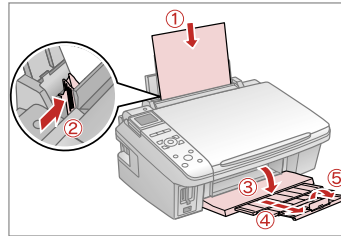


Load a A4-size paper.  
Muatkan kertas ukuran A4.

2

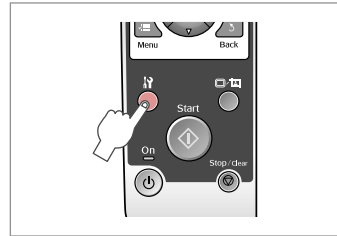


Enter the Setup mode.  
Masuk mode Setup.

3

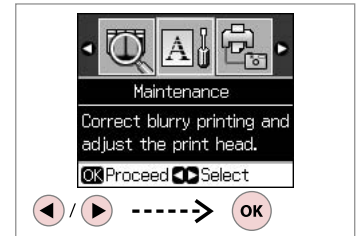


Select **Maintenance**.  
Pilih **Maintenance**.

4

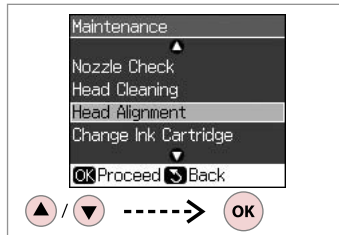

Select **Head Alignment**.  
Pilih **Head Alignment**.

5

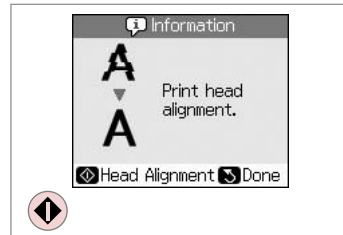


Print patterns.  
Pola cetak.

6




Select the most solid pattern.  
Pilih pola yang paling padat.

7

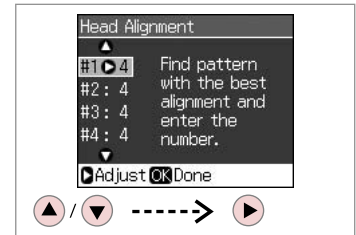


Select the pattern number.  
Pilih nomor pola.

8

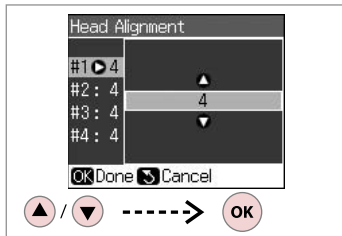


Enter the number.  
Masukkan nomor.

9

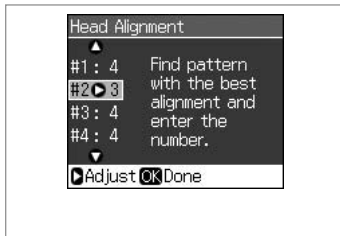

Repeat steps 7 and 8 if necessary.  
Ulangi langkah 7 dan 8 jika perlu.

10

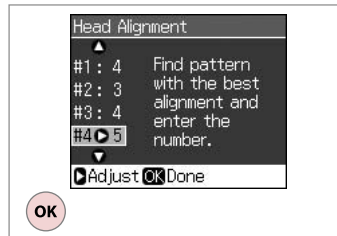


Finish aligning the print head.  
Penyejajaran Print Head selesai.




# PictBridge Setup

1

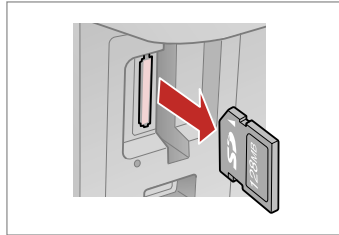


Remove.  
Keluarkan.

2

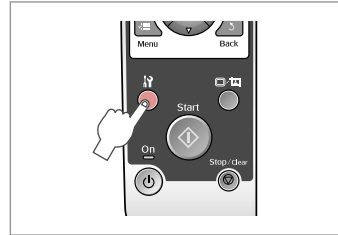


Enter the Setup mode.  
Masuk mode Setup.

3

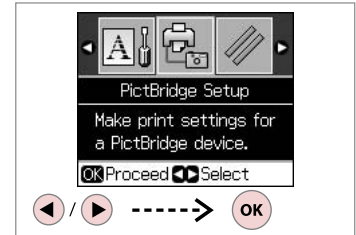


Select **PictBridge Setup**.  
Pilih **PictBridge Setup**.

4  → 48

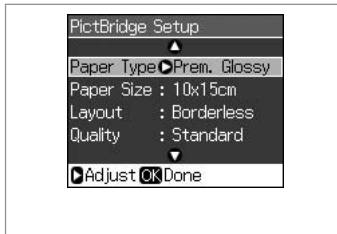


Select print settings.  
Pilih pengaturan cetak.

5

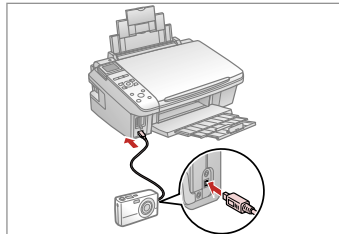

Connect and turn on.  
Hubungkan dan nyalakan.

6

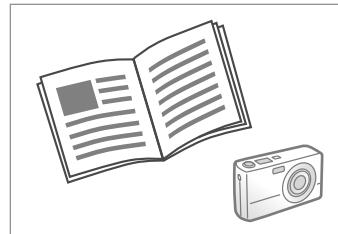

See your camera's guide to print.  
Lihat panduan kamera Anda untuk mencetak.

Compatibility	PictBridge
File Format	JPEG
Image size	80 × 80 pixels to 9200 × 9200 pixels

Kompatibilitas	PictBridge
Format File	JPEG
Ukuran gambar	80 × 80 pixel sampai 9200 × 9200 pixel



Depending on the settings on this printer and the digital camera, some combinations of paper type, size, and layout may not be supported.

Tergantung pada pengaturan pada printer ini dan kamera digitalnya, beberapa kombinasi jenis, ukuran, dan rancangan kertas mungkin tidak didukung.



Some of the settings on your digital camera may not be reflected in the output.



Beberapa pengaturan pada kamera digital Anda dapat tidak tercermin pada keluarannya.

# Setup Mode Menu List

## Daftar Menu Mode Setup


EN  → 49

ID  → 49

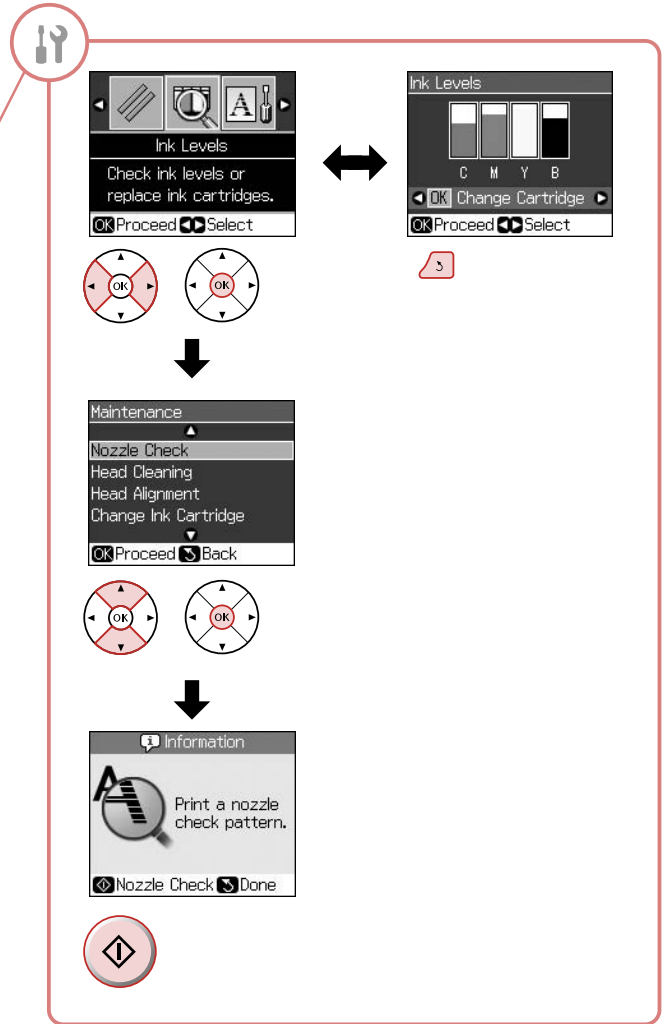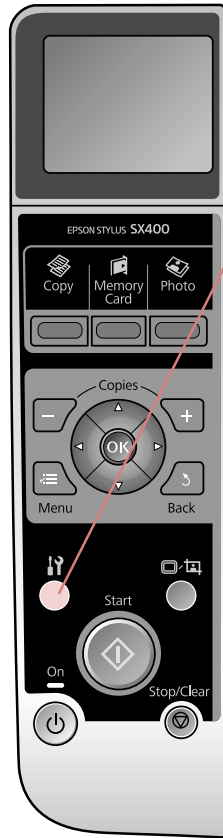



EN

 Setup Mode

Ink Levels	
Maintenance	Nozzle Check
	Head Cleaning
	Head Alignment
	Change Ink Cartridge
	Language
Display Format	1-up with Info, 1-up without Info, View Thumbnail Images
PictBridge Setup	
Restore Default Settings	

ID

 Mode Setup

Ink Levels	
Maintenance	Nozzle Check
	Head Cleaning
	Head Alignment
	Change Ink Cartridge
	Language
Display Format	1-up with Info, 1-up without Info, View Thumbnail Images
PictBridge Setup	
Restore Default Settings	




# Solving Problems Menyelesaikan Masalah




## Error Messages Pesan Kesalahan

EN

Error Messages	Solution
Press the OK button to replace the cartridges.	Replace the expended ink cartridges.  ➔ 54
A printer error has occurred. Turn off the printer and turn it on again. Please see your documentation.	Turn the printer off and then back on. Make sure that no paper is still in the printer. If the error message still appears, contact your dealer.
A scanner error has occurred. See your documentation.	Turn the printer off and then back on. If the error message still appears, contact your dealer.
Waste ink pad in the printer is saturated. Contact your dealer to replace it.	Contact your dealer to replace the ink pad.
Cannot recognize the memory card or disk.	Make sure the memory card or storage disk has been inserted correctly. If so, check to see if there is a problem with the card or disk and try again.

EN  ➔ 52

ID  ➔ 53

Pesan Kesalahan	Solusi
Press the OK button to replace the cartridges.	Ganti cartridge tinta yang telah habis.  ➔ 54
A printer error has occurred. Turn off the printer and turn it on again. Please see your documentation.	Matikan printer dan lalu nyalakan kembali. Pastikan tidak ada lagi kertas di dalam printer. Jika pesan kesalahan masih muncul, hubungi distributor Anda.
A scanner error has occurred. See your documentation.	Matikan printer dan lalu nyalakan kembali. Jika pesan kesalahan masih muncul, hubungi distributor Anda.
Waste ink pad in the printer is saturated. Contact your dealer to replace it.	Hubungi distributor Anda untuk mengganti bantalan tinta.
Cannot recognize the memory card or disk.	Pastikan kartu memori atau cakram penyimpanan telah dimasukkan dengan benar. Jika sudah, periksa untuk mengetahui apakah terdapat masalah pada kartu atau cakram tersebut kemudian coba lagi.

## Replacing Ink Cartridges

### Mengganti Cartridge Tinta



#### Ink Cartridge Handling Precautions


- Never move the print head by hand.
- Some ink is consumed each time cartridges are inserted because the printer automatically checks their reliability.
- For maximum ink efficiency, only remove an ink cartridge when you are ready to replace it. Ink cartridges with low ink status may not be used when reinserted.
- Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.
- Make sure you have a new ink cartridge before you begin replacement. Once you start replacing a cartridge, you must complete all the steps in one session.
- Leave the expended cartridge installed until you have obtained a replacement. Otherwise the ink remaining in the print head nozzles may dry out.
- Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- Other products not manufactured by Epson may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior.
- Do not turn off the printer during ink charging as this will waste ink.
- When an ink cartridge is expended, you cannot continue printing even if the other cartridges still contain ink.



#### Tindakan Kewaspadaan Dalam Menangani Cartridge Tinta

- Jangan pernah gerakkan Print Head dengan tangan.
- Sejumlah tinta akan terpakai setiap kali cartridge dimasukkan karena printer secara otomatis akan memeriksa kualitasnya.
- Untuk efisiensi tinta yang maksimal, keluarkan cartridge tinta hanya jika Anda siap untuk menggantinya. Cartridge tinta dengan status tinta yang hampir habis mungkin akan tidak dapat digunakan jika dimasukkan kembali.
- Epson merekomendasikan penggunaan cartridge tinta Epson yang asli. Epson tidak menjamin kualitas atau keandalan tinta yang tidak asli. Penggunaan tinta yang tidak asli dapat menyebabkan kerusakan yang tidak dicakup oleh jaminan Epson, dan dalam kondisi tertentu, dapat menyebabkan perilaku printer yang tidak wajar. Informasi mengenai tingkat tinta yang tidak asli mungkin tidak akan ditampilkan, dan penggunaan tinta yang tidak asli dicatat untuk kemungkinan penggunaan dalam dukungan layanan.
- Pastikan Anda memiliki cartridge tinta baru sebelum Anda mulai proses penggantian. Setelah Anda mulai mengganti cartridge, Anda harus menyelesaikan semua langkah dalam satu waktu.
- Biarkan cartridge yang telah habis tetap terpasang sampai Anda memperoleh penggantinya. Jika tidak tinta yang tersisa pada nozzle Print Head dapat mengering.
- Jangan buka kemasan cartridge tinta sampai Anda siap untuk memasangnya pada printer. Cartridge dikemas hampa udara untuk menjaga mutunya.
- Produk lain yang tidak diproduksi oleh Epson dapat menyebabkan kerusakan yang tidak dicakup dalam jaminan Epson, dan dalam kondisi tertentu, dapat menyebabkan perilaku printer yang tidak wajar.
- Jangan matikan printer pada saat mengisi tinta karena ini akan memboroskan tinta.
- Saat sebuah cartridge tinta habis, Anda tidak dapat melanjutkan pencetakan meskipun jika cartridge tinta yang lain masih berisi tinta.

1

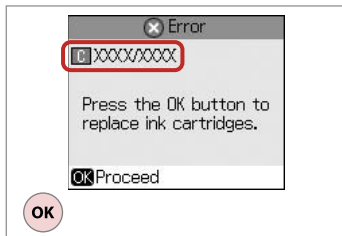

Check the color to replace.  
Memeriksa warna untuk mengganti.

2




Open.  
Buka.




Do not lift up the scanner unit when the document cover is open.  
Jangan angkat unit pemindai saat penutup dokumen terbuka.

3

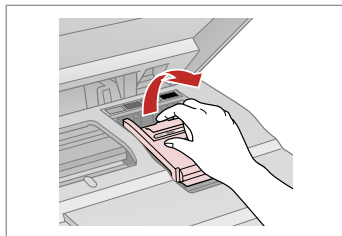


Open.  
Buka.

4

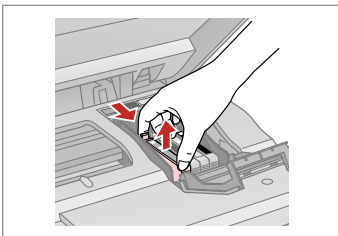

Remove.  
Keluarkan.

5

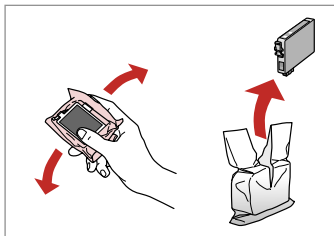


Shake new cartridge.  
Kocok cartridge yang baru.




Be careful not to break the hooks on the side of the ink cartridge.  
Berhati-hatilah agar tidak mematahkan kait pada sisi cartridge tinta.

6

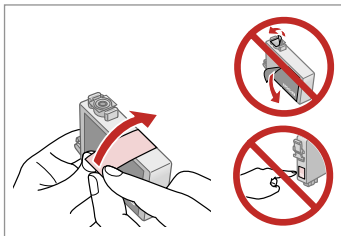


Remove the yellow tape.  
Singkirkan pita kuning.

7

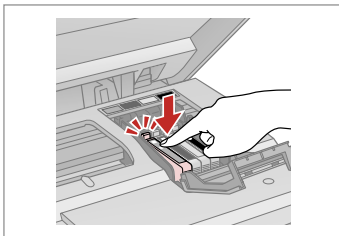

Insert and push.  
Masukkan dan dorong.

8

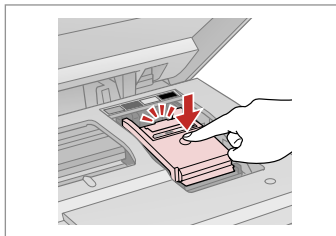


Close.  
Tutup.



If you find it difficult to close the cover, press down on each cartridge until it clicks into place.

Jika Anda mengalami kesulitan menutup penutupnya, tekan ke bawah tiap-tiap cartridge sampai berbunyi klik.

9

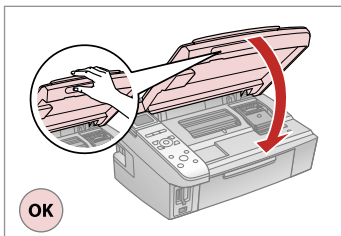

Close and start charging ink.  
Tutuplah dan mulai mengisi tinta.



If you had to replace an ink cartridge during copying, to ensure copy quality after ink charging is finished, cancel the job that is copying and start again from placing the originals.

Jika Anda harus mengganti cartridge tinta pada saat menyalin, untuk memastikan kualitas salinan setelah pengisian tinta selesai, batalkan pekerjaan yang sedang melakukan penyalinan dan mulai lagi dari menempatkan dokumen asli.




# Paper Jam Kertas Tersangkut

Paper Jam - jammed  
inside


Kertas Tersangkut -  
tersangkut di dalam

1

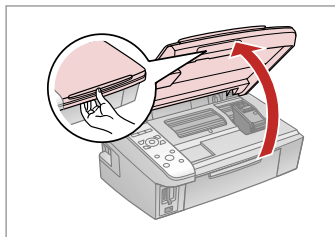


Open.  
Buka.

2

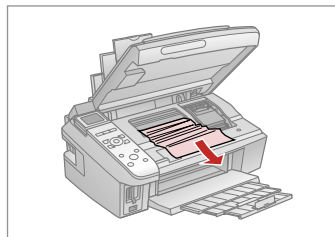


Remove.  
Keluarkan.

3

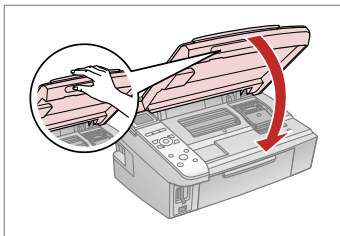

Close.  
Tutup.

4

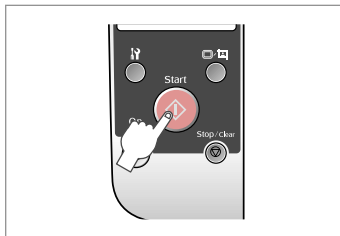


Press.  
Tekan.



If paper still remains near the rear feeder, gently pull it out.

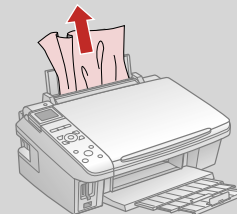


Jika kertas masih berada di dekat pengumpan belakang, tarik keluar perlahan-lahan.






## Print Quality Problems


## Masalah Kualitas Cetakan

Try one or more of the following solutions in order from the top. For further information, see your online User's Guide.

- Clean the print head.  ➔ 42
- Align the print head.  ➔ 44  
If quality is not improved, try aligning using the printer driver utility. See your online User's Guide to align the print head.
- To clean the inside of the printer, make a copy without placing a document on the document table.
- Use up ink cartridge within six months of opening vacuum package.  ➔ 54
- Try to use genuine Epson ink cartridges and paper recommended by Epson.

Coba satu atau beberapa solusi berikut sesuai urutan dari atas. Untuk informasi lebih lanjut, lihat Panduan Pengguna online Anda.

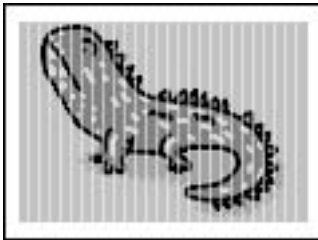


- Bersihkan Print Head.  ➔ 42
- Sejajarkan Print Head.  ➔ 44  
Jika kualitas tidak menjadi lebih baik, coba sejajarkan menggunakan utilitas driver printer. Lihat Panduan Pengguna online Anda untuk menyejajarkan Print Head.
- Untuk membersihkan bagian dalam printer, buat salinan tanpa menempatkan dokumen apapun pada bidang dokumen.
- Habiskan isi cartridge tinta dalam enam bulan setelah membuka kemasan hampa udara.  ➔ 54
- Coba gunakan cartridge tinta Epson asli dan kertas yang direkomendasikan oleh Epson.






## Print Layout Problems


## Masalah Penataan Cetakan

Check the following points.

- Make sure you selected the correct **Paper Size, Layout, and Zoom** setting for the loaded paper.  ➔ 22, 31, 36
- Make sure you loaded paper correctly.  ➔ 15
- Make sure the original is placed correctly.  ➔ 16
- If the edges of the copy or photo are cropped off, move the original slightly away from the corner.
- Clean the document table. See your online User's Guide.

Periksa hal-hal berikut.

- Pastikan Anda memilih pengaturan **Paper Size, Layout, dan Zoom** yang benar untuk kertas yang diumpankan.  ➔ 22, 31, 36
- Pastikan Anda telah memuatkan kertas dengan benar.  ➔ 15
- Pastikan dokumen asli telah ditempatkan dengan benar.  ➔ 16
- Jika tepian salinan atau foto terpotong, geser dokumen asli sedikit menjauh dari sudut.
- Membersihkan bidang dokumen. Lihat Panduan Pengguna online Anda.

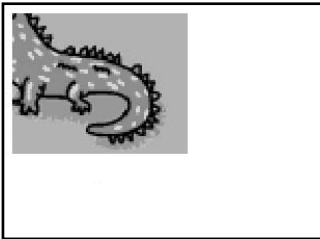

## Contacting Customer Support

## Menghubungi Dukungan Pelanggan

If you cannot solve the problem using the troubleshooting information, contact customer support services for assistance. You can get the contact information for customer support for your area in your online User's Guide or warranty card. If it is not listed there, contact the dealer where you purchased your product.

Jika Anda tidak menyelesaikan suatu masalah menggunakan informasi pemecahan masalah, hubungi layanan dukungan pelanggan untuk memperoleh bantuan. Anda dapat memperoleh informasi kontak dukungan pelanggan di area Anda pada Panduan Pengguna online atau kartu garansi. Jika tidak terdaftar di sana, hubungi distributor tempat Anda membeli produk Anda.

## EN Index

<b>A</b>	Aligning the Print Head .....	44	<b>V</b>	Viewer .....	10
<b>B</b>	Bidirectional (print speed) .....	32	<b>Z</b>	Zoom (copying) .....	23
	Borderless/With Border.....	23.32.37		Zoom (cropping) .....	9.27
	Buttons, Control Panel.....	8.10			
<b>C</b>	Change Ink Cartridge.....	49			
	Color restoration.....	34			
	Control Panel .....	8.10			
	Copying, photos or documents .....	20			
	Copying, restore faded photo.....	34			
	Crop photo .....	9.27			
<b>D</b>	Date stamp .....	32			
	Density (copy setting).....	23			
	Digital Camera, printing from.....	46			
<b>E</b>	Error messages .....	52			
	Expansion.....	37			
	Expansion (borderless printing).....	23.32			
<b>I</b>	Index Sheet.....	28			
	ink cartridge, replacing .....	54			
	Ink Cartridge Status.....	40			
<b>J</b>	Jams, paper.....	57			
<b>L</b>	Language (change display) .....	49			
	Layout.....	23.32.37			
<b>M</b>	Maintenance .....	39			
	Memory Card.....	17			
<b>P</b>	Panel .....	8.10			
	Paper, jams.....	57			
	Paper, loading.....	15			
	Paper Size .....	23.32.37			
	Paper Type .....	14.23.32.37			
	PictBridge Setup .....	46.49			
	Printing Photos .....	26.28			
<b>Q</b>	Quality .....	23.32.37			
<b>R</b>	Restore Default Settings .....	49			
<b>S</b>	Supported Paper .....	14			
<b>T</b>	Troubleshooting .....	51			

## ID Indeks

<b>B</b>	Bahasa (ubah tampilan) .....	49	<b>Z</b>	Zoom (memotong) .....	9.27
<b>C</b>	cartridge tinta, mengganti .....	54		Zoom (menyalin) .....	23
<b>D</b>	Dua arah (kecepatan cetak) .....	32			
<b>E</b>	Ekspansi .....	37			
	Ekspansi (cetak tanpa bingkai).....	23.32			
<b>J</b>	Jenis Kertas.....	14.23.32.37			
<b>K</b>	Kamera Digital, mencetak dari .....	46			
	Kartu Memori.....	17			
	Kertas, memuatkan .....	15			
	Kertas, tersangkut.....	57			
	Kertas yang Didukung.....	14			
	Ketebalan (pengaturan salinan).....	23			
	Kualitas.....	23.32.37			
<b>L</b>	Lembar Indeks .....	28			
<b>M</b>	Memulihkan Pengaturan Default .....	49			
	Mencetak Foto.....	26.28			
	Mengganti Cartridge Tinta .....	49			
	Menyalin, foto atau dokumen .....	20			
	Menyalin, memulihkan foto yang buram.....	34			
	Meratakan Print Head.....	44			
<b>P</b>	Panel .....	8.10			
	Panel Kontrol.....	8.10			
	Pemecahan Masalah .....	51			
	Pemeliharaan.....	39			
	Pemulihan warna .....	34			
	Penataan.....	23.32.37			
	Pesan kesalahan .....	52			
	PictBridge Setup .....	46.49			
	Potong foto .....	9.27			
<b>S</b>	Status Cartridge Tinta .....	40			
<b>T</b>	Tanda tanggal.....	32			
	Tanpa bingkai/Dengan Bingkai.....	23.32.37			
	Tersangkut, kertas.....	57			
	TomboL, Panel Kontrol .....	8.10			
<b>U</b>	Ukuran Kertas.....	23.32.37			
<b>V</b>	Viewer.....	10			

## Copyright Notice

### Peringatan Hak Cipta

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this product. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON® is a registered trademark and EPSON STYLUS™ and Exceed Your Vision are trademarks of Seiko Epson Corporation.

PRINT Image Matching™ and the PRINT Image Matching logo are trademarks of Seiko Epson Corporation. Copyright © 2001 Seiko Epson Corporation. All rights reserved.

SDHC™ is a trademark.

Memory Stick, Memory Stick Duo, Memory Stick PRO, Memory Stick PRO Duo, MagicGate Memory Stick, and MagicGate Memory Stick Duo are trademarks of Sony Corporation.

 
xD-Picture Card™ is a trademark of Fuji Photo Film Co., Ltd.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.






MEMORY STICK PRO™






Available ink cartridge sizes vary by area.

Ketersediaan ukuran cartridge tinta tergantung pada wilayahnya.

	BK	C	M	Y
SX400 Series	 T0891	T0892	T0893	T0894
	 T0711	T0712	T0713	T0714
	 T0711H	-	-	-
TX400 Series	73N (T0731N)/ 73HN (T0731HN)	73N (T0732N)	73N (T0733N)	73N (T0734N)
<b>EN</b>	Black	Cyan	Magenta	Yellow
<b>ID</b>	Hitam	Sian	Magenta	Kuning

( ): The ink cartridge numbers between the parenthesis may be displayed depending on the area.

( ): Nomor cartridge tinta di antara tanda kurung tersebut dapat ditampilkan tergantung pada wilayahnya.

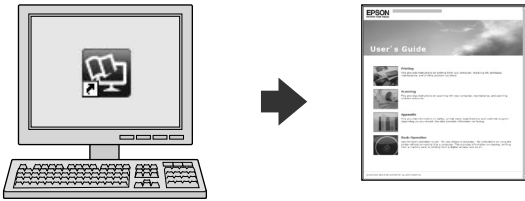

The online User's Guide provides instructions for printing and scanning from your computer and information on the software. To read this guide, double-click the icon on your desktop after printer installation.

Panduan Pengguna online menyediakan instruksi untuk pencetakan dan pemindaian dari komputer Anda dan informasi mengenai perangkat lunak. Untuk membaca panduan ini, klik ganda ikon pada desktop Anda setelah instalasi printer selesai.

Copyright © 2008 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX



\*411550400\*