
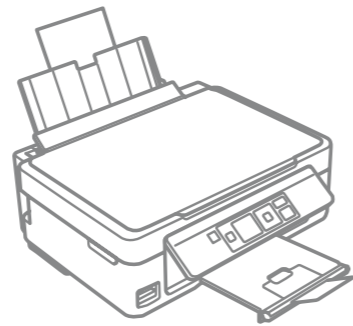


# XP-300/XP-400

**EPSON**  
EXCEED YOUR VISION

## Start Here

 Cautions must be followed carefully to avoid bodily injury.




© 2012 Seiko Epson Corporation. All rights reserved.  
Printed in XXXXXX





### Unpacking


# 1

Contents may vary by location.

 Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

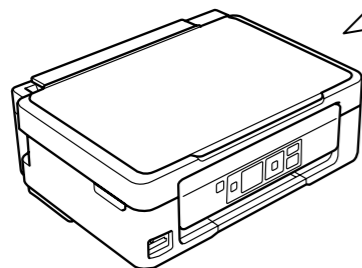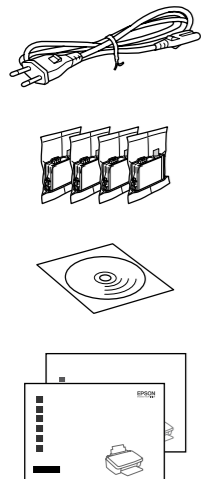


Remove all protective materials.

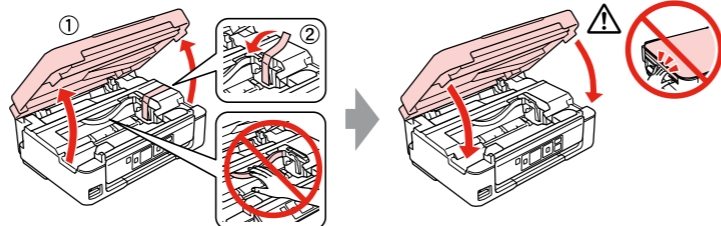

### Turning On


# 2

### 1

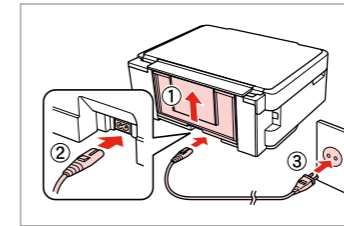


Connect and plug in.

### 2

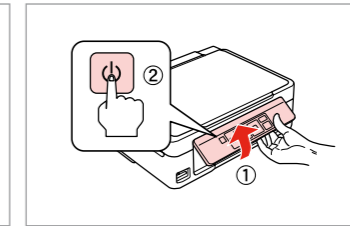

Turn on.


### 3

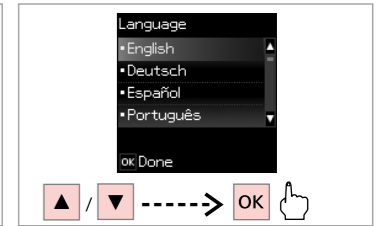


Select a language.


### Installing the Ink Cartridges

# 3

 For the initial setup, make sure you use the ink cartridges that came with this printer. These cartridges cannot be saved for later use. The initial ink cartridges will be partly used to charge the print head. These cartridges may print fewer pages compared to subsequent ink cartridges.

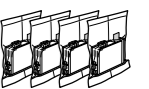


### 1

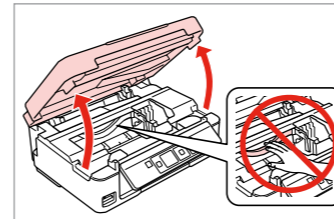


Open.

### 2

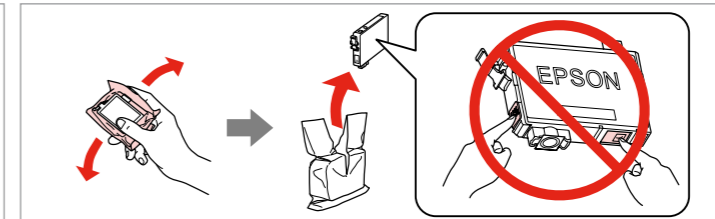


Shake all new cartridges and then unpack.

### 3

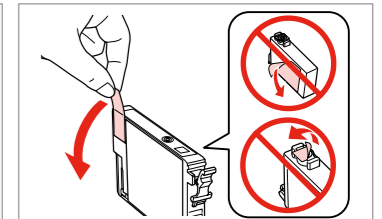


Remove only the yellow tape.

### 4

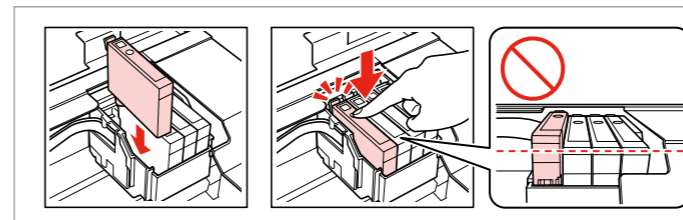


Insert all four cartridges. Press each one until it clicks.

### 5

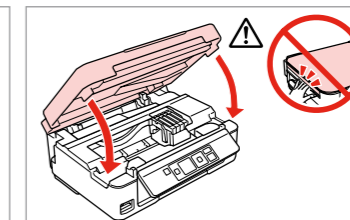


Close.

### 6

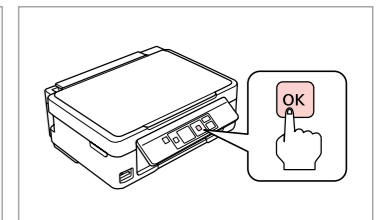


Press.

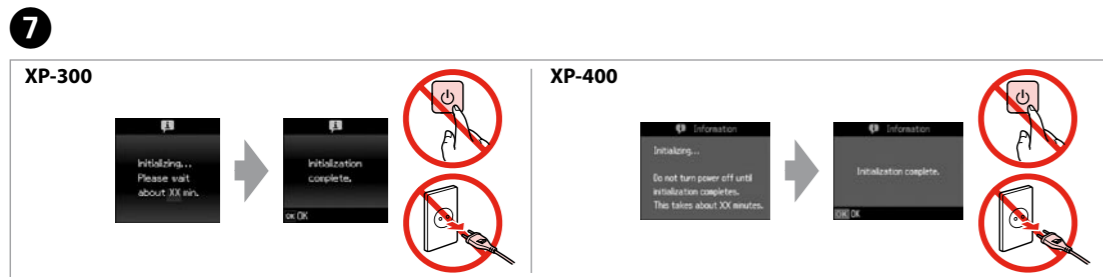


Wait.

## Connecting to the Computer



# 4

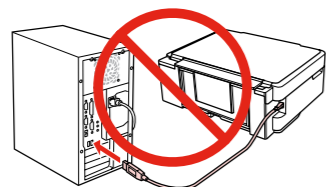


Do not connect the USB cable until you are instructed to do so.

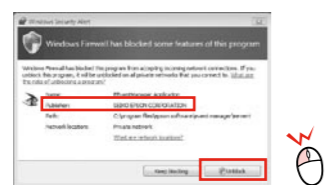

If the Firewall alert appears, allow access for Epson applications.

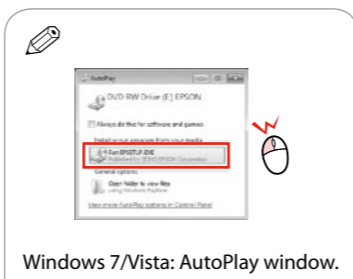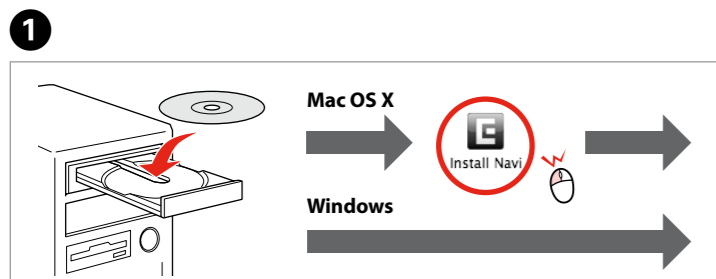


Only the software with a selected check box is installed. **Epson Online Guides** contain important information such as troubleshooting and error indications. Install them if necessary.

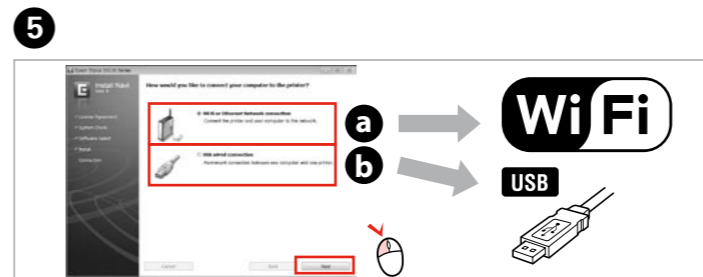

Select **a** or **b**.


To connect via Wi-Fi, make sure that Wi-Fi is enabled on your computer. Follow the on-screen instructions. If the network connection failed, refer to the online *Network Guide*.

**i** Your printer supports the Epson Connect service. This service allows you to print from anywhere to your Epson printer.

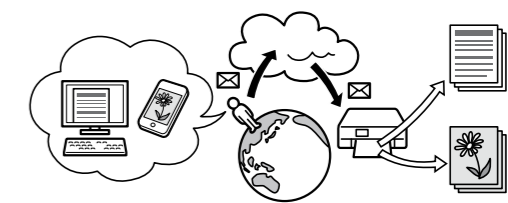


➔ <https://www.epsonconnect.com/>


## Getting More Information

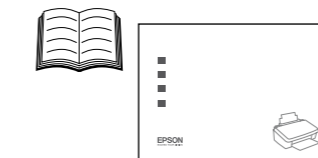

See the booklet for the most basic information.

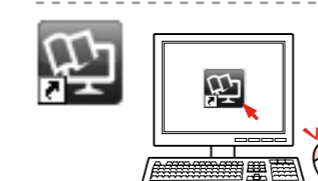

Three online manuals are installed from the CD.

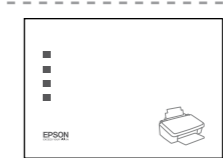

Basic Operation Guide (PDF file)



User's Guide (HTML file)



Network Guide (HTML file)

**? No online manuals? ➔ Insert the CD and select **Epson Online Guides** in the installer screen.**