

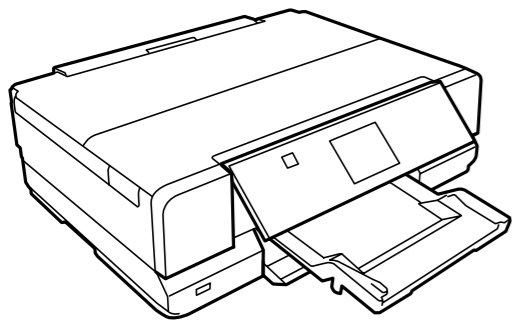
XP-950

EPSON
EXCEED YOUR VISION

Start Here



© 2013 Seiko Epson Corporation.
All rights reserved.
Printed in XXXXXX



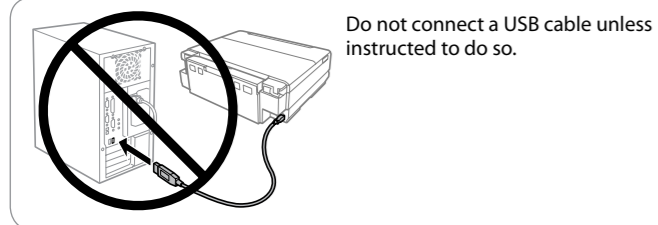
Caution; must be followed carefully to avoid bodily injury.

1



Contents may vary by location.

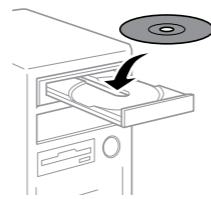
Do not open the ink cartridge package until you are ready to install it in the product. The cartridge is vacuum packed to maintain its reliability.



Do not connect a USB cable unless instructed to do so.

2

Windows



If the Firewall alert appears, allow access for Epson applications.

No CD/DVD drive / Mac OS X

<http://support.epson.net/setupnavi/>

Visit the website to start the setup process, install software, and configure network settings.

iOS / Android



Visit the website to install Epson iPrint application, start the setup process, and configure network settings.

Epson Connect



<https://www.epsonconnect.com/>

Using your mobile device, you can print from any location worldwide to your Epson Connect compatible product. Visit the website for more information.

Questions?

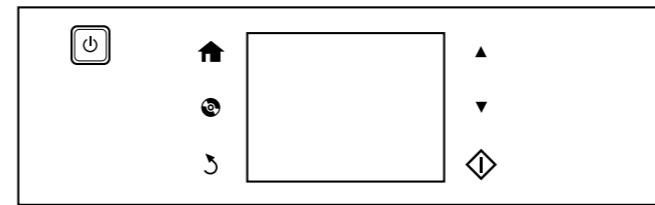


You can open the *User's Guide* (PDF) and *Network Guide* (PDF) from the shortcut icon, or download the latest versions from the following website.

<http://support.epson.net/>

Basic Operations

Guide to Control Panel



- Turns the product on or off.
- Displays the Home menu.
- Displays the CD/DVD label menu. The product prepares CD/DVD label printing.
- Scrolls the screen. You can also scroll the screen by flicking it.
- Starts the operation you selected.
- Cancels/returns to the previous menu.

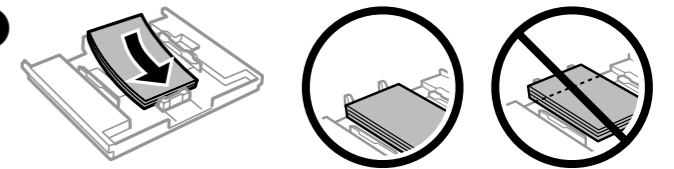
Loading Paper

- Raise the panel.
- Open the front cover and pull out the paper cassette 1 (upper one).
- Slide the edge guides to the sides of the paper cassette.
- Slide the edge guide to adjust to the paper size you will use.

4x6"
10x15cm
5x7"
13x18cm
16:9

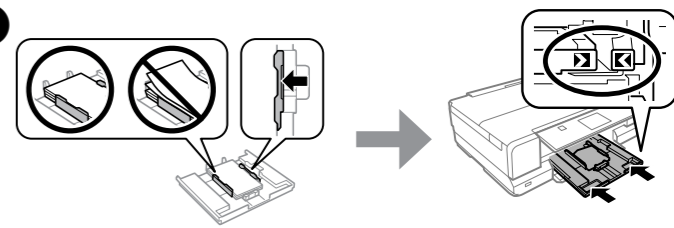
Slide the edge guide to adjust to the paper size you will use.

5



Load paper toward the edge guide with printable side face-down, and check that the paper is not sticking out from the end of the cassette.

6



Slide the edge guides to the edges of the paper. Keep the cassette flat and insert it back into the product carefully and slowly.

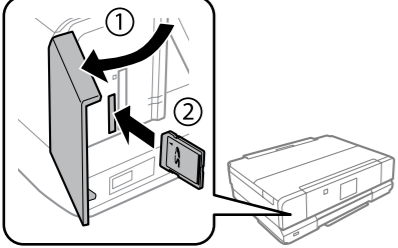
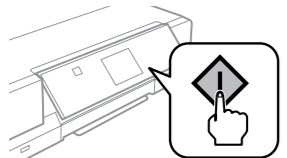

The output tray is automatically ejected. When you finished printing, close the tray manually.

Into the rear paper feed slot

- Send your print job to the product (from your computer, or by using the control panel).
- Open the rear paper feed slot cover.
- Slide out the paper support, and then extend and tilt it backwards.
- Slide the edge guides outward.
- Insert a single sheet of paper (up to A3 size) in the center of the rear paper feed slot with the printable side face-up until you hear a beep. Slide the edge guides to the edges of the paper, and then press .

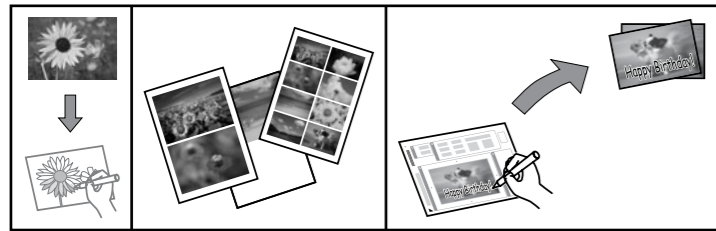


Printing Photos


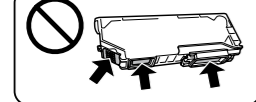
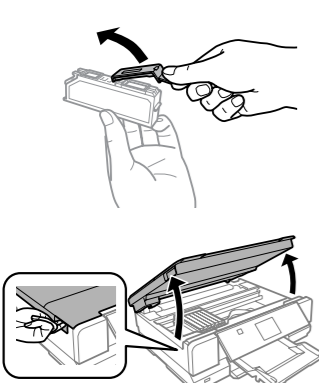
-  Insert a memory card and enter the **Print Photos** mode from the Home menu.
- Select a photo and press + or - to set the number of copies.
- Press **Settings**, and then make the print settings. Scroll down if necessary.
-  Press  to start printing.

More Functions

More Functions provides you with many special menus that make printing easy and fun! For more details, select More Functions, select each menu, and then follow the instructions on the LCD screen.

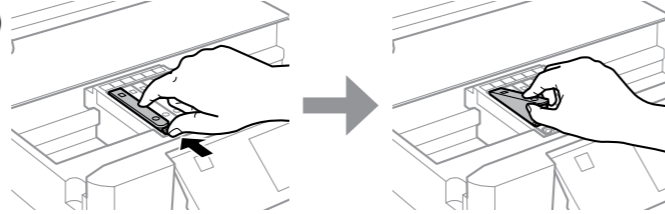
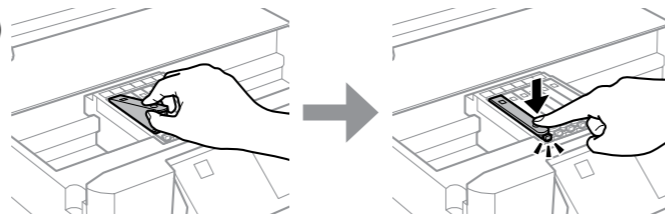



Replacing Ink Cartridges

-  Prepare new ink cartridge(s). Remove the ink cartridge from its package.
-  Remove the cap from the new cartridge.
-  Open the scanner unit. The ink cartridge holder moves.

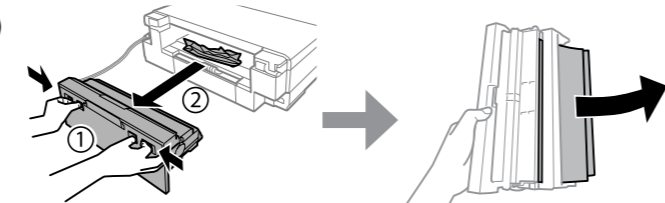
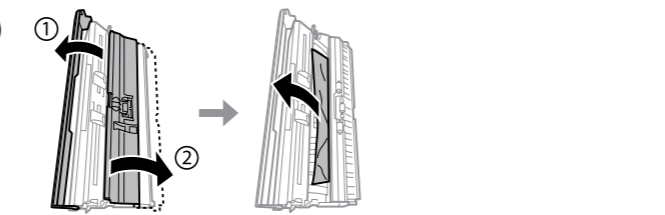
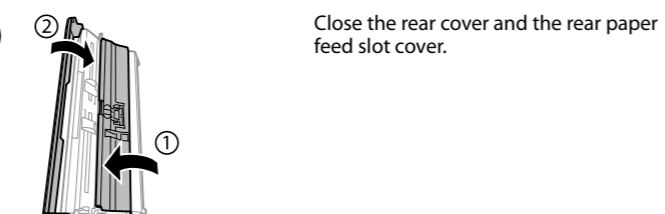


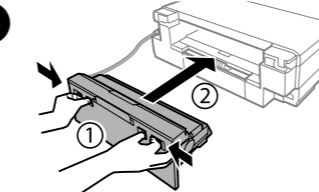
If the ink cartridge holder does not move to the ink cartridge replacement position, close the scanner unit and select **Home** > **Setup** > **Maintenance** > **Ink Cartridge(s) Replacement**.

-  Push the tab to unlock the ink cartridge holder and then remove the cartridge diagonally.
-  Insert the ink cartridge diagonally into the cartridge holder and gently push it down until it clicks into place.
-  Close the scanner unit and follow the on-screen instruction.

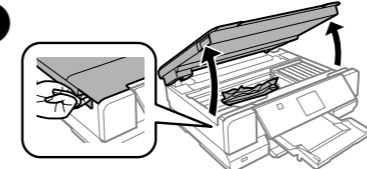

Clearing the paper jam

From the rear cover

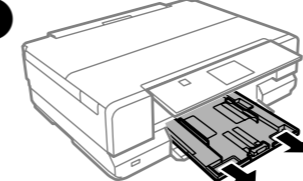
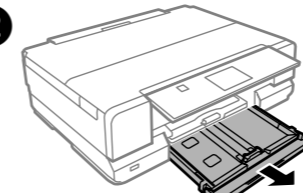
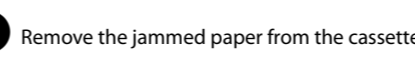
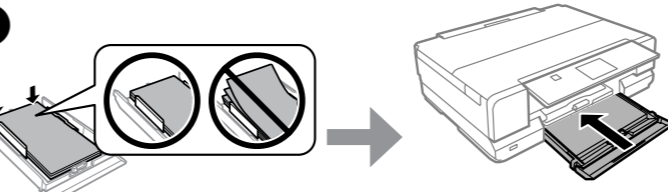
-  Pull out the rear cover and carefully remove the jammed paper.
-  Open the rear paper feed slot cover and the rear cover, and then carefully remove the jammed paper.
-  Close the rear cover and the rear paper feed slot cover.

-  Reattach the rear cover.

From inside the product

-  Open the scanner unit and remove all of the paper inside, including any torn pieces.
-  Close the scanner unit.

 
From the paper cassette

-  Pull out the paper cassette1.
-  Pull out the paper cassette2.
-  Remove the jammed paper from the cassette.
-  Align the edges of the paper. Keep the cassette flat and insert it back into the product carefully and slowly.

Align the edges of the paper. Keep the cassette flat and insert it back into the product carefully and slowly.

Print Quality Help

Print a nozzle check pattern. Select **Setup** > **Maintenance** > **Nozzle Check**. If the pattern looks like "b", perform Print Head Cleaning.



Safety Instructions



Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.



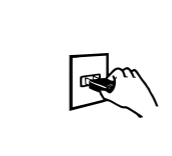
Be sure your AC power cord meets the relevant local safety standard.



Except as specifically explained in your documentation, do not attempt to service the printer yourself.



Do not let the power cord become damaged or frayed.



Place the printer near a wall outlet where the power cord can be easily unplugged.



Keep ink cartridges out of the reach of children.



Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity.



Take care not to spill liquid on the product and not to handle the product with wet hands.



Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers.



If the LCD screen is damaged, contact your dealer. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.



Be careful when you handle used ink cartridges, as there may be some ink around the ink supply port. If ink gets on your skin, wash the area thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If discomfort or vision problems continue after a thorough flushing, see a doctor immediately. If ink gets into your mouth, spit it out immediately and see a doctor right away.



Ink Cartridge Code

BK	C	M	Y	LC	LM
Black	Cyan	Magenta	Yellow	Light Cyan	Light Magenta
277, 277XL					

Not all cartridges are available in all regions.

Windows® is a registered trademark of the Microsoft Corporation.

Mac OS is a trademark of Apple Inc., registered in the U.S. and other countries.

Android™ is a registered trademark of Google Inc.

The contents of this manual and the specifications of this product are subject to change without notice.