EPSON STYLUS™ PHOTO R1900

Start Here

: Warnings must be followed carefully to avoid bodily injury.

1. Unpacking

Note:

- ❏ Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.
- ❏ Store the CD/DVD tray flat.

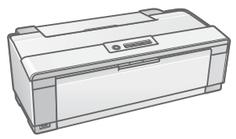

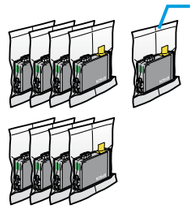

One Gloss Optimizer cartridge is for later replacement.
Do not open the package until you install the cartridge.

9 Ink Cartridges



Roll Paper Holder



Rear Sheet Guide



CD/DVD Tray

8-cm CD/DVD Adapter

Power Cord

CD-ROM

Start Here

2. Removing Protective Materials

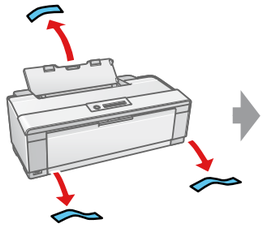

Remove all tape

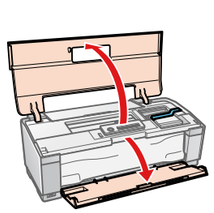

Open

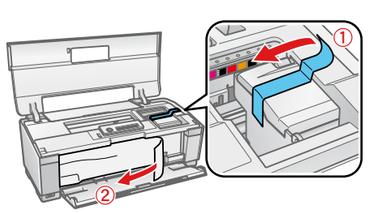

Remove

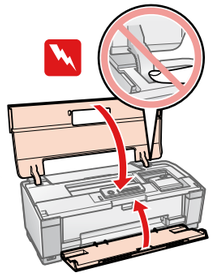

Close

3. Turning On

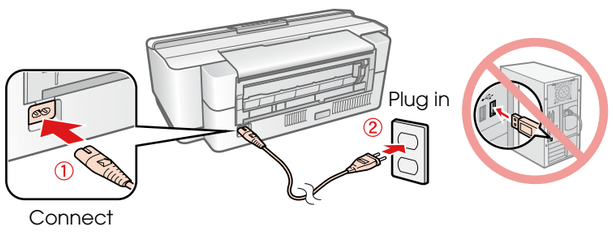

Connect

Plug in

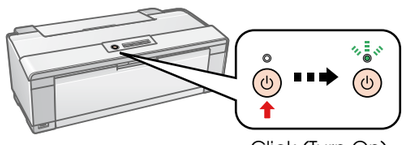

Click (Turn On)

4. Preparing the Ink Cartridges

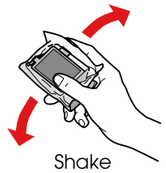

Shake



Unpack

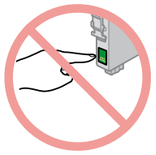

Only remove the yellow tape

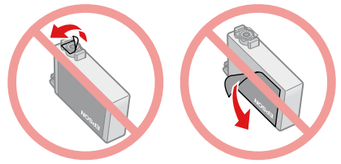

Note:
When shaking ink cartridges, you may hear a sound from inside.

5. Installing the Ink Cartridges

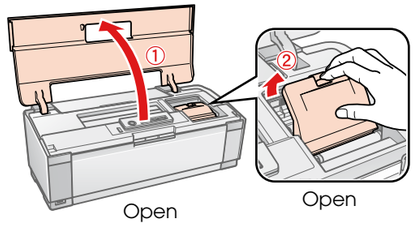

Open

Open

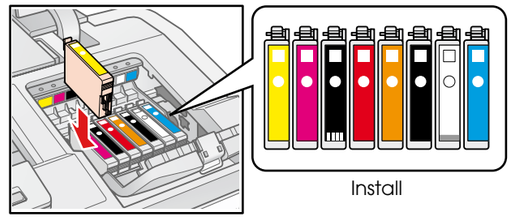

Install

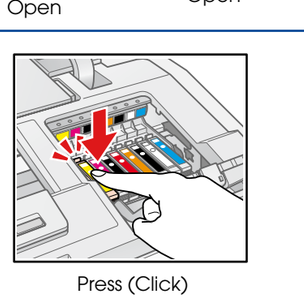

Press (Click)

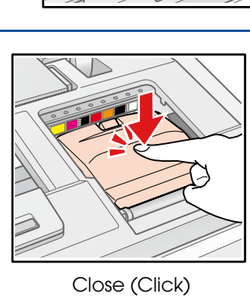

Close (Click)

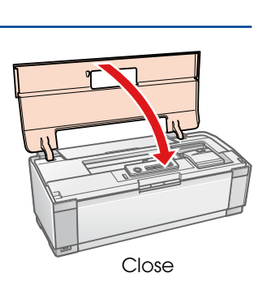

Close

6. Ink Charging

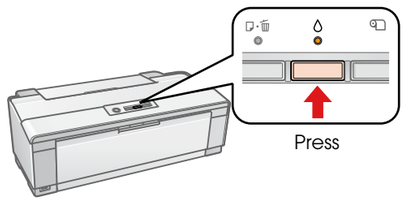

Press

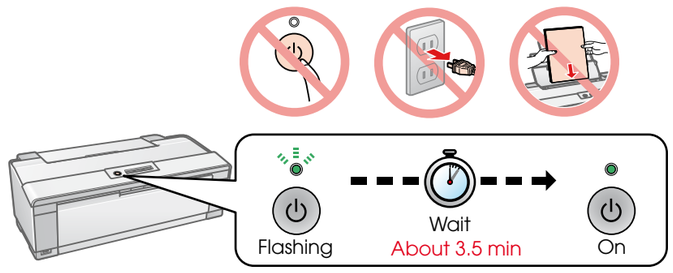

Flashing

Wait
About 3.5 min

On

Note:
The ink cartridges first installed in your printer will be partly used to charge the print head. These cartridges print fewer pages compared to subsequent ink cartridges.

411087200

Copyright © 2007 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX XX.XX-XX XXX

ENERGY STAR

Turn over

7. Installing the Software

Do not connect the USB cable until you are instructed to do so.

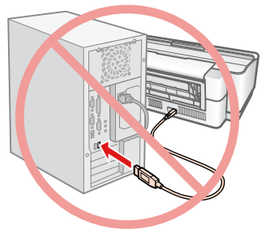

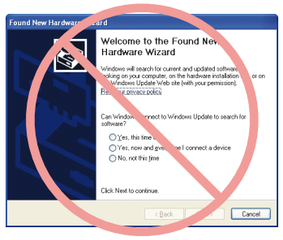

If this screen appears, click **Cancel**.

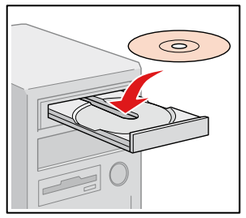

Insert

For Windows

For Mac OS X

Double Click

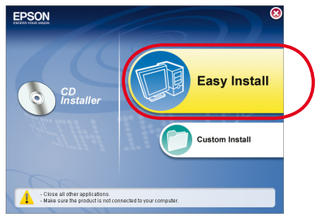

Click

❏ For Windows. No installation screen? ➡ Double-click the CD-ROM icon.

Follow the instructions.

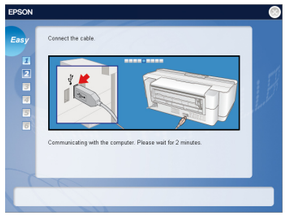

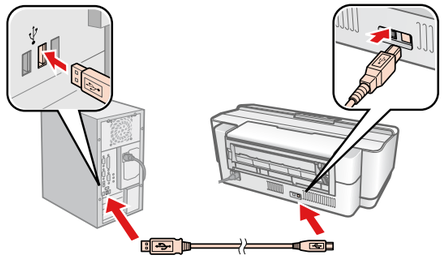

When this screen appears, connect to your PC.

Follow the instructions.

Installation complete.

8. Loading Paper

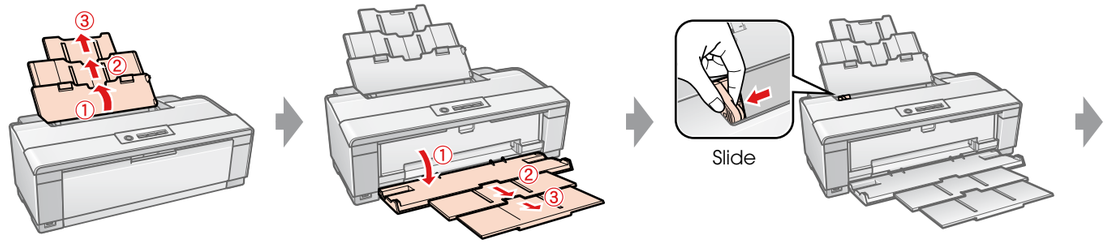

Open and pull out

Open and pull out

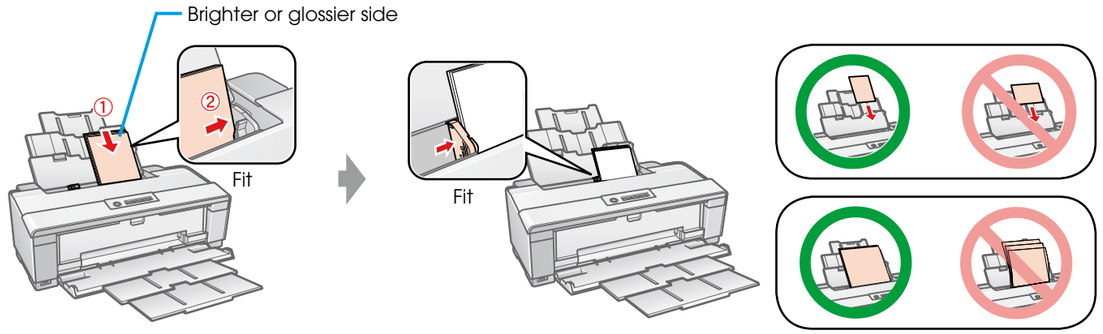
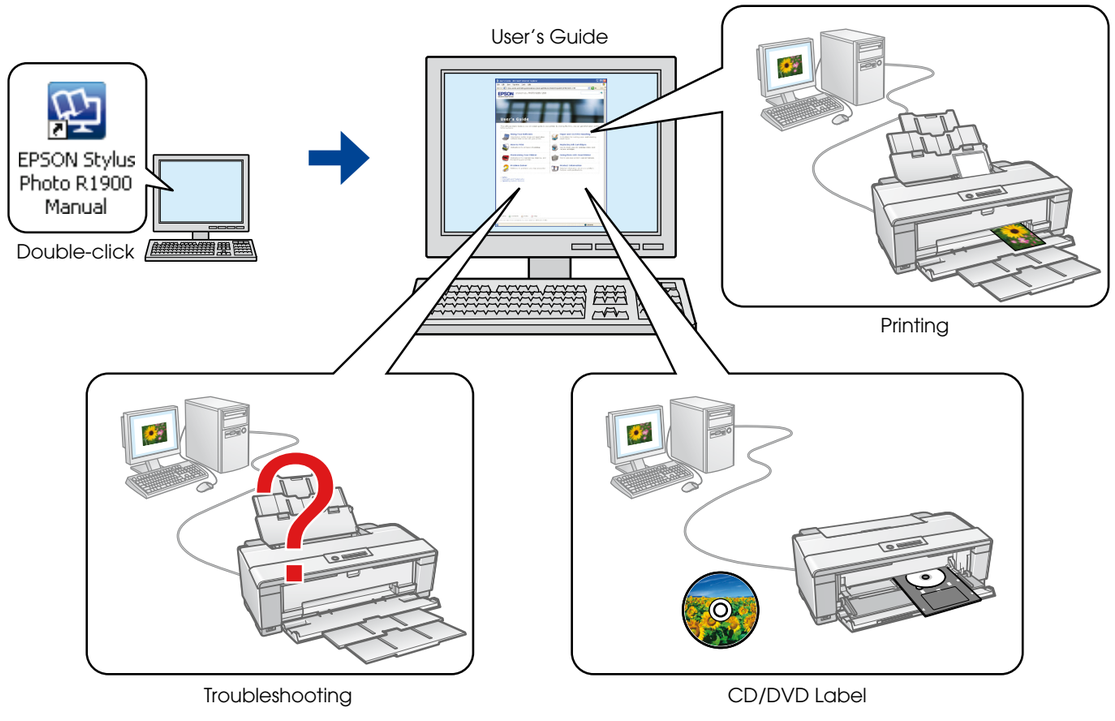
9. Getting More Information