EPSON STYLUS™ CX3700 Series

Daily Use Guide

Copy Functions

Paper Size

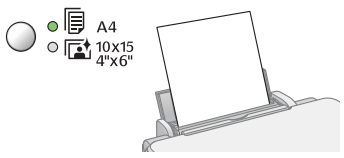

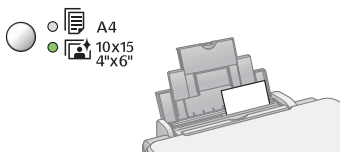

B&W Copy

Color Copy

Fit to Page

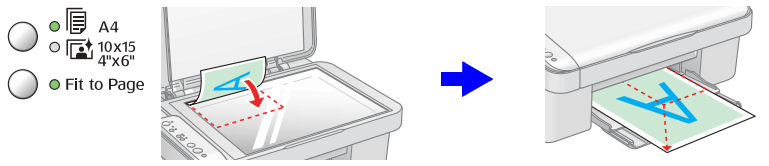

Fit to Page

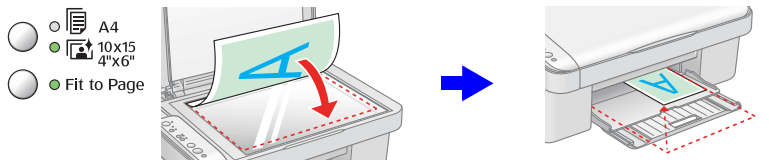

Paper Size

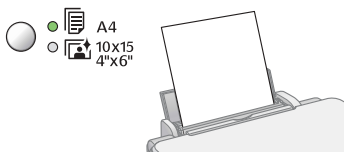

Draft B&W Copy

Hold ⏻ and press ◇

Draft Color Copy

Hold ⏻ and press ◇

Cancel Copy

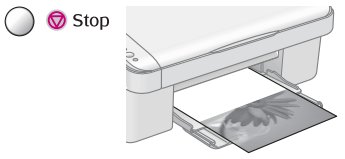

Loading Paper

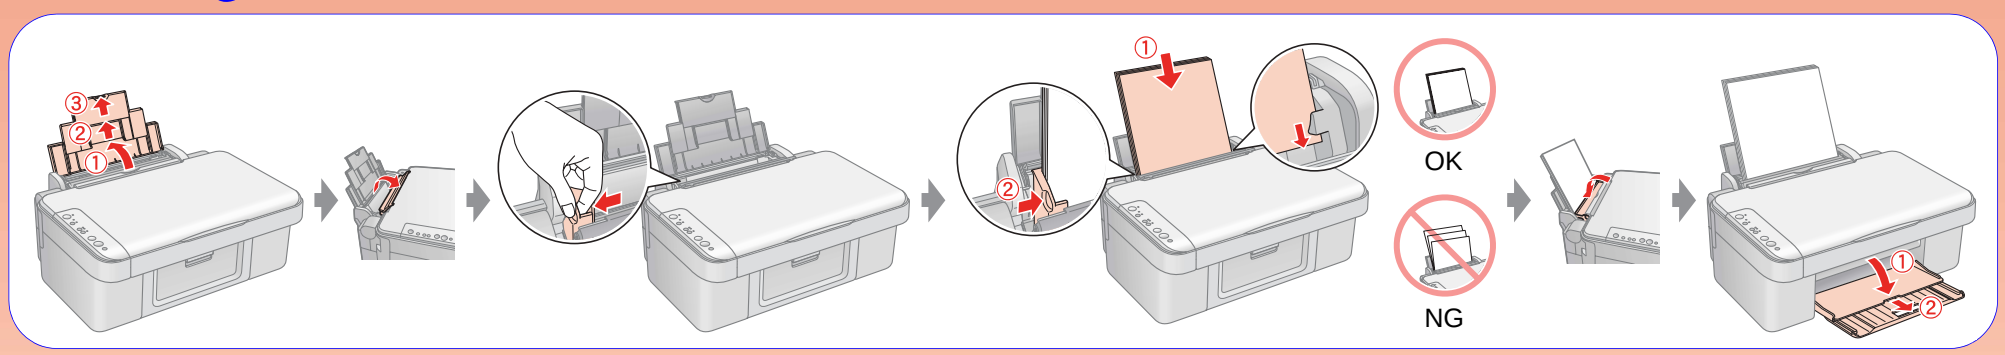

Placing Original

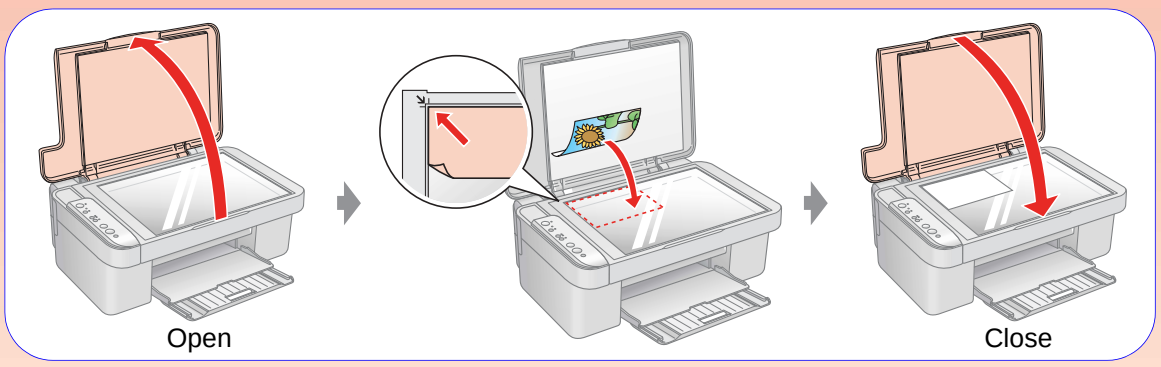

Selecting Paper

Pape Type	Paper Size	Loading Capacity (sheets)
Plain Paper	A4	100
EPSON Bright White Ink Jet Paper	A4	100
EPSON Premium Glossy Photo Paper	10 × 15 cm (4 × 6 in.)	20
EPSON Premium Semigloss Photo Paper		20

Maintenance

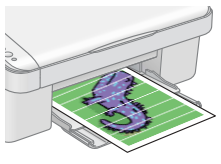

Banding

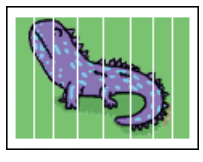

Faint

1. Nozzle Check

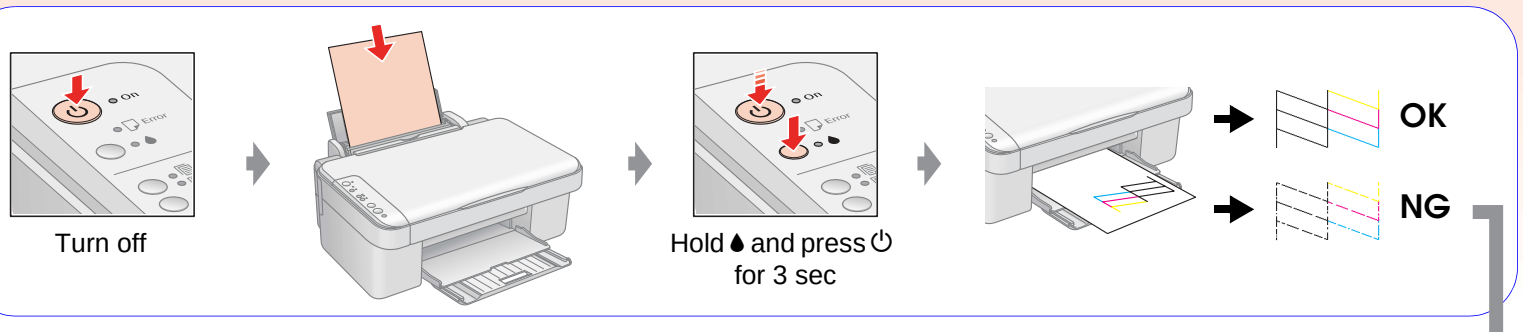

2. Print Head Cleaning

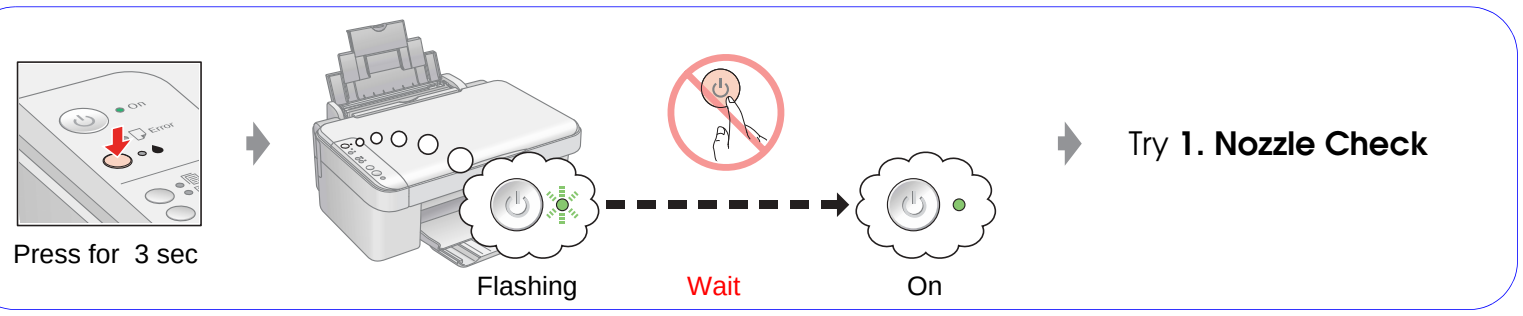

410135400

Copyright© 2005 Seiko Epson Corporation. All rights reserved.
Printed in XXXXXX XX.XX-XX XXX

Replacing Ink Cartridges

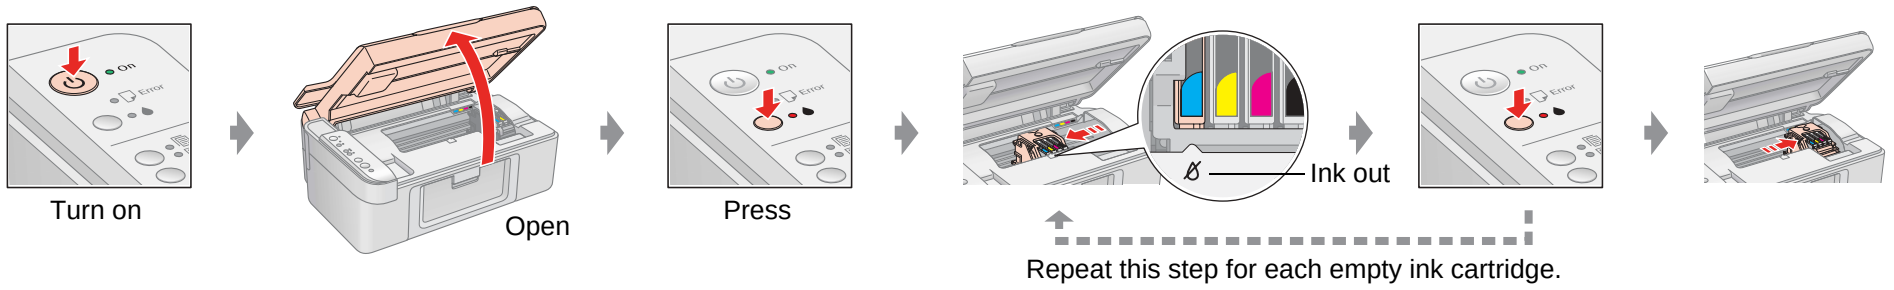

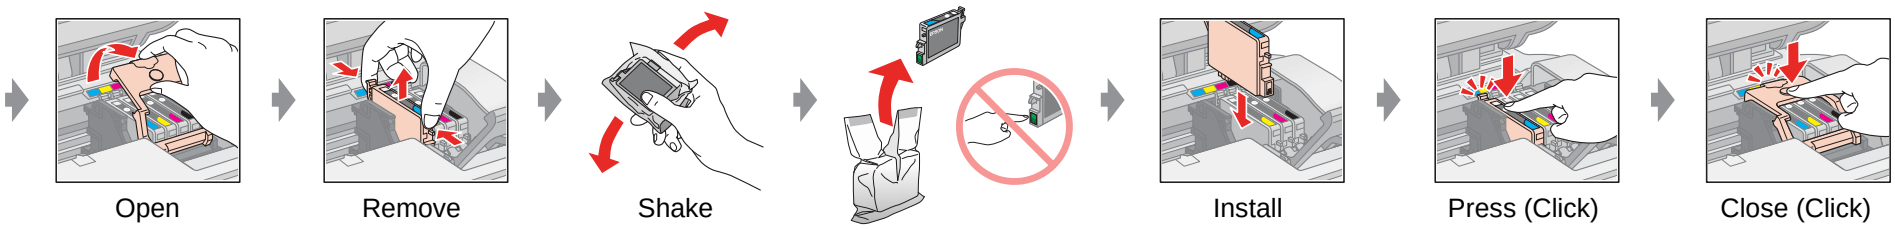

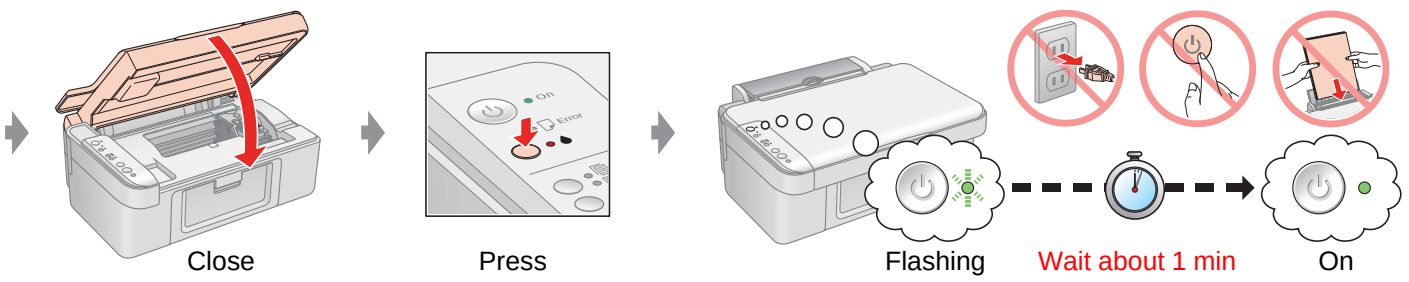

EPSON Ink Cartridges

Color	Part Number
Black	T0621/T0631
Cyan	T0632
Magenta	T0633
Yellow	T0634

Troubleshooting

Error Indicators

= Flashing

Lights	Cause	Solution
Error	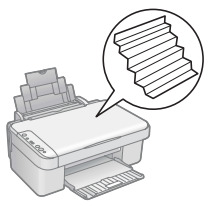	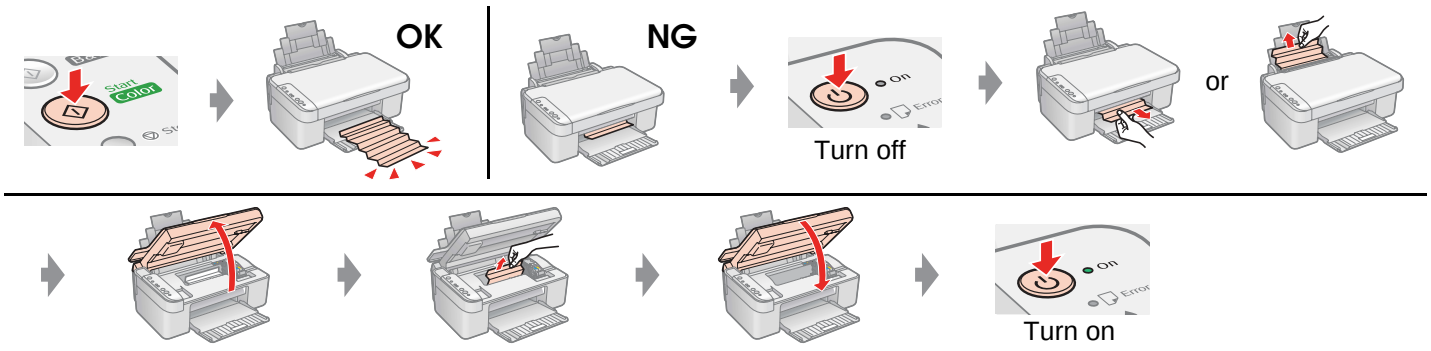
Error		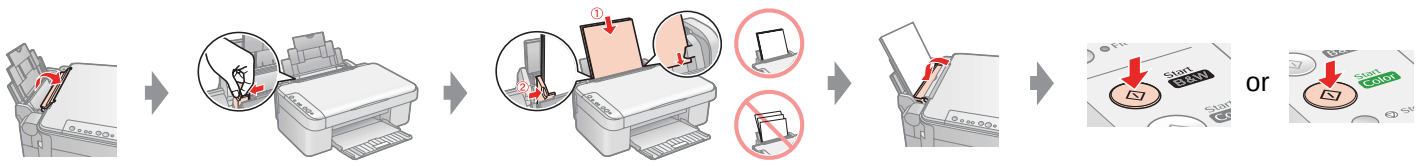
		➡ See **Replacing Ink Cartridges** If the light is still on or flashing after you replace the ink, try the procedure on the right again. 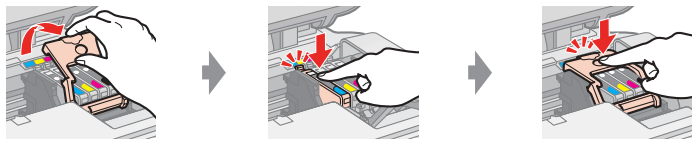
	 	
All lights flashing		Contact your dealer.
(Other lights off)	Sleep mode	Press ◇ Start Color button to wake it.
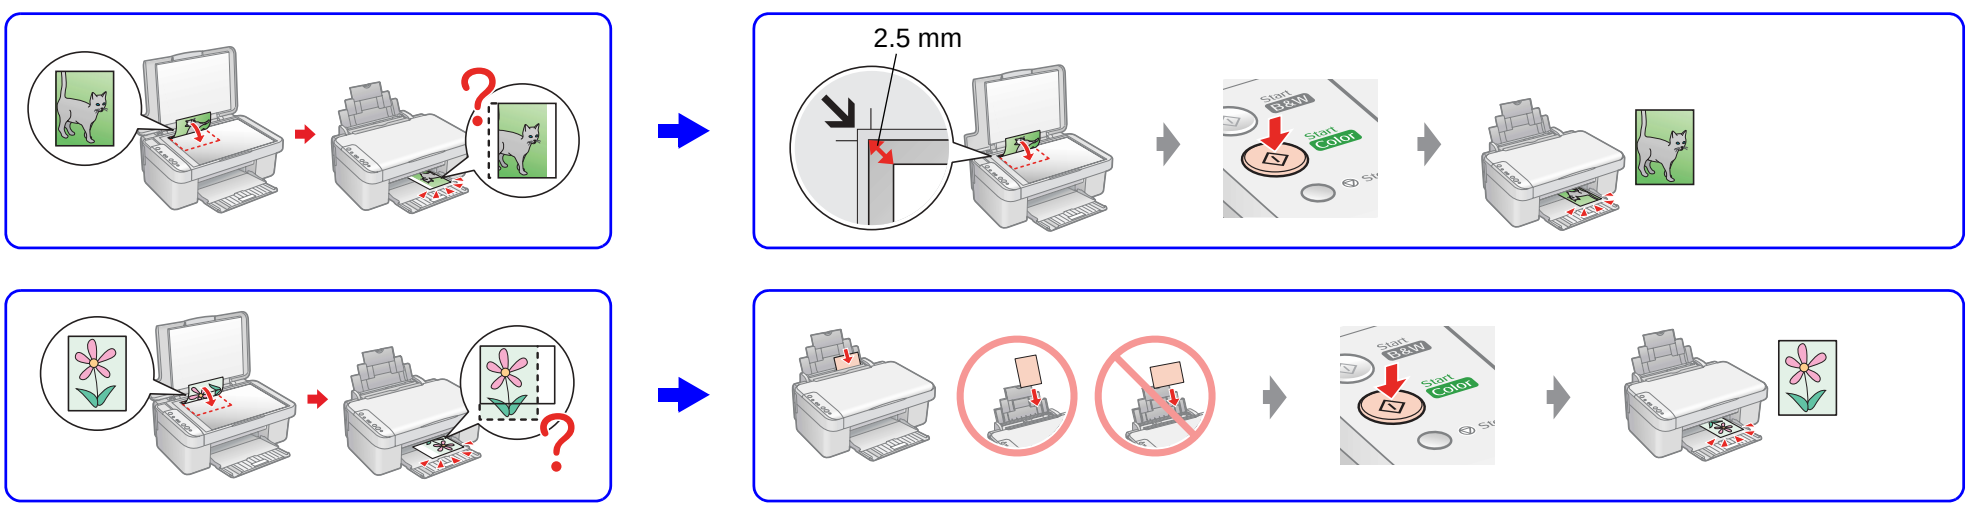
Copying Problems